

# GIANT-VAC MFG. INCORPORATED

## OPTIONAL ACCESSORIES

### **33179 - PNEUMATIC FRONT CASTER ASSEMBLY**

For smoother turf operation

CE

## **OPERATOR OWNER'S MANUAL**

Models 8-B-SQ-IC

90-H

11-B-SQ

### **SPECIFICATIONS**

	<u>8-B-SQ-IC</u>	<u>90-H</u>	<u>11-B-S-Q</u>
ENGINE: H.P.	8.0	9.0	11.0
ENGINE: TYPE	Briggs & Stratton I/C	Honda	Briggs&Stratton I/C
ENGINE: FUEL CAP.	1.5 US gals.	1.59 US gals.	1.5 US gals
ENGINE: OIL CAP.	1.375 US qt.	1.16 US qt.	1.375 US qts.
ENGINE: WEIGHT	50 lbs.	55.1 lbs.	55.3 lbs.
WEIGHT: SHIPPING	162 lbs.	182 lbs.	168 lbs.
WEIGHT: UNIT	147 lbs.	168 lbs.	153 lbs.
UNIT SIZE: OVERALL LENGTH 46" - WIDTH 27" - HEIGHT 40"			

## IN THE INTEREST OF SAFETY



**BEFORE STARTING ENGINE, READ AND UNDERSTAND THE "ENTIRE OPERATOR'S MANUAL & ENGINE MANUAL."**



**THIS SYMBOL MEANS WARNING OR CAUTION. DEATH, PERSONAL INJURY AND/OR PROPERTY DAMAGE MAY OCCUR UNLESS INSTRUCTIONS ARE FOLLOWED CAREFULLY.**

### WARNING: DO NOT

1. **DO NOT** run engine in an enclosed area. Exhaust gases contain carbon monoxide, an odorless and deadly poison.

2. **DO NOT** place hands or feet near moving or rotating parts.

3. **DO NOT** store, spill or use gasoline near an open flame, or devices such as a stove, furnace, or water heater which has a pilot light or devices which can create a spark

4. **DO NOT** refuel indoors where area is not well ventilated. Outdoor refueling is recommended.

5. **DO NOT** fill fuel tank while engine is running. Allow engine to cool for 2 minutes before refueling. Store fuel in approved safety containers.

6. **DO NOT** remove fuel tank cap while engine is running.

7. **DO NOT** operate engine when smell of gasoline is present or other explosive conditions exist.

8. **DO NOT** operate engine if gasoline is spilled. Move machine away from the spill and avoid creating any ignition until the gasoline has evaporated.

9. **DO NOT** transport unit with fuel in tank.

10. **DO NOT** smoke when filling fuel tank.

11. **DO NOT** choke carburetor to stop engine. Whenever possible, gradually reduce engine speed before stopping.

12. **DO NOT** run engine at excessive speeds. This may result in injury &/or damage to unit.

13. **DO NOT** tamper with governor springs, governor links or other parts which may change the governed engine speed.

14. **DO NOT** tamper with the engine speed selected by the engine manufacturer.

15. **DO NOT** check for spark with spark plug or spark plug wire removed. Use an approved tester.

16. **DO NOT** crank engine with spark plug removed. If engine is flooded, place throttle in "FAST" position and crank until engine starts.

17. **DO NOT** strike flywheel with a hard object or metal tool as this may cause flywheel to shatter in operation. Use proper tools to service engine.

18. **DO NOT** operate engine without a muffler. Inspect periodically and replace, if necessary. If engine is equipped with muffler deflector, inspect periodically and replace, if necessary, with correct deflector.

19. **DO NOT** operate engine with an accumulation of grass, leaves, dirt or other combustible material in the muffler area.

20. **DO NOT** use this engine on any forest covered, brush covered, or grass covered unimproved land unless a spark arrester is installed on the muffler. The arrester must be maintained in working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands.

21. **DO NOT** touch hot muffler, cylinder, or fins because contact may cause burns.

22. **DO NOT** run engine without air cleaner or air cleaner cover.

23. **DO NOT** operate during excessive vibration.

24. **DO NOT** leave machine unattended while in operation.

25. **DO NOT** park machine on a steep grade or slope.

### WARNING: DO

1. **ALWAYS DO** remove the wire from the spark plug when servicing the engine or equipment **TO PREVENT ACCIDENTAL STARTING.**

2. **DO** keep cylinder fins and governor parts free of grass and other debris which can affect engine speed.

3. **DO** pull starter cord slowly until resistance is felt. Then pull cord rapidly to avoid kickback and prevent hand or arm injury.

4. **DO** examine muffler periodically to be sure it is functioning effectively. A worn or leaking muffler should be repaired or replaced as necessary.

5. **DO** use fresh gasoline. Stale fuel can gum carburetor and cause leakage.

6. **DO** check fuel lines and fittings frequently for cracks or leaks. Replace if necessary.

7. **Follow** engine manufacturer operating and maintenance instructions.

8. **Inspect** machine and work area before starting unit.

## SOUND

### SOUND TESTS

Sound tests conducted were in accordance with 79/113/EEC and were performed on 00/00/96 under the conditions listed:

GENERAL CONDITION: \_\_\_\_\_  
TEMPERATURE: \_\_\_\_\_  
WIND SPEED: \_\_\_\_\_  
WIND DIRECTION: \_\_\_\_\_  
HUMIDITY: \_\_\_\_\_  
BAROMETRIC PRESSURE: \_\_\_\_\_

OPERATOR \_\_\_\_\_

## VIBRATION

### VIBRATION LEVELS 0.0 g

Vibration levels at the operators handles were measured in the vertical, lateral, and longitudinal directions using calibrated vibration test equipment. Tests were performed on 00/00/96 under the conditions listed:

GENERAL CONDITION: \_\_\_\_\_  
TEMPERATURE: \_\_\_\_\_  
WIND SPEED: \_\_\_\_\_  
WIND DIRECTION: \_\_\_\_\_  
HUMIDITY: \_\_\_\_\_  
BAROMETRIC PRESSURE: \_\_\_\_\_

## GENERAL SAFETY

*For your safety and the safety of others, these directions should be followed:*



Do not operate this machine without first reading owner's manual and engine manufacturer's manual.



Use of Ear Protection is recommended while operating this machine.

Use of Eye and Breathing protection is recommended when using this machine, especially in dry and dusty conditions.

•DO NOT operate during excessive vibration.

- DO NOT operate machine with hose flange, or hose removed
- DO NOT use this machine for vacuuming exclusively sand, dust, fine dirt, rock, glass, string like material, grain, rags, cans, metal, bark or water.
- DO NOT pick up any hot or burning debris, or any toxic or explosive material
- DO NOT operate this machine on slopes greater than 20%.
- DO NOT place hands or feet inside nozzle intake opening near debris outlet or near any moving parts
- DO NOT allow children to operate this equipment.

 
## PACKING CHECKLIST

These items should be included in your carton. If any of these parts are missing, contact your dealer.

Literature Checklist	
Owner's Manual	<input type="checkbox"/> Check Owner's Manual
Literature Loose Parts	<input type="checkbox"/> Check Literature Loose Parts
Accessories	<input type="checkbox"/> Check Accessories
Warranty Card	<input type="checkbox"/> Check Warranty Card
EU Declaration of Conformity & EU Distributor List	<input type="checkbox"/> Check EU Declaration of Conformity & EU Distributor

**INSTRUCTION LABELS**

These labels should be included on your Vacuum. If any of these labels are damaged, replace them before putting this equipment into operation.



Label Do Not Fill While Engine Is Hot




Label Read Owner's Manual



Label Danger Flying



Label Danger Keep Hands and Feet Away

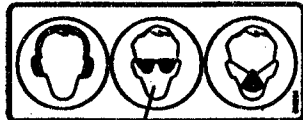

Label Ear Eye Breathing

**ENGINE LABELS**

Briggs & Stratton



INSTRUCTIONS FOR ASSEMBLING AND OPERATING YOUR GIANT-VAC  
MODELS 8-B-SQ-- 8-B-SQ-IC -- 8-K-SQ -- 9-VG-SQ -- 11-B-SQ-IC

As you unpack your Giant-Blo power unit, you will find the following parts:

- 1 - Power unit with motor, impeller and wheels mounted
- 1 - Set of handles in three parts
- 1 - Handle brace
- 1 - Package of hardware
- 1 - Caster wheel

Inspect parts for any damage that may have occurred in shipping. If any are found, save the packing box and **IMMEDIATELY** notify the transport carrier who delivered your machine, as they are responsible for the damage and are the only ones to make any adjustments. Before leaving our plant, all dimensions are held to close tolerances, and thus, you will have little difficulty in assembling your Giant-Blo if you follow these steps.

CALIFORNIA PROPOSITION 65 WARNING

Gasoline and Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

As an owner of off-road gasoline or diesel engine equipment and/or as an employer, you also may have an obligation under the California Occupational Safety and Health Act or under Proposition 65 to warn persons exposed to gas and diesel engine exhaust and /or other Proposition 65 chemicals in and around your workplace. See California Health and Safety Code section 25249.5, Title 22 of the California Code of Regulations at section 1200, *er seq.*, and Title 8 of the California Code of Regulations section 5194.

**HANDLE AND THROTTLE CONNECTIONS:** The handles are made in three parts and have a telescopic fit. The handles and handle brace should be completely assembled and then fastened to the blower as a unit. When assembling the handles, it is important that you **DO NOT TIGHTEN ANY OF THE BOLTS** until the assembly operations are complete. With the bolts loose, there will be enough movement to permit fast and easy assembly. Proceed as follows: Insert the two lower handles into the upper handle until the bolt holes are in line. Fasten the handle brace to the handles with the two 5/16 x 1 3/4" hex bolts, lock washers and nuts. **DO NOT TIGHTEN THESE BOLTS YET.** The handle assembly is now ready to attach to the blower. First, install the handle brace to the stud on the blower housing with a 3/8" lock washer and nut. **NOTE:** The 8-K-SQ does not have the stud and anti-vibration bracket on the housing. The brace is attached by placing a 5/16 x 1" hex bolt and lock washer through the center hole of the brace and into the housing. Next, fasten the lower handles to the base with four 5/16 x 1 3/4" hex bolts, lock washers and nuts. **DO NOT TIGHTEN THESE BOLTS YET.** Now that the handles are assembled to the machine, tighten **all** the bolts. Take the throttle cable and run it along the left side of the handle about 1/3 its length. Secure it with a clip about two inches

below the brace. The throttle lever is secured to the handle by means of two 10-24 x 1 1/4" bolts, lock washers and nuts. Put the second clip just below the curve in the upper handle. Make sure you have left a generous loop between the engine and the bottom clip. **THIS IS IMPORTANT** to prevent the throttle binding. After starting your engine, adjust the length of cable by loosening the screw at the throttle lever for proper engine operation. **NOTE:** 9-VG-SQ does not have a throttle cable, use the levers on the engine .

**FRONT BAFFLE PLATE:** The front baffle plate is attached to the front of the blower with four 5/16 x 5/8" hex bolts and lock washers. It is important that the baffle plate be mounted whenever the machine is running, in order to shield the high speed impeller. Remember that high speed moving parts should be treated with care. **WE HAVE INSTALLED SAFEGUARDS, BE SURE TO USE THEM. NEVER INSERT ANY BODY PART OR OTHER FOREIGN OBJECT IN THE OPENING WHEN THE MACHINE IS RUNNING.**

**FORWARD AIR DEFLECTOR:** The forward air deflector is mounted on the front of the discharge end of the blower, and is operated by a control lever and knob. To operate, push the control lever to the front of the machine, this will put the deflector in an open position, allowing the air to pass through. This is ideal for such things as blowing debris from a wall. **NEVER INSERT ANY BODY PART OR OTHER FOREIGN OBJECT IN THE OPENING WHILE THE MACHINE IS RUNNING.**

**SIDE DISCHARGE AIR DEFLECTOR:** The side discharge air deflector is mounted on the end of the discharge end of the blower. It is easily adjusted by two 5/16 x 5/8" hex bolts which permit you to direct the exhaust at the angle you desire for a specific application. Changing the speed of the engine changes the force of the exhaust. By changing the deflector angle and the engine speed, you can move litter into a neat row at a very rapid rate. **NEVER INSERT ANY BODY PART OR OTHER FOREIGN OBJECT IN THIS OPENING WHILE THE MACHINE IS RUNNING.**

**CASTER WHEEL:** Assemble the caster wheel by placing the back of the left caster bracket on top of the back of the right caster bracket and using a 1/2 x 3 1/2" hex bolt and lock nut. placing the bolt head and the nut on the outside of the brackets. Attach the assembly to the machine by placing the two inside holes over the two far right hand holes on the housing. Attach with two 5/16 x 3/4" hex bolts and lock washers. Using a 5/16" x 5/8" hex bolt and lock washer, attach the left hand hole in the bottom bracket to the housing.

### **SAFETY AND OPERATING INSTRUCTIONS**

**MOTOR INSTRUCTIONS:** You have received a complete engine manual with your machine. Be sure to especially note the instructions on **OILING**. ALL MACHINES ARE SHIPPED WITHOUT OIL OR GASOLINE UNLESS OTHERWISE NOTED. If you have any difficulties with the engine, check the Yellow Pages of your phone book for the engine dealer nearest you, rather than us, as the engines are under their own manufacturer's warranty.

### TRAINING:

1. Regard your Giant-Blo as a piece of power equipment and teach this regard to all who will operate this unit.
2. Never allow children or young teenagers to operate the Giant-Blo.
3. Be sure you know how to stop the engine at a **MOMENT'S NOTICE**.
4. Instruct children to keep away from the area of operation at all times.

### PREPARATION:

1. Before starting operation, clear the entire work area of all debris that could catch on or be thrown by the Giant-Blo.
2. Unless there is very good artificial light, use only during daylight.
3. Fill gasoline driven machines outdoors. Avoid spilling gasoline and DO NOT fill the engine is running or while you are smoking.

### OPERATION:

1. NEVER INSERT ANY BODY PART OR OTHER FOREIGN OBJECT IN ANY OPENING WHILE THE MACHINE IS RUNNING.
2. Do not operate with any guards or component parts removed from unit.
3. Before making any adjustments or repairs, stop engine and remove spark plug wire.
4. While in operation, keep all parts of body away from intake and exhaust sections.
5. When operating machine, keep people and pets a safe distance away.
6. Before starting, be certain to check the engine's OIL AND GASOLINE. (See engine manufacturer's Service Manual.) **NEVER** check the engine while engine is running or while you are smoking. Check ONLY when engine is cold.
7. Before starting the engine, be certain the unit is completely assembled. With your right hand, set the throttle control to the "on" position. When the engine is cold, you might have to initially choke the engine. (The choke lever is next to the carburetor.) Next, with your left hand, pull the recoil starter rope slowly until you feel compression, then pull fast and steady. Do not let the recoil starter rope snap back by itself. This may damage the rope or recoil starter assembly. After the engine starts, move the throttle lever down to approximately halfway.
7. For operator ease and maneuverability, push down on the upper handle while walking so that the machine is balanced on the rear wheels. Adjusting the throttle controls the amount of air discharge velocity.

8. Do not pass or stand on the air discharge side of any leaf blower with the engine running. Stop operation when another person approaches.

MAINTENANCE AND STORAGE:

1. Follow implicitly the engine manufacturer's recommendations for maintenance and storage.
2. Never adjust the Giant-Blo or change attachments until the engine has been turned off and the spark plug wire has been disconnected.
3. If carburetor adjustment is necessary, stand to one side and keep feet and hands in the clear while making adjustments.
4. Keep engine free from accumulations of grass, leaves or excessive grease. An accumulation of these combustible materials may result in a fire.
5. Store gasoline in a safe and approved container in a cool dry place.
6. Keep the Giant-Blo and fuel container in locked storage to prevent children from playing and/or tampering with them.
7. Gasoline powered equipment or fuel containers should not be stored in a basement or any closed area where heating or heat appliances or open pilot lights are present, unless the fuel is completely drained from the power equipment and the fuel containers.



## GIANT-VAC WARRANTY

GIANT-VAC MFG. INCORPORATED, here-in-after called Giant-Vac, warrants each new Giant-Vac to the original retail purchaser of the new Giant-Vac equipment to be free from manufacturing defects in normal service for a period of 90 days, unless it is used for rental purposes, which limits the warranty to 30 days. This warranty does not apply to engines, tires or other parts that are purchased and warranted by their manufacturer. Items such as bags, grass catchers, hoses and blades are not warranted, as these are considered expendable items. This warranty does not include equipment failures due to normal wear.

Any obligation under this warranty is expressly limited to the replacement or repair, at an authorized servicing Giant-Vac dealer, or at a point designated by us, of such parts as appear to us to have been defective. All defective parts have to be returned freight prepaid before credit will be issued.

We shall not be liable for transportation charges in connection with the replacement or repair of defective parts.

This warranty does not apply to a Giant-Vac upon which repairs or alterations have been made by others except with our prior written approval.

We shall not be liable for consequential damages or contingent liabilities for the fitness of any Giant-Vac for any particular purpose.

We make no other express, implied or statutory warranty, nor is anyone authorized to make any in our behalf.

GIANT-VAC MFG. INCORPORATED  
P.O. BOX 195  
SOUTH WINDHAM, CT. 06266  
203-423-7741  
FAX# 203-423-2654

PARTS LIST NO. 5783

<u>REF.</u> <u>NO.</u>	<u>PART</u> <u>NO.</u>	<u>DESCRIPTION</u>	<u>8-B-SQ-IC</u>
1	20196	Intake baffle	1
2	31372	5/16 x 5/8" hex bolt & lock washer	4
3	21555	Impeller and taper-lok hub	1
7	31020	Impeller key	1
8	10137	Engine base and housing	1
9	24500	Side deflector	1
10	31003	5/16" lock washer	2
11	31016	5/16 x 5/8" hex bolt	2
12	31015	1/4 x 1/2" cap screw	1
13	31013	1/4" lock washer	1
14	31014	Bushing	1
15	24501	Forward air deflector	1
17	31103	3/8" knob	1
18	24502	Control lever spring	1
19	33157	Caster bracket - left**	1
20	33159	Caster bracket - right**	1
21	31467	1/2 x 3 1/2" hex bolt**	1
22	33160	Caster wheel seal**	1
23	33156	Caster wheel 6" x 2**	1
24	33158	Axle bushing**	1
25	33161	Caster bearing**	1
26	33160	Caster wheel seal**	1
27	31406	1/2" lock nut**	1
	**33155	Complete caster assembly	1
28	31003	5/16" lock washer	3
29	31400	5/16 x 3/4" hex bolt	2
29-A	31016	5/16 x 5/8" hex bolt	1
30	33001	410 x 350-4 pneumatic tire	2
31	31001	5/8" flat washer	2
32	31000	5/8" snap ring	2
33	31002	5/16 x 1 3/4" hex bolt	6
34	31003	5/16" lock washer	6
35	31004	5/16" nut	6
36	31604	Anti-vibration bracket	1
36-A	31602	5/16 x 1" hex bolt & lock washer	
37	31009	3/8" nut	1
38	31008	3/8" lock washer	1

PARTS LIST 5783

<u>REF.</u> <u>NO.</u>	<u>PART</u> <u>NO.</u>	<u>DESCRIPTION</u>	<u>8-B-SQ-IC</u>
39	23002	Lower handle - left	1
40	23002	Lower handle - right	1
41	23003	Handle brace	1
42	23000	Upper handle	1
42-A	31590	Foam handle grip	1
43	31007	Throttle clips	2
44	31010	10-24 lock washer	2
45	31010	10-24 hex nut	2
47	31010	10-24 x 1 1/4" round head screw	2
48	35001	Throttle cable	1

ITEMS NOT SHOWN

39035	8 H.P. B&S I/C engine	1
33179	caster assembly with 410 X 350-4 pneumatic tire	1

ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

PARTS LIST NO. 5783

<u>REF.</u> <u>NO.</u>	<u>PART</u> <u>NO.</u>	<u>DESCRIPTION</u>	<u>90-H</u>
1	20197	Intake baffle	1
2	31372	5/16 x 5/8" hex bolt & lock washer	4
3	21556	Impeller and teper lok hub w/1" shaft	1
7	31020	Impeller key	1
8	10138	Engine base and housing	1
9	24500	Side deflector	1
10	31003	5/16" lock washer	2
11	31016	5/16 x 5/8" hex bolt	2
12	31015	1/4 x 1/2" cap screw	1
13	31013	1/4" lock washer	1
14	31014	Bushing	1
15	24501	Forward air deflector	1
17	31103	3/8" knob	1
18	24502	Control lever spring	1
19	33157	Caster bracket - left**	1
20	33159	Caster bracket - right**	1
21	31467	1/2 x 3 1/2" hex bolt**	1
22	33160	Caster wheel seal**	1
23	33156	Caster wheel 6" x 2**	1
24	33158	Axle bushing**	1
25	33161	Caster bearing**	1
26	33160	Caster wheel seal**	1
27	31406	1/2" lock nut**	1
	**33155	Complete caster assembly	1
28	31003	5/16" lock washer	3
29	31400	5/16 x 3/4" hex bolt	2
29-A	31016	5/16 x 5/8" hex bolt	1
30	33172	410 x 350-6 pneumatic tire w/5/8" bearing	2
31	31001	5/8" flat washer	2
32	31000	5/8" snap ring	2
33	31002	5/16 x 1 3/4" hex bolt	6
34	31003	5/16" lock washer	6
35	31004	5/16" nut	6
36	31591	Anti-vibration bracket	1
37	31009	3/8" nut	1
38	31008	3/8" lock washer	1

<u>REF. NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>90-H</u>
39	23002	Lower handle - left	1
40	23002	Lower handle - right	1
41	23003	Handle brace	1
42	23000	Upper handle	1
42-A	31590	Foam handle grip	1
43	31007	Throttle clips	2
44	31010	10-24 lock washer	2
45	31010	10-24 hex nut	2
47	31010	10-24 x 1 1/4 round head screw	2
48	35001	Throttle cable	1

ITEMS NOT SHOWN

		9 H.P. Honda engine	1
33179		caster assembly with 410 X 350-4 pneumatic tire	

ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

PARTS LIST NO. 5783

<u>REF.</u> <u>NO.</u>	<u>PART</u> <u>NO.</u>	<u>DESCRIPTION</u>	<u>90-V-SQ</u>	<u>11-B-SQ</u>
1	20197	Intake baffle	1	1
2	31372	5/16 x 5/8" hex bolt & lock washer	4	4
3	21556	Impeller w/1" shaft	1	
3	21557	Impeller w/1 1/8" shaft		1
4	31020	7/16-20 x 2" impeller bolt	1	1
5	31020	7/16 lock washer	1	1
6	31020	7/16 flat washer	1	1
7	31020	Impeller key	1	1
8	10138	Engine base and housing	1	1
9	24500	Side deflector	1	1
10	31003	5/16" lock washer	2	2
11	31016	5/16 x 5/8" hex bolt	2	2
12	31015	1/4 x 1/2" cap screw	1	1
13	31013	1/4" lock washer	1	1
14	31014	Bushing	1	1
15	24501	Forward air deflector	1	1
17	31103	3/8" knob	1	1
18	24502	Control lever spring	1	1
19	33157	Caster bracket - left**	1	1
20	33159	Caster bracket - right**	1	1
21	31467	1/2 x 3 1/2" hex bolt**	1	1
22	33160	Caster wheel seal**	1	1
23	33156	Caster wheel 6" x 2**	1	1
24	33158	Axle bushing**	1	1
25	33161	Caster bearing**	1	1
26	33160	Caster wheel seal**	1	1
27	31406	1/2" lock nut**	1	1
	**33155	Complete caster assembly	1	1
28	31003	5/16" lock washer	3	3
29	31400	5/16 x 3/4" hex bolt	2	2
29-A	31016	5/16 x 5/8" hex bolt	1	1
30	33172	410 x 350-6 pneumatic tire w/5/8" bearing	2	2
31	31001	5/8" flat washer	2	2
32	31000	5/8" snap ring	2	2
33	31002	5/16 x 1 3/4" hex bolt	6	6
34	31003	5/16" lock washer	6	6
35	31004	5/16" nut	6	6
36	31591	Anti-vibration bracket	1	
37	31009	3/8" nut	1	
38	31008	3/8" lock washer	1	

<u>REF.</u> <u>NO.</u>	<u>PART</u> <u>NO.</u>	<u>DESCRIPTION</u>	<u>90-V-SQ</u>	<u>11-B-SQ</u>
39	23002	Lower handle - left	1	1
40	23002	Lower handle - right	1	1
41	23003	Handle brace	1	1
42	23000	Upper handle	1	1
42-A	31590	Foam handle grip	1	1
43	31007	Throttle clips	2	2
44	31010	10-24 lock washer	2	2
45	31010	10-24 hex nut	2	2
47	31010	10-24 x 1 1/4 round head screw	2	2
48	35001	Throttle cable	1	1

ITEMS NOT SHOWN

39049	9 H.P. B&S VG engine	1	
39037	11 H.P. B&S IC engine		1

ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

