



Congratulations on owning a Scag mower! This manual contains the operating instructions and safety information for your Scag mower. Reading this manual can provide you with assistance in maintenance and adjustment procedures to keep your mower performing to maximum efficiency. The specific models that this book covers are listed on the inside cover. Before operating your machine, please read all the information enclosed.



# FAILURE TO FOLLOW SAFE OPERATING PRACTICES MAY RESULT IN SERIOUS INJURY OR DEATH.

- Read this manual completely as well as other manuals that came with your mower.
- DO NOT operate on steep slopes. To check a slope, attempt to back up it (with the cutter deck down). If the machine can back up the slope without the wheels slipping, reduce speed and use extreme caution.
- Under no circumstances should the machine be operated on slopes greater than 15 degrees. ALWAYS FOLLOW OSHA APPROVED OPERATION.
- Stay two cut widths away from slopes, drop offs, ditches and retaining walls.
- DO NOT mow on wet grass. Wet grass reduces traction and steering control.
- Keep all shields in place, especially the grass discharge chute.
- Before performing any maintenance or service, stop the machine and remove the spark plug wire and ignition key.
- If a mechanism becomes clogged, stop the engine before cleaning.
- Keep hands, feet and clothing away from power-driven parts.
- Keep others off the mower (only one person at a time)

#### REMEMBER - YOUR MOWER IS ONLY AS SAFE AS THE OPERATOR!

HAZARD CONTROL AND ACCIDENT PREVENTION ARE DEPENDENT UPON THE AWARENESS, CONCERN, PRUDENCE, AND PROPER TRAINING OF THE PERSONNEL INVOLVED IN THE OPERATION, TRANSPORT, MAINTENANCE, AND STORAGE OF THE EQUIPMENT.

This manual covers the operating instructions and illustrated parts list for:		
SCZ61V-27FX	with a serial number of	P0000001 to P0099999
SCZ61V-31CV-EFI	with a serial number of	P0100001 to P0199999
SCZ61V-31FX	with a serial number of	P0200001 to P0299999
SCZ61V-37BV-EFI	with a serial number of	P6000001 to P6099999
SCZ61RD-31FX	with a serial number of	P0400001 to P0499999
SCZ72V-31FX	with a serial number of	P0500001 to P0599999
SCZ72V-37BV-EFI	with a serial number of	P6100001 to P6199999
Always use the entire serial number listed on the serial number tag when referring to this product.		



### **Table of Contents**

SECTION 1 - GENERAL INFORMATION	1
1.1 INTRODUCTION	
1.2 DIRECTION REFERENCE	1
1.3 SERVICING THE ENGINE AND DRIVE TRAIN COMPONENTS	1
1.4 SYMBOLS	2
SECTION 2 - SAFETY INFORMATION	3
2.1 INTRODUCTION	
2.2 SIGNAL WORDS	
2.3 BEFORE OPERATION CONSIDERATIONS	3
2.4 TESTING THE SAFETY INTERLOCK SYSTEM	4
2.5 OPERATION CONSIDERATIONS	5
2.6 ROLL-OVER PROTECTION SYSTEM	6
2.7 MAINTENANCE CONSIDERATIONS & STORAGE	8
2.8 USING A SPARK ARRESTOR	9
2.9 SPARK IGNITION SYSTEM	9
2.10 SAFETY AND INSTRUCTIONAL DECALS	10
SECTION 3 - SPECIFICATIONS	11
3.1 ENGINE	
3.2 ELECTRICAL	
3.3 POWER HEAD	
3.4 CUTTER DECK	12
3.5 HYDRAULIC SYSTEM	12
3.6 WEIGHTS AND DIMENSIONS	13
3.7 PRODUCTIVITY	13
SECTION 4 - OPERATING INSTRUCTIONS	14
4.1 TIGER EYE INSTRUMENT IDENTIFICATION	
4.2 CONTROLS IDENTIFICATION	
4.3 SAFETY INTERLOCK SYSTEM	
4.4 TESTING THE SAFETY INTERLOCK SYSTEM	
4.5 INITIAL RUN-IN PROCEDURES	
4.6 STARTING THE ENGINE	17
4.7 GROUND TRAVEL AND STEERING	18
4.8 ENGAGING THE DECK DRIVE (CUTTER BLADES)	19
4.9 HILLSIDE OPERATION	19
4.10 PARKING THE MOWER	20
4.11 AFTER OPERATION	20
4.12 REMOVING CLOGGED MATERIAL	20
4.13 MOVING MOWER WITH ENGINE STOPPED	20
4.14 RECOMMENDATIONS FOR MOWING	20



	4.15 ADJUSTING CUTTING HEIGHT	21
	4.16 ADJUSTING THE HEIGHT ADJUST PEDAL	22
	4.17 ADJUSTING THE STEERING LEVERS	22
	4.18 SETTING THE SPEED CONTROL	22
	4.19 ADJUSTING THE OPERATOR SUSPENSION PLATFORM	23
	4.20 TOWING (OPTIONAL HITCH ACCESSORY)	23
SE	ECTION 5 - TROUBLESHOOTING CUTTING CONDITIONS	.24
	CTION 6 - ADJUSTMENTS	
JL	6.1 PARKING BRAKE ADJUSTMENT	
	6.2 TRAVEL ADJUSTMENTS	
	6.3 LOW / HIGH SPEED ADJUSTMENT	
	6.4 THROTTLE CONTROL AND CHOKE ADJUSTMENTS	
	6.5 BELT ADJUSTMENT	
	6.6 BELT ALIGNMENT	
	6.7 CUTTER DECK ADJUSTMENTS	
	6.8 CUSTOM-CUT BAFFLE ADJUSTMENT (EXCLUDES REAR DISCHARGE)	
	6.9 ADJUSTING THE STEERING DAMPNERS	
	6.10 ELECTRIC CLUTCH ADJUSTMENT	
SE	CTION 7 - MAINTENANCE	
	7.1 MAINTENANCE CHART - RECOMMENDED SERVICE INTERVALS	
	7.2 LUBRICATION	
	7.3 HYDRAULIC SYSTEM	-
	7.4 ENGINE OIL	38
	7.5 ENGINE FUEL SYSTEM	
	7.6 ENGINE AIR CLEANER	
	7.7 BATTERY	.40
	7.8 DRIVE BELTS	41
	7.9 CUTTER BLADES	41
	7.10 TIRES	
	7.11 BODY, DECK, AND UPHOLSTERY	.43
SE	CTION 8 - ILLUSTRATED PARTS LIST	.44
	8.1 SCAG APPROVED ATTACHMENTS AND ACCESSORIES	44
	NOTES	.45
	61V & 72V CUTTER DECKS	.46
	61RD CUTTER DECK	48
	CUTTER DECK CONTROLS	.50
	SHEET METAL COMPONENTS	.52
	SCZ ROLL-OVER PROTECTION SYSTEM	.54
	SCZ SEAT ASSEMBLY	56

### **Table of Contents**



SCZ SUSPENSION SYSTEM	
SCZ STEERING COMPONENTS	60
SCZ DRIVE SYSTEM COMPONENTS	
SCZ SPEED CONTROL COMPONENTS	
SCZ BRAKE COMPONENTS	
SCZ HYDRAULIC SYSTEM	
SCZ FUEL SYSTEM	70
SCZ ENGINE & ATTACHING PARTS	
ZT-5400 TRANSAXLE ASSEMBLY	
SCZ ELECTRICAL SYSTEM	
SCZ EFI ELECTRICAL SYSTEM	78
REPLACEMENT DECALS AND INFORMATION PLATES	
SCZ ELECTRICAL SCHEMATIC	
SCZ EFI ELECTRICAL SCHEMATIC	83
KAWASAKI ENGINE ADAPTER HARNESS ELECTRICAL SCHEMATIC	84
BRIGGS & STRATTON - EFI ADAPTER HARNESS ELECTRICAL SCHEMATIC	84
I IMITED WARDANTY COMMEDCIAL FOLIDMENT	INCIDE BACK COVED



### **NOTES**



#### **GENERAL INFORMATION**

#### 1.1 INTRODUCTION

Your mower was built to the highest standards in the industry. However, the prolonged life and maximum efficiency of your mower depends on you following the operating, maintenance and adjustment instructions in this manual.

If additional information or service is needed, contact your Scag Power Equipment Dealer.

We encourage you to contact your dealer for repairs. All Scag dealers are informed of the latest methods to service this equipment and provide prompt and efficient service in the field or at their service shop. They carry a full line of Scag service parts.

#### - IMPORTANT -

The replacement of any part on this product by other than the manufacturer's authorized replacement part may adversely affect the performance, durability or safety of this product.

Use of other than original Scag replacement parts will void the warranty.

When ordering parts, always give the model and serial number of your mower. The serial number plate is located on the frame between the engine and seat where shown in Figure 1-1.

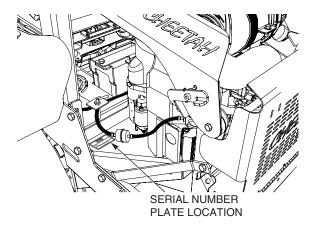


Figure 1-1. Mower Serial Number Plate Location

### USE ONLY SCAG APPROVED ATTACHMENTS AND ACCESSORIES.

Attachments and accessories manufactured by companies other than Scag Power Equipment are not approved for use on this machine. See Section 8-1.



For pictorial clarity, some illustrations and figures in this manual may show shields, guards or plates open or removed. Under no circumstances should your mower be operated without these devices in place.

All information is based upon product information available at the time of approval for printing. Scag Power Equipment reserves the right to make changes at any time without notice and without incurring any obligation.

#### 1.2 DIRECTION REFERENCE

The "Right" and "Left", "Front" and "Rear" of the machine are referenced from the operator's right and left when seated in the normal operating position and facing the forward travel direction.

# 1.3 SERVICING THE ENGINE AND DRIVE TRAIN COMPONENTS

Details regarding the service and repair of the engine, hydraulic pumps and gearboxes are not covered in this manual; only routine maintenance and general service instructions are provided. For service of these components during the limited warranty period, it is important to contact your Scag dealer or find a local authorized servicing agent of the component manufacturer. Any unauthorized work done on these components during the warranty period may void your warranty.



#### 1.4 SYMBOLS

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Choke	0	Transmission
(P)	Parking Brake	480715	Spinning Blade
	On/Start	T <sub>6</sub>	Spring Tension on Idler
0	Off/Stop	$\Diamond$	Oil
	Falling Hazard	文	Thrown Object Hazard
*	Fast		Slow
	Continuously Variable - Linear		Cutting Element - Basic Symbol
481039S	Pinch Point		Cutting Element - Engage
	Hour meter/Elapsed Operating Hours		Cutting Element - Disengage
	Keep Bystanders Away		Read Operator's Manual



#### SAFETY INFORMATION

#### 2.1 INTRODUCTION

Your mower is only as safe as the operator. Carelessness or operator error may result in serious bodily injury or death. Hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of the personnel involved in the operation, transport, maintenance and storage of the equipment. Make sure every operator is properly trained and thoroughly familiar with all of the controls before operating the mower. The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people or property.

# READ THIS OPERATOR'S MANUAL AND WATCH THE TIPS FOR SAFE OPERATION OF YOUR SCAG ZEROTURN MOWER VIDEO BEFORE ATTEMPTING TO START YOUR MOWER.

A replacement manual is available from your authorized Scag Service Dealer or by contacting Scag Power Equipment, Service Department at P.O. Box 152, Mayville, WI 53050 or contact us via the Internet at www.scag.com. The manual for this machine can be downloaded by using the model and serial number or use the contact form to make your request. Please indicate the complete model and serial number of your Scag product when requesting replacement manuals.

#### 2.2 SIGNAL WORDS



This symbol means "Attention! Become Alert! Your Safety is Involved!" The symbol is used with the following signal words to attract your attention to safety messages found on the decals on the machine and throughout this manual. The message that follows the symbol contains important information about safety. To avoid injury and possible death, carefully read the message! Be sure to fully understand the causes of possible injury or death.

#### **SIGNAL WORD:**

It is a distinctive word found on the safety decals on the machine and throughout this manual that alerts the viewer to the existence and relative degree of the hazard.



The signal word "DANGER" denotes that an extremely hazardous situation exists on or near the machine that could result in high probability of death or irreparable injury if proper precautions are not taken.



The signal word "WARNING" denotes that a hazard exists on or near the machine that can result in injury or death if proper precautions are not taken.



The signal word "CAUTION" is a reminder of safety practices on or near the machine that could result in personal injury if proper precautions are not taken.

Your safety and the safety of others depends significantly upon your knowledge and understanding of all correct operating practices and procedures of this machine.

# 2.3 BEFORE OPERATION CONSIDERATIONS

### **WARNING**

Check all hydraulic connections for tightness. Inspect all hydraulic hoses and / or lines to insure they are in good condition before operating.

- NEVER allow children to operate this riding mower.
  Do not allow adults to operate this machine without
  proper instructions.
- Do not mow when children and/or others are present. Keep children out of the mowing area and in the watchful care of a responsible adult other than the operator. Be alert and turn machine off if a child enters the area.



- 3. DO NOT allow children to ride or play on the machine, it is not a toy.
- 4. Clear the area to be mowed of objects that could be picked up and thrown by the cutter blades.
- 5. DO NOT carry passengers.
- DO NOT operate the machine under the influence of alcohol or drugs.
- 7. If the operator(s) or mechanic(s) cannot read English, it is the owner's responsibility to explain this material to them.
- 8. DO NOT wear loose fitting clothing. Loose clothing, jewelry or long hair could get tangled in moving parts. Do not operate the machine wearing shorts; always wear adequate protective clothing including long pants. Wearing safety glasses, safety shoes and a helmet is advisable and is required by some local ordinances and insurance regulations.

### **A WARNING**

Always wear hearing protection. Operating this machine over prolonged periods of time can cause loss of hearing.

- Keep the machine and attachments in good operating condition. Keep all shields and safety devices in place. If a shield, safety device or decal is defective or damaged, repair or replace it before operating the machine.
- Fuel is flammable; handle it with care. Fill the fuel tank outdoors. Never fill it indoors. Use a funnel or spout to prevent spillage. Clean up any spillage before starting the engine.
- DO NOT add fuel to a running or hot engine. Allow the engine to cool for several minutes before adding fuel. Never fuel indoors or inside enclosed trailers.
- 12. See Section 7.5 ENGINE FUEL SYSTEM for fueling procedure.
- 13. Keep flammable objects (cigarettes, matches, etc.), open flames and sparks away from the fuel tank and fuel container. Use only approved containers.
- Equipment must comply with the latest requirements per SAE J137 and/or ANSI/ASAE S279 when driven on public roads.

#### - NOTE -

If the mower is driven on public roads, it must comply with state and local ordinances as well as SAE J137 and/or ANSI/ASAE S279 requirements. Contact your local authorities for regulations and equipment requirements.

- 15. Do not operate without the side discharge chute installed and in the down position or with an optional grass catcher or mulch plate completely installed.
- 16. Check the blade mounting bolts at frequent intervals for proper tightness.
- 17. Make sure all hydraulic fluid connections are tight and all hydraulic hoses and lines are in good condition before starting the machine.

### **WARNING**

This machine is equipped with an interlock system intended to protect the operator and others from injury. This is accomplished by preventing the engine from starting unless the deck drive is disengaged, the parking brake is on, the steering control levers are in the neutral position and the operator is in the seat. The system shuts off the engine if the operator leaves the seat with the deck drive engaged and/or the steering control levers are not in the neutral position and the parking brake is not engaged. Never operate equipment with the interlock system disconnected or malfunctioning.

18. Be sure the interlock switches are functioning correctly.

# 2.4 TESTING THE SAFETY INTERLOCK SYSTEM

The safety interlock system should be tested each time before using the machine. If the safety interlock system does not operate as described below, contact your local Authorized Scag Power Equipment Dealer immediately to have the safety interlock system repaired.

 Sit in the seat in the operating position, engage the parking brake, place the steering control levers in the neutral lock position, and engage the PTO switch to the ON (up) position. Try to start the engine; the engine should not start.



- Sit in the seat in the operating position, engage the parking brake, move either of the steering control handles out of the neutral lock position, move the PTO switch to the OFF (down) position. Try to start the engine; the engine should not start. Repeat for the other steering control lever.
- Sit in the seat in the operating position, disengage the parking brake, place the steering control levers in the neutral lock position, move the PTO switch to the OFF (down) position. Try to start the engine; the engine should not start.
- 4. Sit in the seat in the operating position, engage the parking brake, place the steering control levers in the neutral lock position, move the PTO switch to the OFF (down) position, and start the engine. With the engine running, release the parking brake and rise slightly off of the seat. The engine should shut off.
- 5. Sit in the seat in the operating position, engage the parking brake, place the steering control levers in the neutral lock position, move the PTO switch to the OFF (down) position, and start the engine. With the engine running, engage the PTO switch to the ON (up) position, and rise slightly off of the seat. The engine should shut off.
- 6. Sit in the seat in the operating position, engage the parking brake, place the steering control levers in the neutral lock position, move the PTO switch to the OFF (down) position, and start the engine. With the engine running, move either steering control lever out of the neutral lock position. The engine should shut off. Repeat for the other steering control lever.

#### 2.5 OPERATION CONSIDERATIONS

1. Know the function of all controls and how to stop quickly.

## **WARNING**

DO NOT operate on steep slopes. To check a slope, attempt to back up it (with the cutter deck down). If the machine can back up the slope without the wheels slipping, reduce speed and use extreme caution. Under no circumstances should the machine be operated on slopes greater than 15 degrees. See Figure 2-2, Page 7 to determine approximate slope of area to be mowed. ALWAYS FOLLOW OSHA APPROVED OPERATION.

- Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tipping or loss of control. Be especially cautious when changing directions on slopes.
- 3. Stay two cut widths away from slopes, drop offs, ditches and retaining walls.
- To prevent tipping or loss of control, start and stop smoothly, avoid unnecessary turns and travel at reduced speed.
- 5. Immediately apply the parking brake if you lose steering control while operating. Inspect the machine and correct the problem before continuing to operate.
- 6. When using any attachment, never direct the discharge of material toward bystanders or allow anyone near the machine while in operation.
- 7. Before attempting to start the engine, with the operator in the seat, disengage power to the cutter deck, place the steering control levers in the neutral position and engage the parking brake.
- 8. If the mower discharge ever plugs, shut off the engine, remove the ignition key, and wait for all movement to stop before removing the obstruction.

### **A WARNING**

DO NOT use your hand to dislodge the clogged discharge chute. Use a stick or other device to remove clogged material after the engine has stopped running and the blades have stopped turning.

- Be alert for holes, rocks, roots and other hidden hazards in the terrain. Keep away from any dropoffs. Beware of overhead obstructions (low limbs, etc.), underground obstacles (sprinklers, pipes, tree roots, etc.). Cautiously enter a new area. Be alert for hidden hazards.
- 10. Disengage power to cutter deck before backing up. Do not mow in reverse unless absolutely necessary and then only after observation of the entire area behind the mower. If you must mow in reverse, maintain a constant lookout to the rear of the machine and mow slowly.
- 11. DO NOT turn sharply. Use care when backing up.
- 12. Disengage power to cutter deck before crossing roads, walks or gravel drives.



- 13. Mow only in daylight or good artificial light.
- 14. NEVER raise the deck with the blades engaged.
- 15. Take all possible precautions when leaving the machine unattended, such as disengaging the mower, lowering the attachments, setting the parking brake, stopping the engine, and removing the key.
- 16. Disengage power to the attachments when transporting or when not in use.
- 17. The machine and attachments should be stopped and inspected for damage after striking a foreign object, and damage should be repaired before restarting and operating the machine.

### **CAUTION**

Do not touch the engine or the muffler while the engine is running or immediately after stopping. These areas may be hot enough to cause a burn.

### A DANGER

DO NOT run the engine inside a building or a confined area without proper ventilation. Exhaust fumes are hazardous and contain carbon monoxide which can cause brain injury and death.

- 18. Keep hands and feet away from cutter blades and moving parts. Contact can injure.
- 19. Transport the mower using a heavy duty trailer or truck. Insure the trailer or truck has all of the necessary lighting and markings as required by laws, codes, and ordinances. Secure a trailer with a safety chain.
- 20. Be cautious when loading and unloading onto trailers or trucks. Use only a full width ramp. Ramp angle should be no more than 15 degrees. Back up the ramp and drive down forward.
- 21. When transporting the mower, make sure the park brake is engaged, the steering control levers are in the neutral position, the engine is off with the key removed, and the wheels have been blocked.

- 22. Tie the mower down securely using straps, chains, cable, or ropes. Both front and rear straps must be directed down and outward from machine.
- 23. Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.
- 24. NEVER leave the machine running unattended.

#### 2.6 ROLL-OVER PROTECTION SYSTEM

## **A** WARNING

Reduce speed when turning, operating on slopes, slick or wet surfaces. Allow extra distance to stop.

Stay off of slopes too steep for safe operation. To check a slope, attempt to back up it (with the cutter deck down). If the machine can not back up the slope without the wheels slipping, do not operate the machine on this slope. Under no circumstances should the machine be operated on slopes greater than 15 degrees. See Figure 2-2, Page 8 to determine approximate slope of area to be mowed.

Stay two cut widths away near drop-offs, ditches or embankments. The machine could suddenly roll over if a wheel goes over the edge or if the edge caves in.

Operate the machine smoothly, no sudden turns, starts or stops on a slope.

NEVER tow on slopes. The weight of the towed equipment may cause loss of traction and loss of control.

DO NOT permit untrained personnel to operate the machine.

Be cautious when loading and unloading onto trailers or trucks.

Use only a full width ramp.

Ramp angle should be no more than 15 degrees. See Figure 2-2, Page 8 to determine approximate ramp angle.

Back up the ramp and drive down forward.



This mower has been designed for good traction and stability under normal mowing conditions. However, caution must be used when traveling on slopes, especially when the grass is wet. Do not mow on wet grass. Wet grass reduces traction and steering control.

Any or all parts of the Roll-Over Protection System MUST NOT be removed. Failure to adhere to this guideline could result in injury or death.

#### **FOLDABLE ROLL-OVER PROTECTION SYSTEM**

### **WARNING**

Keep the roll bar in the raised and locked position and the seat belt securely fastened during operation. Failure to do so could cause serious injury or loss of life.

Lower the roll bar only when absolutely necessary.

### **WARNING**

There is no roll-over protection when the roll bar is in the down position.

Lower the roll bar only when absolutely necessary.

Raise the roll bar as soon as clearance permits.

DO NOT wear the seat belt when the roll bar is in the down position.


ALWAYS wear seat belt when roll bar is in the up position.

Operate the machine smoothly, no sudden turns, starts or stops.

Check the area carefully before mowing for proper overhead clearance (i.e. branches, doorways, etc.).

DO NOT contact any overhead object with the roll bar.

- 1. To lower the roll bar, lower the rear cover at the back of the machine. See Figure 2-1.
- 2. Remove the hairpin cotter pins and remove the two (2) lock pins. See Figure 2-1.
- 3. Lower the roll bar to the folded position and close the rear cover. See Figure 2-1.
- 4. To raise the roll bar, lower the rear cover and lift the bar to the upright position.
- 5. Install the two (2) lock pins through the holes, secure with the two (2) hairpin cotter pins and close the rear cover. See Figure 2-1.

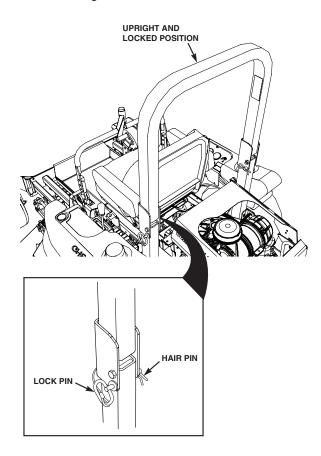

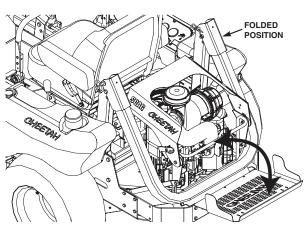


Figure 2-1. Foldable Roll-Over Protection System



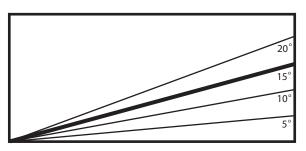


Figure 2-2. Slope Angle Graph

The potential exposure of the seat belt to severe environmental conditions makes it crucial to inspect the seat belt system regularly.

It is recommended that the seat belt be inspected on a daily basis for signs of damage. Any seat belt system that shows cuts, fraying, extreme or unusual wear, significant discoloration due to UV exposure, dirt or stiffness, abrasion to the seat belt webbing, or damage to the buckle, latch plate, hardware or any other obvious problem should be replaced immediately.

## **WARNING**

Failure to properly inspect and maintain the seat belt can cause serious injury or loss of life.

- 1. Check the full length of the seat belt webbing for cuts, wear, fraying, dirt and stiffness. See Figure 2-3.
- Check the seat belt webbing in areas exposed to ultra violet rays from the sun or extreme dust or dirt. If the original color of the webbing in these areas is extremely faded and/or is packed with dirt, the physical strength of this webbing may have deteriorated. If this condition exists, replace the seat belt system.
- Check the buckle and latch for proper operation and determine if the latch plate is excessively worn, deformed, or if the buckle is damaged or cracked. See Figure 2-3.

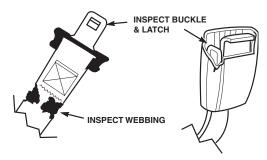


Figure 2-3. Seat Belt Inspection

# 2.7 MAINTENANCE CONSIDERATIONS & STORAGE

- Never make adjustments to the machine with the engine running unless specifically instructed to do so. If the engine is running, keep hands, feet, and clothing away from moving parts.
- Disengage drives, lower implement, set parking brake, stop engine and remove key or disconnect spark plug wire to prevent accidental starting of the engine when servicing or adjusting the machine. Wait for all movement to stop before adjusting, cleaning or repairing.
- Disconnect battery or remove spark plug wire before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect the positive first and the negative last.
- Keep all nuts, bolts and screws tight, to ensure the machine is in safe working condition. Check blade mounting bolts frequently to be sure they are tight.
- 5. Do not change the engine governor settings or overspeed the engine. See the engine operator's manual for information on engine settings.
- 6. To reduce fire hazard, keep the cutting units, drives, muffler and engine free of grass, leaves, excessive grease, oil and dirt.
- 7. Park the machine on level ground and engage the parking brake.
- 8. NEVER allow untrained personnel to service the machine.
- Use care when checking blades. Use a Blade Buddy, wrap the blade(s) or wear gloves and USE CAUTION when servicing blades. Only replace blades. NEVER straighten or weld blades.
- 10. Keep all parts in good working condition. Replace all worn or damaged decals.
- 11. Use jack stands to support components when required.
- 12. Carefully release pressure from components with stored energy.



### **WARNING**

Hydraulic fluid is under high pressure and can penetrate skin causing injury. If hydraulic fluid is injected into the skin, it must be surgically removed within a few hours by a doctor or gangrene may result.

Keep body and hands away from pinholes or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard and not hands to search for leaks.

Safely relieve all pressure from the hydraulic system by placing the control levers in the neutral lock position and shutting off the engine before performing any work on the hydraulic system.

If you need service on your hydraulic system, please see your authorized Scag dealer.

- 13. Let the engine cool before storing.
- 14. DO NOT store the machine near an open flame.
- 15. Shut off fuel while storing or transporting.
- 16. DO NOT store fuel near flames or drain indoors.
- 17. Charge batteries in an open, well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.

#### 2.8 USING A SPARK ARRESTOR

The engine in this machine is not equipped with a spark arrestor muffler. It is in violation of California Public Resource Code Section 4442 to use or operate this engine on or near any forest covered, brush covered or grass covered land unless the exhaust system is equipped with a spark arrestor meeting any applicable local or state laws. Other states or federal areas may have similar laws. Check with your state or local authorities for regulations pertaining to these requirements.

#### 2.9 SPARK IGNITION SYSTEM

This spark ignition system complies with Canadian ICES-002.



 
#### 2.10 SAFETY AND INSTRUCTIONAL DECALS



483407



483406



EPACentroRLP / Q-08-027A

Molded in Fuel Tank

484377



483300



482100

#### IMPORTANT

Operation on slopes can be hazardoùs.

This machine was originally equipped with a Rollover Protection Device with a Roll Bar and Seat Belt.

See your dealer if either is missing or damaged.

483425

START/DRIVE PROCEDURE
• Engage parking brake
• Disengage mower deck drive
• Move control handles

- to neutral lock position
- to neutral lock position
  Start engine
  Release parking brake
  Select forward or reverse with
  hyrdo control handles



- AVOID SERIOUS INJURY OR DEATH

- AVOID SERIOUS INJURY OR DEATH

   Read the Operator's Manual
   Solicite etiquets en espanol
  a un distribuidor Scag

   Operate only on slopes you can
  back up and never on slopes
  greater than 15 degrees

   If machine stops going uphill,
  stop blades and back down slowly
   Avoid sudden turns
   De not mow when children or
  others are around
   Never carry children even with
  blades off
   Look down and behind before
  and while backing
  shields, switches, etc.) in place
  of and work of the stage of the stage

 
484180





# **INSTALL BELT COVER BEFORE**

483402



HYDRAULIC FLUID LEVEL IMPORTANT ADJUSTMENT PROCEDURES7 Check hydraulic fluid level while fluid is cool. Fluid level should be in sight window as shown. Fill with 20W50 motor oil only. READ OPERATORS MANUAL FOR MORE DETAILS Check tire pressure - Drive tires-8 psi -- Caster tires-FlatFine FREE WHEEL OPERATION
To move machine without running engine,
turn valve on LH & RH transaxles from
RUN to BY-PASS. (see operator's manual) IMPORTANT IMPOKIANI
Do not overfill. Room for hot fluid expansion must be allowed or resulting expansion may cause leaks in the system NEUTRAL ADJUSTMENT (Ā I FVFR TRACKING ADJUSTMENT Control Lever To re-set neutral, have engine off and control levers in neutral. Loosen upper linkage hex nuts. Allow transmission to position linkage coble and tighten upper hex nuts. Repeat for opposite side. If wheels still creep after adjustment, see an authorized Scag dealer. If machine pulls to right, adjust LH control stop bolt CW (Inward) to slow left wheel down. If machine pulls to left, adjust RH control stop bolt CW (Inward) to slow right wheel down. 484244

484244

#### WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrestor may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

483900 (supplied with California models only)

2013 SCZ Safety Decals



### **SPECIFICATIONS**

#### 3.1 ENGINE

	Heavy Duty Industrial/Commercial Gasoline
Engine Model:	1/ - 1/ <del>-</del> - 1/ - 1/ - 1/ - 1/ 1/ 1/ 1/ - 1/ 1/ - 1/ 1/ 1/ - 1/ - 1/ 1/ -
	Kohler ECV860
	31FX, SCZ72V-31FX
· ·	V-37BV-EFIBriggs & Stratton 61E8770002J1
Displacement:	050
, ,	
,	
,	)2J1)
Type:	4 Ovela Air Opplad Nationally Applicated Oppoling OLIV
	4-Cycle, Air-Cooled, Naturally Aspirated Gasoline, OHV
	4-Cycle, Air-Cooled, Naturally Aspirated Gasoline, OHV
	4-Cycle, Air-Cooled, Naturally Aspirated Gasoline, OHV
	Mechanical Type with Variable Speed Control Set At 3600 RPM
Idle Speed	4400 DDM
Carburation:	Fired let Dermeduett Oadermeter
	Fixed Jet Downdraft Carburetor
	Electronic Fuel Injection
,	Electronic Fuel Injection
Fuel Pump:	Machanias I with In Line Evel Eller
	Full Pressure w/Full-Flow Filter
	Electric Starting with Solenoid Shift
Beils	Kevlar cord. Self-adjusting, Self-tightening
3.2 ELECTRICAL	
Battery	12 Volt
Charging Output:	
	12 Volt, 20 Amp
	Negative Ground
	Seat, Neutral Control, Mower Engagement (PTO), Parking Brake
	mmeter, Key Switch, Throttle Lever, Manual Choke, PTO Switch and Fuses
	1110 (2) 20 7 1119



#### 3.3 POWER HEAD

Scag Model (SCZ)	Hydraulic Drive with Two Hydro-Gear™ Integrated Zero-Turn Axles Hydro-Gear™ ZT-5400 Twin Lever Fingertip Steering Control with Individual Control to Each Wheel with Gas Spring Dampers
Wheels:	Lever Actuated Linkage to Brakes on Both Drive Wheel Axles  Deck)
(2) Drive - (61" & 72" Deck) Tire Pressure:	
Drive15-Gallon Total	
Forward	Low Range High Range 0 up to 12 MPH 0 up to 16 MPH 0 up to 8 MPH
	at 16 mph for transport purposes. For best cutting performance the forward travel ge and adjusted depending upon the cutting conditions.
3.4 CUTTER DECK	
Construction	Adjustable, Anti-Scalping, Hybrid Design Combines Out-Front and Belly-Mount DesignsTri-Plate deck construction eck consists of three steel plates totaling nearly 1/2" of steel.,7-gauge (3/16") deck skirt.
True Cutting Width: 61V / 61RD	
Cutting Height Adjustment Cutter Blades	Foot-Operated Lever Adjustment from Operator's Seat, 1-1/4" to 5" in 1/4"increments
Blade Engagement	Electric Blade Engagement Clutch with Control Panel Switch
Discharge Opening - 61RD Discharge Chute	Extra-Wide Discharge Opening with Spring-Loaded Discharge Chute and Turbo BaffleExtra-Wide Rear Discharge OpeningBlack, Polypropylene (Plastic), Flexible
Spindles	
Cutter Deck Belts	Split Steel with Easily Removed Taper Hubs B-Section with Kevlar Cord, Self-Adjusting, Self-Tightening Ogura Heavy Duty PTO Clutch Brake
3.5 HYDRAULIC SYSTEM	Л



3.6 WEIGHTS AND DIMENSIONS	61V	61RD	72V
Length	85.5"	85.5	91"
Tracking Width			
Overall Width w/chute down			
Overall Width w/chute up	62.75"	N/A	73.25"
Overall Height w/ROPS up	67"	67"	67"
Overall Height w/ROPS down			
Operating Weight			
3.7 PRODUCTIVITY		61V / 61RD	72V
Cutting Width		61"	72"
Acres Per Day			

The preceding data will aid you in determining how many acres your Scag mower will cut per day. The chart is an estimate based on 8 hours per day cutting time at 6 MPH with a 20% allowance for overlap and turns.



#### **OPERATING INSTRUCTIONS**

### **A** CAUTION

Do not attempt to operate this mower unless you have read this manual. Learn the location and purpose of all controls and instruments before you operate this mower.

Before operating the mower, familiarize yourself with all mower and engine controls. Knowing the location, function and operation of these controls is important for safe and efficient operation of the mower.

This machine is equipped with the Tiger Eye Advanced Monitoring System. With the key in the on position, before starting the engine, the lights for the Seat Indicator, PTO Indicator, Neutral Indicator and Park Brake Indicator should be illuminated. This indicates there is an operator in the seat, the PTO is off, steering levers are in neutral, and the parking brake is applied. When all the lights are illuminated, the key can be turned to the start position and the mower can be started. See Section 4.3 Safety Interlock System. If any of these indicator lights are not illuminated, the engine will be prevented from starting. If additional information or service is needed, contact your Scag Power Equipment Dealer.

# 4.1 TIGER EYE INSTRUMENT IDENTIFICATION

- Service Air Filter Indicator (Figure 4-1). Optional Accessory. Indicates the condition of the engine air filter. Icon will display when it is time to change the air filter.
- Glow Plug Indicator (Figure 4-1). <u>Used on Diesel</u>
   <u>Powered Units Only.</u> Indicator turns on when the key switch is turned to the PREHEAT position. Glow plugs must be preheated for 5 to 10 seconds before starting the engine.
- 3. Oil Pressure Indicator (Figure 4-1). <u>Used on Diesel Powered Units Only.</u> Indicates engine oil pressure. Reference the engine operator's manual for further information.
- 4. Service Engine Indicator (Figure 4-1). Indicates the maintenance reminder for the engine oil change. Has preset maintenance reminder and will start flashing scheduled maintenance 2 hours before preset time and continue flashing until 2 hours after. Automatically resets.

- 5. Voltmeter Indicator (Figure 4-1). Indicates the condition of the charging system. When the engine is running, in normal operating conditions, the bar graph should be in the 12 to 14 volt range.
- 6. Seat Indicator (Figure 4-1). Light will illuminate when the operator is in the seat engaging the seat switch.
- PTO Indicator (Figure 4-1). Light will illuminate when the PTO (mower deck) switch is in the OFF position.
- 8. Hourmeter Indicator (Figure 4-1). Indicates the number of hours the engine has been operated. It only operates when the engine is running. Will start flashing with the Service Engine Indicator at scheduled maintenance 2 hours before preset time and continue flashing until 2 hours after. Automatically resets.
- 9. Neutral Indicator (Figure 4-1). Light will illuminate when the steering control levers are in the <u>neutral lock position</u>.
- **10. Park Brake Indicator (Figure 4-1).** Light will illuminate when the park brake is in the engaged (ON) position.
- 11. Water Temperature Indicator (Figure 4-1). <u>Used</u>
  on <u>Liquid Cooled Models Only.</u> Indicates the
  operating temperature of the engine. If the engine
  temperature exceeds the maximum preset value, the
  indicator will flash and the Park Brake, PTO, Seat
  and Neutral indicator lights will flash in an alternating
  pattern.
- **12. Fuse Holders (Figure 4-2).** Two 20-amp fuses protect the mower's electrical system. To replace fuses, pull fuse out of the socket and install a new fuse.



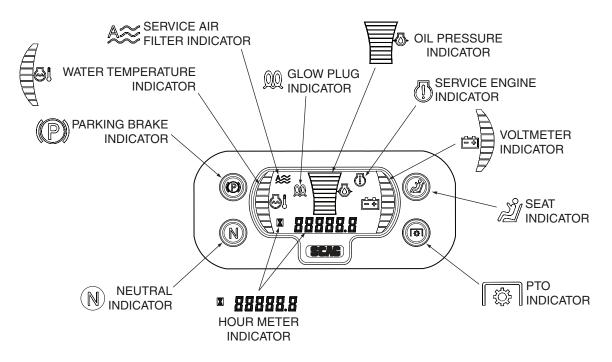


Figure 4-1. Tiger Eye Advanced Monitoring System

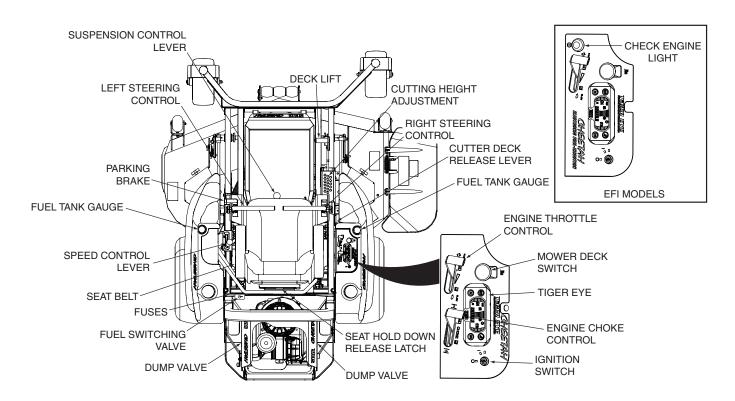


Figure 4-2. Controls and Instruments



#### 4.2 CONTROLS IDENTIFICATION

- Ignition Switch (Figure 4-2). The ignition switch is used to start the engine and has three positions; OFF, ON, and START.
- 2. Mower Deck Switch (Figure 4-2). Used to engage and disengage the mower drive system. Pulling up on the switch will engage the deck drive. Pushing down on the switch will disengage the deck drive.
- 3. Engine Choke Control (Figure 4-2). Used to start a cold engine.
- 4. Engine Throttle Control (Figure 4-2). Used to control the engine speed. Pushing the lever forward increases engine speed. Pulling the lever back decreases engine speed. Full back position is the IDLE position. Full forward is the cutting position.
- Left Steering Control (Figure 4-2). Used to control the mower's left wheel when traveling forward or reverse.
- Right Steering Control (Figure 4-2). Used to control the mower's right wheel when traveling forward or reverse.
- 7. Fuse Holders (Figure 4-2). Two 20-amp fuses protect the mower's electrical system. To replace fuses, pull fuse out of the socket and install a new fuse
- 8. Parking Brake Control (Figure 4-2). Used to engage and disengage the parking brakes. Pull the lever back to engage the parking brakes. Push the lever forward to disengage the parking brakes.
- 9. Fuel Tank Gauge (Figure 4-2). Indicates the amount of fuel in the fuel tank.
- 10. Dump Valve Control Levers (Figure 4-3). Located on the hydraulic axles, used to "free-wheel" the mower. Rotating the levers clockwise until they stop allows the unit to move under hydraulic power. Rotating the levers counter-clockwise allows the mower to be moved by hand (free-wheeling).

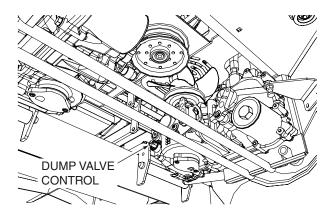


Figure 4-3. Dump Valve Control

- 11. Deck Lift Foot Lever (Figure 4-2). Used to raise and lower the cutter deck. Push full forward to lock in the transport position.
- **12. Cutting Height Adjustment (Figure 4-2).** Used to set the cutter deck at the desired cutting height.
- 13. Deck Release Lever (Figure 4-1). Used to lock the cutter deck in the transport position. Push the foot pedal forward and pull back on the release lever to release the cutter deck for normal mowing.
- 14. Speed Control Lever (Figure 4-2). Used to select the mowers operating range. For the best performance while cutting, the LOW speed should be selected. HIGH speed should be selected for transport operation.
- Suspension Control Lever (Figure 4-2). Used to select the optimum suspension rate based on the operator.
- **16. Seat Belt (Figure 4-2).** Used to secure the operator. Seat belt must be worn at all times when the ROPS is in the upright and locked position.
- 17. Seat Hold Down Release Latch (Figure 4-2).

  Located behind the seat. Used to secure the seat in the operator's position. Release the latch to gain access under the seat.
- 18. Check Engine Light (Figure 4-2). Indicates the operation of the engine sensors on the Fuel Injection Engines (EFI). If a problem occurs with a sensor on the engine, the light will flash a code. See your authorized Scag Dealer for diagnosis and repair.



#### 4.3 SAFETY INTERLOCK SYSTEM

The mower is equipped with a safety interlock system that prevents the engine from starting unless the deck drive is disengaged, the parking brake is engaged, the steering control levers are in the neutral position and the operator is in the seat. The interlock system shuts off the engine if the operator leaves the seat with the steering control levers not in the neutral position and/or the cutter blades engaged and the parking brake not engaged.



Never operate the mower with the interlock system disconnected or malfunctioning. Do not disengage or bypass any switch; injury to yourself and others or property damage could result.

# 4.4 TESTING THE SAFETY INTERLOCK SYSTEM

The safety interlock system should be tested each time before using the machine. If the safety interlock system does not operate as described below, contact your local Authorized Scag Power Equipment Dealer immediately to have the safety interlock system repaired.

- Sit in the seat in the operating position, engage the parking brake, place the steering control levers in the neutral lock position, and engage the PTO switch to the ON (up) position. Try to start the engine; the engine should not start.
- Sit in the seat in the operating position, engage the parking brake, move either of the steering control handles out of the neutral lock position, move the PTO switch to the OFF (down) position. Try to start the engine; the engine should not start. Repeat for the other steering control lever.
- Sit in the seat in the operating position, disengage the parking brake, place the steering control levers in the neutral lock position, move the PTO switch to the OFF (down) position. Try to start the engine; the engine should not start.
- 4. Sit in the seat in the operating position, engage the parking brake, place the steering control levers in the neutral lock position, move the PTO switch to the OFF (down) position, and start the engine. With the engine running, release the parking brake and rise slightly off of the seat. The engine should shut off.

- 5. Sit in the seat in the operating position, engage the parking brake, place the steering control levers in the neutral lock position, move the PTO switch to the OFF (down) position, and start the engine. With the engine running, engage the PTO switch to the ON (up) position, and rise slightly off of the seat. The engine should shut off.
- 6. Sit in the seat in the operating position, engage the parking brake, place the steering control levers in the neutral lock position, move the PTO switch to the OFF (down) position, and start the engine. With the engine running, move either steering control lever out of the neutral lock position. The engine should shut off. Repeat for the other steering control lever.

#### 4.5 INITIAL RUN-IN PROCEDURES

#### FIRST DAY OF USE OR APPROXIMATELY 20 HOURS

- 1. Check all belts for proper alignment and wear at 2, 4 and 8 hours.
- 2. Change the engine oil and oil filter after the first 20 hours of operation. (See Section 7.4.)
- 3. Check hydraulic oil level in reservoir. (See Section 7.3.)
- 4. Check for loose hardware. Tighten as needed.
- Check interlock system for proper operation. (See Section 4.2.)
- 6. Check tire pressure. Adjust pressure if necessary. (See Section 7.10.)

#### 4.6 STARTING THE ENGINE



DO NOT USE STARTING FLUIDS. Use of starting fluids in the air intake system may be potentially explosive or cause a "runaway" engine condition that could result in engine damage and/or personal injury.

- 1. Be sure the fuel shutoff valve, located behind the operator's seat, is fully open. (See Section 4.1.)
- 2. Secure the ROPS in the upright and locked position.
- 3. Sit in the operator's seat, fasten seat belt and place the steering control levers in the neutral position.



- Engage the parking brake.
- 5. Place the PTO switch in the disengaged position.
- 6. If the engine is cold, choke the engine as needed.
- 7. Move the engine throttle control to about half engine speed.
- 8. Turn the ignition key to the START position and release the key as soon as the engine starts. Do not hold the key in the START position for more than 15 seconds at a time. Allow at least 60 seconds between each cranking attempt to prevent overheating of the starter motor. Prolonged cranking can damage the starter motor and shorten battery life.
- 9. Allow engine to warm before operating the mower.

#### 4.7 GROUND TRAVEL AND STEERING

#### - IMPORTANT -

If you are not familiar with the operation of a machine with lever steering and/or hydrostatic transmissions, the steering and ground speed operations should be learned and practiced in an open area, away from buildings, fences, or obstructions.

Learn the operation on flat ground before operating on slopes.

Start practicing with a slow engine speed and slow forward travel.

Learn to feather the steering controls to obtain a smooth operating action.

Practice operating the mower until you are comfortable with the controls before proceeding to mow.

#### **FORWARD TRAVEL**

To travel forward with the mower, disengage the parking brake, pull levers inward out of the neutral lock position and slowly push the steering control levers forward an equal distance. The further the steering control levers are pushed forward the greater the forward speed will be. To increase the speed, push the steering control levers further forward and to decrease the speed, pull the steering control levers back.

To stop the forward travel, pull the steering control levers back to the neutral position.

To steer the mower left while traveling forward, pull the left steering lever back. The further the lever is pulled back, the quicker the mower will turn left.

To steer the mower right while traveling forward, pull the right steering control lever back. The further the lever is pulled back, the quicker the mower will turn right.

#### - NOTE -

Smooth operation of the steering levers will produce smooth mower operation. While learning the operation of the steering controls, keep the travel speed low.

#### - IMPORTANT -

Do not travel forward over a curb. The mower will hang up on the curb. Raise the deck and travel backwards over the curb at a 45 degree angle. (See Section 4.1, items 13 - 15, on page 14 for cutter deck raising descriptions.)

#### REVERSE TRAVEL



Disengage power to the mower before backing up. Do not mow in reverse unless absolutely necessary and then only after observation of the entire area behind the mower.

### **A** CAUTION

Before backing up, observe the rear for persons and obstructions. Clear the area before backing up. Possible injury or property damage could occur.

To travel in reverse, pull levers inward out of the neutral lock position and pull both handles back. Keep the travel speed low while traveling in reverse.

#### - NOTE -

The mower may not travel straight in reverse. Slight adjustments may need to be made using the steering controls.



To steer left while traveling in reverse, allow the left steering control lever to move forward. The further the control is allowed to move forward, the quicker the mower will turn left.

To steer right while traveling in reverse, allow the right steering control lever to move forward. The further the control is allowed to move forward, the quicker the mower will turn right.

To stop the reverse travel, allow the steering control levers to return to the neutral position. If the mower is to be parked, place the handles in the neutral lock position and engage the parking brake.

# 4.8 ENGAGING THE DECK DRIVE (CUTTER BLADES)

 Set the throttle at about 3/4 speed. Do not attempt to engage the deck drive at high speed as this shortens the electric clutch life — use only moderate engine speed when engaging the deck drive.

### **A DANGER**

#### **ROTATING BLADES**

NEVER PUTYOUR HANDS INTO THE DISCHARGE CHUTE FOR ANY REASON!

Shut off the engine and remove the key and only then use a stick or similar object to remove material if clogging has occurred.

2. Engage the deck drive by pulling out on the yellow switch, located on the instrument panel, to the engage position. See Figure 4-4.

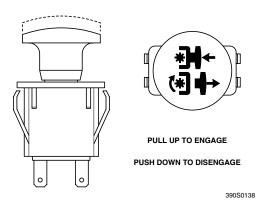


Figure 4-4. Cutter Engage Switch

#### - NOTE -

A squealing noise may be heard when engaging or disengaging the deck drive. It is caused by the electric clutch plates meshing as the mower comes up to speed. This is normal.

- 3. To disengage the deck drive, push the switch in to the disengage position.
- Always operate the engine at full throttle to properly maintain cutting speed. If the engine starts to lug down, reduce the forward speed and allow the engine to operate at maximum RPM.

#### 4.9 HILLSIDE OPERATION

### **A WARNING**

DO NOT operate on steep slopes. To check a slope, attempt to back up it (with the cutter deck down). If the machine can back up the slope without the wheels slipping, reduce speed and use extreme caution. Under no circumstances should the machine be operated on slopes greater than 15 degrees. See Figure 2-2, Page 7 to determine approximate slope of area to be mowed. ALWAYS FOLLOW OSHA APPROVED OPERATION.

- This mower has been designed for good traction and stability under normal mowing conditions. However, caution must be used when traveling on slopes, especially when the grass is wet. Wet grass reduces traction and steering control. The Roll-Over Protection System is standard equipment for this machine. See Section 2.5, page 6 of this manual for further details.
- 2. Stay two cut widths away from slopes, drop offs, ditches and retaining walls.
- To prevent tipping or loss of control, do not start or stop suddenly, avoid unnecessary turns and travel at reduced speed. If tires lose traction, disengage blades and proceed slowly off the slope.
- 4. Avoid sudden starts when mowing uphill. Sudden starts may cause the machine to tip backwards.
- Loss of traction may occur when traveling down hill.
   Weight transfers to the front of the machine and may cause the drive wheels to slip causing loss of braking or steering.
- 6. Keep tires properly inflated.



#### 4.10 PARKING THE MOWER

- 1. Park the machine on a flat, level surface only. Do not park the machine on an incline.
- Place the steering control levers in the neutral position.
- 3. Disengage the cutter blades.
- 4. Slow the engine to idle speed.
- 5. Engage the parking brake.
- Turn the ignition key to the OFF position and remove the key.

#### **4.11 AFTER OPERATION**

 Wash the entire mower after each use. Do not use high pressure spray or direct the spray onto electrical components.

#### - IMPORTANT -

Do not wash a hot or running engine. Cold water will damage the engine. Use compressed air to clean the engine if it is hot.

- 2. Keep the entire mower clean to inhibit serious heat damage to the engine or hydraulic oil circuit.
- 3. Check the drive belts for proper alignment and any signs of wear. Correct and adjust if necessary.

# **A DANGER**

To avoid injury from burns, allow the mower to cool before removing the fuel tank cap and refueling.

4. Check the tire pressure. Adjust pressure if necessary.

#### 4.12 REMOVING CLOGGED MATERIAL

### DANGER

#### **ROTATING BLADES**

NEVER PUTYOUR HANDS INTO THE DISCHARGE CHUTE FOR ANY REASON!

Shut off the engine and remove the key and only then use a stick or similar object to remove material if clogging has occurred.

 If the discharge chute becomes clogged, shut off the engine and remove the ignition key. Using a stick or similar item, dislodge the clogged material. Then resume normal mowing.

# 4.13 MOVING MOWER WITH ENGINE STOPPED

To "free-wheel" or move the mower around without the engine running, rotate the dump valves counter-clockwise. See Figure 4-5. Disengage the parking brake and move the mower by hand. When the machine is in the desired position, engage the parking brake and rotate the valves clockwise until they stop. The dump valve levers must be returned to the DRIVE position to drive the mower.

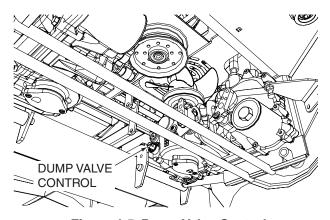


Figure 4-5. Dump Valve Control

#### 4.14 RECOMMENDATIONS FOR MOWING

 Do not mow with dull blades. A dull blade will tear grass, resulting in poor lawn appearance and reduced mowing power.



### **A WARNING**

DO NOT operate without Discharge Chute, Mulching Kit, or entire Grass Catcher properly installed.

- 2. The discharge chute must not be removed and must be kept in the lowest position to deflect grass clippings and thrown objects downward. Direct the side discharge away from sidewalks or streets to minimize cleanup of clippings. When mowing close to obstacles, direct the discharge away from the obstacles to reduce the chance of property damage by thrown objects. Do not mow when bystanders are present.
- 3. Cut grass when it is dry and not too tall. Do not cut grass too short (cut off 1/3 or less of existing grass for best appearance). Mow frequently.
- 4. Keep mower and discharge chute clean.
- 5. For best overall cut performance, it is recommended to set the speed control lever in LOW while mowing. See Section 4.16.
- When mowing wet or tall grass, mow the grass twice.
   Set the speed control lever to LOW. Raise the mower to the highest setting for the first pass and then make a second pass to the desired height.
- 7. Use a slow travel speed for trimming purposes.
- Operate the engine at full throttle for best cutting.
   Mowing with a lower RPM causes the mower to tear the grass. The engine is designed to be operated at full speed.
- 9. Use the alternate stripe pattern for best lawn appearance. Vary the direction of the stripe each time the grass is mowed to avoid wear patterns in the grass.

#### 4.15 ADJUSTING CUTTING HEIGHT

The mower deck can be adjusted from a height of 1-1/4 inch to 5 inches at 1/4-inch intervals. To adjust the cutting height:

### **WARNING**

DO NOT adjust the cutting height with the mower blades rotating. Disengage the power to the cutter blades and then adjust cutting height.

- 1. Disengage the power to the cutter blades.
- Push the cutting height adjustment foot pedal all the way forward using your right foot until it locks in place. See Figure 4-6.

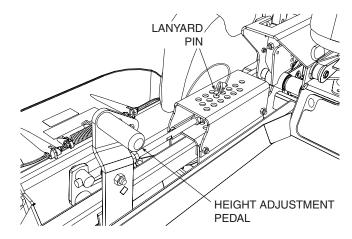


Figure 4-6. Adjusting Cutting Height

3. Insert the lanyard pin into the cutting height index at the desired cutting height. Push forward on the deck lift foot lever, hold in place and pull back on the deck release lever. See Figure 4-7. Slowly release the foot pedal. A deck height decal is located on the cutting height index as an aid in adjusting the deck to the desired height. See Figure 4-6.

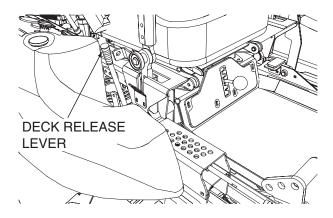


Figure 4-7. Deck Release Lever



# 4.16 ADJUSTING THE HEIGHT ADJUST PEDAL

- Position the seat to the desired location.
- While in the operator's position without the engine running, push down on the height adjust pedal to check for full function control.
- The height adjust pedal can be located in three (3) different positions for operator comfort and control. See Figure 4-8.

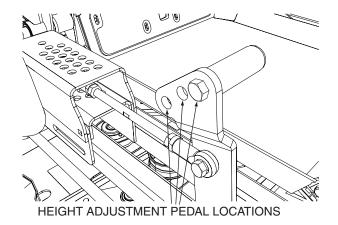


Figure 4-8. Height Adjust Pedal Locations

#### 4.17 ADJUSTING THE STEERING LEVERS

- 1. Position the seat to the desired location.
- While in the operator's position without the engine running, move both steering levers forward and reverse to check for full function control and comfort.
- 3. If adjustment of the steering levers is needed, use the following instructions to adjust.
  - A. Loosen the tension knob on the lever assembly.
  - B. Rotate the steering lever forward or backward to achieve the optimum operating position.
  - C. Tighten the tension knob and repeat on the opposite side.
  - D. While in the operator's position, bring the steering levers out of the neutral lock position and check to make sure both levers are even before operating.

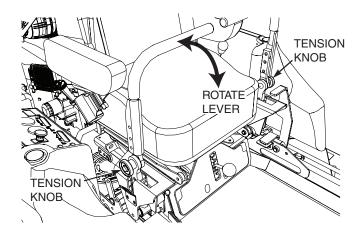


Figure 4-9. Adjusting Steering Levers

4. The control handle can also be adjusted in two different height positions. If necessary, remove the two bolts securing the control handle to the control lever. Install the handle in the desired position.

#### 4.18 SETTING THE SPEED CONTROL

The speed control lever can be set in either LOW or HIGH range. Moving the speed control lever between LOW and HIGH range sets the maximum forward/reverse speed the machine can obtain during operation. See Figure 4-10.

#### **Speed Control Selection Recommendations**

#### LOW Range (Forward Travel Speed = 0 up to 12 mph)

- Recommended for best overall cutting performance in all conditions.

#### HIGH Range (Foward Travel Speed = 0 up to 16 mph)

- Recommended for transport. Although the machine is capable of engaging the mowing deck in HIGH Range, overall quality of cut may suffer. If the material being cut is sparse or dormant, HIGH Range can be selected to "knock down" tall weeds, seed heads, etc. However for best overall cut performance, it is recommended to select LOW Range for mowing.



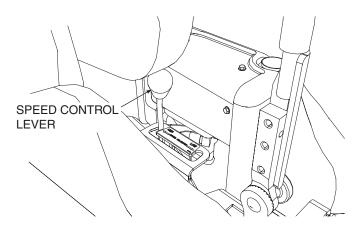


Figure 4-10. Speed Control Lever

# 4.19 ADJUSTING THE OPERATOR SUSPENSION PLATFORM

The operator suspension platform can be adjusted to optimize operator comfort and ride. Adjust the suspension rate by moving the suspension control lever down to increase (stiffen) or up to decrease (soften) the suspension shock rate. See Figure 4-11.

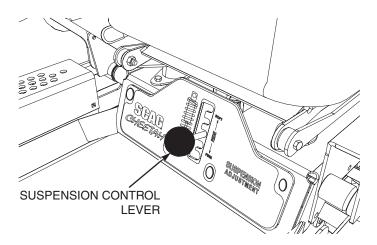


Figure 4-11. Operator Suspension Platform Adjustment

# 4.20 TOWING (OPTIONAL HITCH ACCESSORY)

- 1. NEVER allow children or others in or on towed equipment.
- Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the hitch point.
- Follow manufacturer's recommendations for weight limit for towed equipment. 250 lbs. maximum towing weight.

- NEVER tow on slopes. The weight of the towed equipment may cause loss of traction and loss of control.
- 5. Travel slowly and allow extra distance to stop.
- 6. Zero-turning with a trailer attached could cause damage to the trailer or mower.



### TROUBLESHOOTING CUTTING CONDITIONS

CONDITION	CAUSE	CURE
STRINGERS - OCCASIONAL BLADES OF UNCUT GRASS	Low engine RPM	Run engine at full RPM
	Ground speed too fast	Slow speed to adjust for conditions
	Wet grass	Cut grass after it has dried out
ι, , , , ,	Dull blades, incorrect sharpening	Sharpen blades
	Deck plugged, grass accumulation	Clean underside of deck
Width of Deck	Belts slipping	Adjust belt tension
STREAKING - STRIPS OF UNCUT GRASS IN CUTTING	Dull, worn blades	Sharpen blades
PATH	Incorrect blade sharpening	Sharpen blades
annan Kamaan Mamaan	Low engine RPM	Run engine at full RPM
	Belt slipping	Adjust belt tension
	Deck plugged, grass accumulation	Clean underside of deck
	Ground speed too fast	Slow speed to adjust for conditions
Width of Deck	Wet grass	Cut grass after it has dried out
	Bent blades	Replace blades
STREAKING - STRIPS OF UNCUT GRASS BETWEEN CUTTING PATHS  Of Of Of Of Of Deck Of School Of	Not enough overlapping between rows	Increase the overlap of each pass



### TROUBLESHOOTING CUTTING CONDITIONS (CONT'D)

CONDITION	CAUSE	CURE
UNEVEN CUT ON FLAT GROUND - WAVY HIGH-LOW	Lift worn from blade	Replace blade
APPEARANCE, SCALLOPED CUT, OR ROUGH CONTOUR	Blade upside down	Mount with cutting edge toward ground
MMAMMAMMAMMAM	Deck plugged, grass accumulation	Clean underside of deck
	Too much blade angle (deck pitch)	Adjust pitch and level
	Deck mounted improperly	See your authorized SCAG dealer
Width of Deck	Bent spindle area	See your authorized SCAG dealer
Width of Deck	Dull blade	Sharpen blade
UNEVEN CUT ON UNEVEN GROUND-WAVY APPEARANCE, HIGH-LOW SCALLOPED CUT, OR ROUGH CONTOUR  Width of Deck SGB021	Uneven ground	May need to reduce ground speed, raise cutting height, and/or change direction of cut
SLOPING RIDGE ACROSS WIDTH OF CUTTING PATH	Tire pressures not equal	Check and adjust tire pressure
Managaman	Wheels uneven	Check and adjust tire pressure
Width of Deck SGB023	Deck mounted incorrectly	See your authorized SCAG dealer
	Deck not level side-to side	Check for level and correct



### TROUBLESHOOTING CUTTING CONDITIONS (CONT'D)

CONDITION	CAUSE	CURE
SCALPING - BLADES HITTING DIRT OR CUTTING VERY CLOSE	Low tire pressures	Check and adjust pressures
TO THE GROUND	Ground speed too fast	Slow speed to adjust for conditions
	Cutting too low	May need to reduce ground speed, raise cutting height, change direction of cut, and/or change pitch and level
	Rough terrain	May need to reduce ground speed, raise cutting height, and/or change direction of cut
Width of Deck OSGB022	Ground speed too fast	Slow speed to adjust for conditions
	Wet grass	Cut grass after it has dried out
STEP CUT - RIDGE IN CENTER OF CUTTING PATH	Blades not mounted evenly	Adjust pitch and level
Mesancancancancancancancancancancancancanca	Bent blade	Replace blade
	Internal spindle failure	See your authorized SCAG dealer
Width of Deck SGB024	Mounting of spindle incorrect	See your authorized SCAG dealer
SLOPE CUT - SLOPING RIDGES ACROSS WIDTH OF CUTTING	Bent spindle mounting area	See your authorized SCAG dealer
PATH	Internal spindle failure	See your authorized SCAG dealer
Width of Deck	Bent deck housing	See your authorized SCAG dealer



#### **ADJUSTMENTS**

#### **6.1 PARKING BRAKE ADJUSTMENT**

### **WARNING**

Do not operate the mower if the parking brake is not operable. Possible severe injury could result.

The parking brake linkage should be adjusted whenever the parking brake lever is placed in the "ENGAGE" position and the parking brake will allow the mower to move. If the following procedures do not allow you to engage the parking brake properly, contact your Scag dealer for further brake adjustments.

- Position a floor jack under the rear of the machine. Raise the machine and support it to prevent it from falling. Block the caster wheels to prevent the machine from moving.
- With the brake in the engaged position, check the distance between the cotter pin on the brake actuator rod and pivot bushing on the LH side of the machine. The distance should be 1/8". See Figure 6-1.
- 3. If the distance is not at the specified measurement, turn the adjustment nut on the brake actuator rod until the 1/8" measurement is achieved. See Figure 6-1.
- 4. Repeat steps 2-3 on the RH side of the machine.
- Test the brake.

#### - NOTE -

If this procedure does not achieve proper brake adjustment, please contact your authorized Scag dealer.

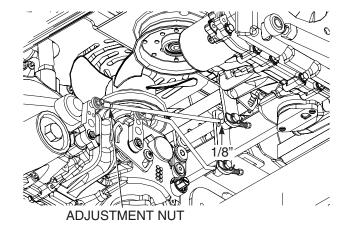


Figure 6-1. Brake Adjustment

#### **6.2 TRAVEL ADJUSTMENTS**

Neutral or tracking adjustments will need to be made if:

- A. The steering control levers are in the neutral position and the machine creeps forward or backward. (Neutral Adjustment).
- B. The steering control levers are in the full forward position and the mower pulls to one side or the other when traveling in a forward direction. (Tracking Adjustment).

#### **NEUTRAL ADJUSTMENT**

- 1. Be sure the dump valve levers are in the run position and the steering control levers are in the neutral lock position.
- 2. With an operator in the seat, start the engine and disengage the parking brake.
- 3. Run the engine at full operating speed and check if the machine creeps forward or backwards.
- Adjust the RH wheel by loosening the jam nuts on the steering control cable. Turn the jam nut until the control plates on the hydraulic axle are centered in the neutral position. See Figure 6-2.



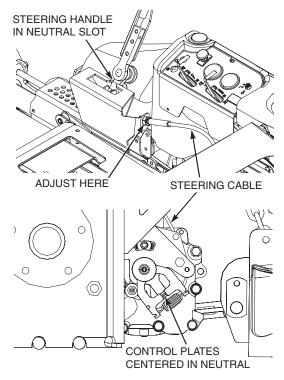


Figure 6-2. Steering Control Cable Adjustment

- 5. Tighten the jam nuts and repeat for the LH wheel. See Figure 6-2.
- 6. Actuate the steering control levers forward and reverse several times and return them to the neutral position.
- 7. Check that the drive wheels remained in neutral and readjust if necessary.
- 8. Check that the steering control levers hit the stop before the pumps reach full stroke. Adjust as needed.

#### TRACKING ADJUSTMENT



Stop the engine and remove the key from the ignition before making any adjustments. Wait for all moving parts to come to a complete stop before beginning work.

# **A** CAUTION

The engine and drive unit can get hot during operation causing burn injuries. Allow engine and drive components to cool before making any adjustments.

#### - NOTE -

Before proceeding with this adjustment, be sure that the caster wheels turn plus pivot freely and that the tire pressure in the drive wheels is correct. If the tire pressure is not correct, the machine will pull to the side with the lower pressure.

- If at full speed the mower pulls right, it is an indication that the left wheel is turning faster than the right wheel. To adjust this condition, proceed as follows:
  - A. Stop the machine and place the steering control levers in the neutral position. Turn the tracking adjustment bolt for the LH pump inward (clockwise). This will cause the control rod to stroke the LH pump less, slowing down the LH wheel. See Figure 6-3.
- If at full speed the mower pulls left, it is an indication that the right wheel is turning faster than the left wheel. To adjust this condition, proceed as follows:
  - A. Stop the machine and place the steering control levers in the neutral position. Turn the tracking adjustment bolt for the RH pump inward (clockwise). This will cause the control rod to stroke the RH pump less, slowing down the RH wheel. See Figure 6-3.

#### - NOTE -

If after making the adjustment as outlined in step 2A, the machine creeps forward or backward, perform the neutral adjustment. See Neutral Adjustment on page 27.

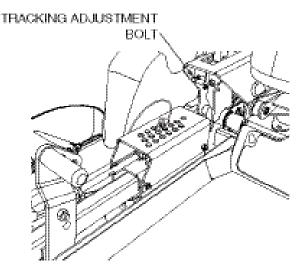


Figure 6-3. Tracking Adjustment

#### 6.3 LOW / HIGH SPEED ADJUSTMENT

The LOW / HIGH speed linkage should be adjusted whenever the lever will not allow the mower to change speeds between LOW and HIGH range. If the following procedures do not allow you to change speeds properly, contact your Scag dealer for further adjustments.

- Position a floor jack under the rear of the machine. Raise the machine and support it to prevent it from falling. Block the caster wheels to prevent the machine from moving.
- 2. Position the speed control lever in LOW range.
- 3. Loosen the jam nut and remove the cotter pin securing the speed control linkage to the speed control rod. See Figure 6-4.
- 4. Adjust the speed control linkage until speed control arm on the RH axle is against the LOW range stop. See Figure 6-4.
- 5. Repeat steps for the LH axle.

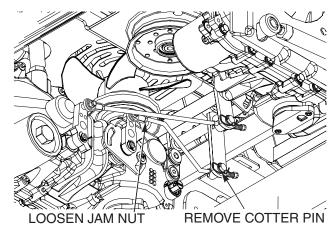


Figure 6-4. Speed Control Adjustment

## 6.4 THROTTLE CONTROL AND CHOKE ADJUSTMENTS

These adjustments must be performed by your Scag dealer to ensure proper and efficient running of the engine. Should either need adjustment, contact your authorized Scag service center.

#### 6.5 BELT ADJUSTMENT



Before removing any guards, shut the engine off and remove the ignition key.

All drive belts are spring loaded and self-tensioning, however after the first 2, 4, 8 and 10 hours of operation, the belts should be checked for proper alignment and wear. Thereafter, check the belts after every 40 hours of operation or weekly, whichever occurs first.



If the pump drive belt fails, steering control will be lost which could result in serious injury or death. Replace the pump drive belt as needed or every 400 hours / 2 years, whichever occurs first.



#### 6.6 BELT ALIGNMENT

Belt alignment is important for proper performance of your Scag mower. If you experience frequent belt wear or breakage, see your authorized Scag service center for belt adjustment.

#### **6.7 CUTTER DECK ADJUSTMENTS**

Cutter deck level, pitch and height are set at the factory. However, if these adjustments should ever need to be made, the following procedures will aid in obtaining the proper cutter deck adjustment.

#### - NOTE -

Before proceeding with the cutter deck adjustments, be sure that all tires are properly inflated.

#### **CUTTER DECK LEVEL**

The cutter deck should be level from side-to-side for proper cutting performance. To check for level, be sure that the mower is on a flat, level surface, the tires are properly inflated and the cutter deck is set at the most common cutting height that you will use. On the RH side of the machine, check the distance from the top of the cutter deck to the floor. Next check the distance from the top of the cutter deck to the floor on the LH side of the machine. Both measurements should be the same. If the two measurements are different, the cutter deck level must be adjusted as follows:

1. On the front LH side of the cutter deck locate the cutter deck level adjusting bracket. See Figure 6-5.

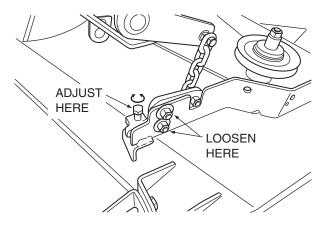


Figure 6-5. Cutter Deck Level Adjustment

- Loosen the two (2) elastic stop nuts. Adjust the bolt up or down on the adjustment bracket to adjust the cutter deck until the distance from the top of the cutter deck to the floor is the same as the measurement on the RH side of the machine.
- 3. Tighten the two (2) elastic stop nuts to secure the cutter deck in the proper position.

#### **CUTTER DECK PITCH**

The pitch of the cutter deck should be equal between the front and rear of the cutter deck for proper cutting performance. To check for proper deck pitch, be sure that the mower is on a flat, level surface and the tires are properly inflated.

Check the distance from the top of the cutter deck to the floor at the rear RH side of the cutter deck directly behind the cutter deck hanging chains. Next check the distance from the top of the cutter deck to the floor at the front RH side of the cutter deck directly in front of the cutter deck hanging chains. The measurement at the front of the cutter deck should be the same as the rear of the deck. Make these measurements at the LH side of the cutter deck also. If the measurement at the front of the deck is not the same, the cutter deck pitch must be adjusted as follows:

 Loosen the jam nut on both adjusting rods. See Figure 6-6.

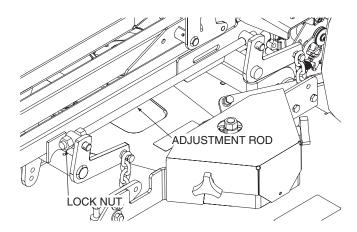


Figure 6-6. Cutter Deck Level Adjustment

 Using an adjustable jaw pliers, turn the adjusting rods on the non-threaded portion of the rod until the deck is equal front to back on both the RH and the LH side of the cutter deck. Tighten both lock nuts.



#### - NOTE -

To prevent the cutter deck from teetering, all four (4) cutter deck hanging chains must have tension on them. If all four chains do not have tension on them and the deck teeters, you must readjust the cutter deck as outlined in the procedures above. All measurements should be taken from the top edge of the deck as the Velocity Plus decks have an uneven bottom edge.

### **CUTTER DECK HEIGHT**

The cutter deck height adjustment is made to ensure that the cutter deck is cutting at the height indicated on the cutting height index gauge. To check for proper deck height, be sure that the mower is on a flat, level surface and the tires are properly inflated.

- Check the cutter deck cutting height by placing the lanyard pin in the 4-1/2" position on the cutting height index. Release the deck from the transport position and allow the deck to move to the 4-1/2" cutting height position.
- 2. Check the measurement from the floor to the cutter blade tip. If the measurement is not at 4-1/2", an adjustment can be made using the deck height control rod.
- 3. Loosen the jam nuts on both ends of the deck height control rod. See Figure 6-7.

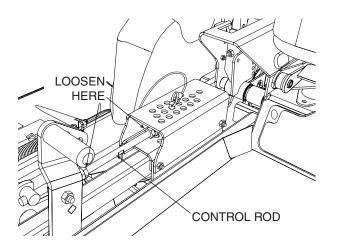


Figure 6-7. Cutter Deck Height Adjustment

4. Turn the control rod (See Figure 6-7) until the measurement from the floor to the cutter blade tip is at 4-1/2". Tighten the jam nuts on the control rod.

#### - NOTE -

If an adjustment had to be made, be sure that the cutter deck can easily be locked into the transport position.

# 6.8 CUSTOM-CUT BAFFLE ADJUSTMENT (EXCLUDES REAR DISCHARGE)

The Custom-Cut Baffle is designed to deliver optimum airflow and superior cutting performance in any type of grass. The Custom-Cut Baffle can be raised or lowered to precisely tailor the deck's performance for the type of grass being cut. The baffle can be set in seven (7) different positions for optimum performance.

- A. 3-1/2" or 3-3/4" Position (See Figure 6-8). For very tall, wiry or tough-to-cut grass.
- B. 4" (factory setting), 4-1/4" or 4-1/2" Position (See Figure 6-8). For general purpose cutting. This gives the best mix of cutting performance in all types of grass.
- C. 4-3/4" or 5-1/4" Position (See Figure 6-8). Placing the baffle in either the 4-3/4" or 5-1/4" setting will enhance fall cutting (leaf pickup) and reduce cutter deck "blowout".

To adjust the Custom-Cut Baffle height:


- 1. Place the cutter deck in the transport position.
- 2. Remove the hardware securing the Custom-Cut Baffle to the cutter deck.

### - NOTE -

Hardware location used in the illustrations are for reference only. Location of hardware may vary depending on cutter deck size.

- 3. Move the Custom-Cut Baffle to desired position. See Figure 6-8.
- Reinstall the mounting hardware. Torque hardware to 39 ft-lbs.



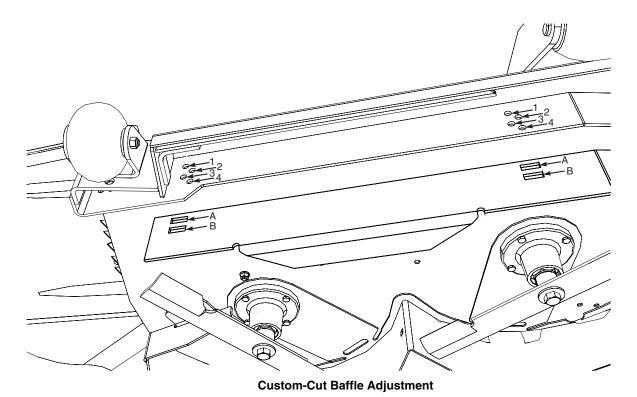

Mounting Slot Selected		<b>Mounting Hardware Location</b>					
Slot "A"	Hole 1	Hole 2	Hole 3	Hole 4			
Height (inches)	3-3/4"	4-1/4"	4-3/4"	5-1/4"			
Slot "B"		Hole 2	Hole 3	Hole 4			
Height (inches)		3-1/2"	4"	4-1/2"			

Figure 6-8. 7-Position Custom-Cut Baffle Adjustment



### 6.9 ADJUSTING THE STEERING DAMPNERS

The steering dampner adjustment can be made to increase or decrease the dampening affect for smooth, precise steering control. There are three locations on the steering control levers that allow the operator to adjust the dampening affect of the steering control based on cutting conditions.

- 1. Top Mounting Location (Figure 6-9). Used for the highest dampening affect on the steering controls.
- 2. Middle Mounting Location (Figure 6-9). Used for average dampening affect on the steering controls.
- 3. Bottom Mounting Location (Figure 6-9). Used for the lowest dampening affect on the steering controls.

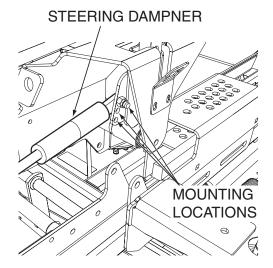


Figure 6-9. Steering Dampner Adjustment

### 6.10 ELECTRIC CLUTCH ADJUSTMENT

The electric clutch serves two functions in the operation of the mower. In addition to starting and stopping the power flow to the cutter blades, the clutch also acts as a brake to assist in stopping blade rotation when the PTO is switched off or the operator presence circuit is interrupted.

When the clutch is disengaged, the air gap between the armature and rotor must be adjusted to fifteen thousandths of an inch, 0.015, for proper operation. The airgap adjustment is made at three bolts on the clutch. There are three inspection windows, one next to each adjusting bolt. See Figure 6-10.

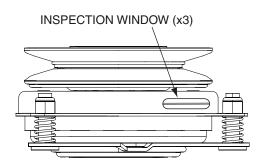


Figure 6-10. Clutch Air Gap Adjustment

- 1. Locate the inspection windows on the clutch.
- 2. Place a 0.015 feeler gauge in the slot between the rotor and the armature.
- Tighten or loosen the adjusting bolt as needed to acheive the 0.015 inch airgap. See Figure 6-11. Perform this operation at all three inspection windows.

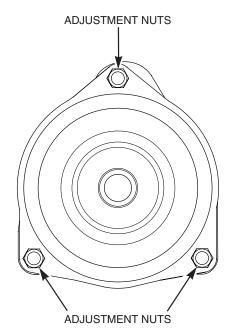


Figure 6-11. Clutch Air Gap Adjustment

This adjustment should be done every 500 hours of operation or annually, whichever comes first. In cases where the machine is heavily used, airgap settings should be checked more often.

If the air gap is too narrow, the clutch armature may drag when disengaged, resulting in premature failure.

If the air gap is too wide, the clutch may be slow to engage as the magnet must pull the armature in from a greater distance.



## **MAINTENANCE**

### 7.1 MAINTENANCE CHART - RECOMMENDED SERVICE INTERVALS

HOURS								
BREAK-IN (FIRST 10)	8	20	40	100	200	500	PROCEDURE	COMMENTS
Х							Check all hardware for tightness	
Х							Check hydraulic oil level	See paragraph 7.3
Х							Check all belts for proper alignment	See paragraph 7.8
Х							Change engine oil and filter	See paragraph 7.4
	Х						Check hydraulic fittings and hoses for leaks	Use extreme caution when checking the hydraulic hoses. See paragraph 2.7
	Χ						Check engine oil level	See paragraph 7.4
	Х						*Clean mower	See paragraph 7.11
	Х						Check condition of blades	See paragraph 7.9
	Х						Apply grease to fittings	See paragraph 7.2
	Х						Check tire pressure	See paragraph 7.10
	Х						Inspect seat belt for wear or damage	See paragraph 2.6
	Х						Check the operator interlock system	See paragraph 4.3
		Х					Change engine oil and filter	See paragraph 7.4
			Х				Check battery and clean battery posts and cables	See paragraph 7.7
			Х				Inspect pump drive belt. Replace every 400 hours or 2 years, whichever occurs first	See paragraph 6.5 & 7.8
			Х				Check belts for proper alignment	See paragraph 7.8
				Х			Check conditions of fuel lines	
				Х			Apply grease to fittings	See paragraph 7.2
				Х			Change engine oil	See paragraph 7.4
				Х			Drain hydraulic system and replace hydraulic oil (initial change)	Use SAE 20W50 Motor Oil. See paragraph 7.3
				Х			*Clean air cleaner element	See paragraph 7.6

<sup>\*</sup> Perform these maintenance procedures more frequently under extreme dusty or dirty conditions



### MAINTENANCE CHART - RECOMMENDED SERVICE INTERVALS (CONT'D)

HOURS							
BREAK-IN (FIRST 10)	8	40	100	200	500	PROCEDURE	COMMENTS
				Х		Apply grease to fittings	See paragraph 7.2
				Х		Check hardware for tightness	
				Х		Change engine oil filter	See paragraph 7.4
				Х		Check hydraulic oil level	See paragraph 7.3
					Х	Replace engine fuel filter	See paragraph 7.5
					Х	Drain hydraulic system and replace hydraulic oil	Use SAE 20W50 Motor Oil. See paragraph 7.3
					Х	Replace hydraulic oil filter	See paragraph 7.3
					Х	Adjust electric PTO clutch	See paragraph 6.10

### 7.2 LUBRICATION

### **GREASE FITTING LUBRICATION CHART (SEE FIGURE 7-1)**

LOCATION	LUBRICATION INTERVAL	LUBRICANT	NO. OF PLACES
1 Caster Wheel Pivot *	500 Hours/Yearly	Chassis Grease	2
2 Caster Wheel Bearings	100 Hours/Monthly	Chassis Grease	2
3 LOW / HIGH Speed Actuator	200 Hours/Monthly	Chassis Grease	2
4 Cutter Deck Bellcranks	100 Hours/Bi-Weekly	Chassis Grease	4
5 Cutter Deck Pusharms	100 Hours/Bi-Weekly	Chassis Grease	2
6 Cutter Deck Spindle	40 Hours/Weekly	+Lithium MP White Grease 2125	3
7 Brake Handle	200 Hours/Monthly	Chassis Grease	1

+ Compatible Greases: Mobilgrease XHP 222

Exxon Mobil Ronex MP Exxon Mobil Unirex EP2

\* **PROCEDURE:** Remove grease cap, part number 484195. Remove plug, part number 482028-01, and install grease zerk. Apply grease to the fitting until new grease appears at the top of the caster extension. Remove the grease zerk and reinstall the plug. Reinstall the grease cap. Special tool, part number 47007, is recommended for use in the installation of the grease cap.



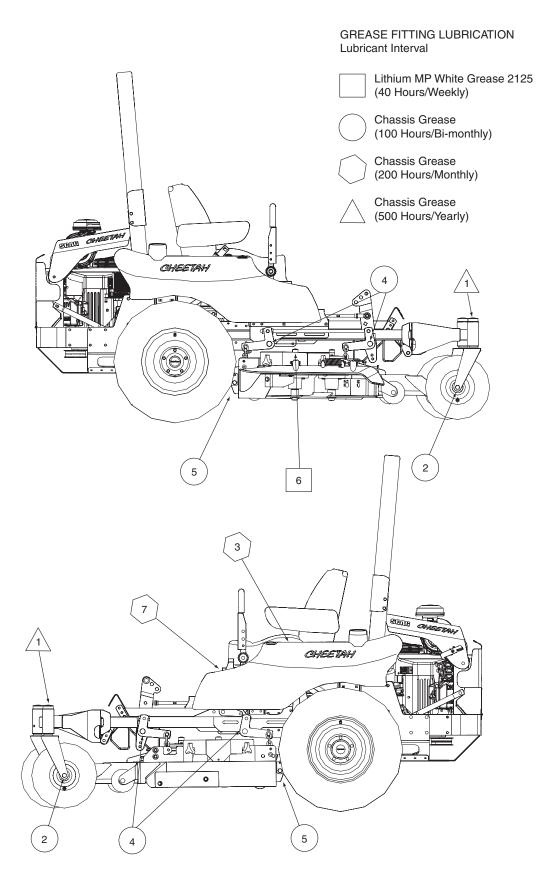


Figure 7-1. Lubrication Fitting Points



### 7.3 HYDRAULIC SYSTEM

### A. CHECKING HYDRAULIC OIL LEVEL

The hydraulic oil level should be checked after the first 10 hours of operation. Thereafter, check the oil after every 200 hours of machine operation or monthly, whichever occurs first.

#### - IMPORTANT -

If the oil level is consistently low, check for leaks and correct immediately.

- 1. Wipe dirt and contaminants from around the hydraulic level indicator window.
- Visually check the level of hydraulic oil. Hydraulic oil must be within the center of the wide postion of the indicator window when the machine is cold. See Figure 7-2. If the fluid is low, add 20W50 motor oil. DO NOT overfill; (overfilling the oil reservoir may cause oil seepage around the cap area).

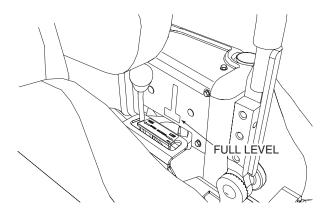


Figure 7-2. Hydraulic Oil Reservoir


### **B. CHANGING HYDRAULIC OIL AND FILTER**

The hydraulic oil should be changed after the first 100 hours of operation. Thereafter, the hydraulic oil should be changed every 500 hours or annually, whichever occurs first. The oil should also be changed if the color of the fluid has become black or milky. A black color and/or a rancid odor usually indicates possible overheating of the oil, and a milky color usually indicates water in the hydraulic oil.

### - IMPORTANT -

The hydraulic oil should be changed if you notice the presence of water or a rancid odor to the hydraulic oil.

- 1. Park the mower on a level surface and stop the engine.
- Position a floor jack under the rear of the machine. Raise the machine and support it to prevent it from falling. Block the caster wheels to prevent the machine from moving.
- 3. Place a suitable container (capable of holding 6 quarts) under the RH hydraulic axle assembly. Remove the cover over the hydraulic reservoir located on the LH fuel tank. Remove the fill cap from the reservoir and the drain plug from the bottom of the RH hydraulic axle assembly. See Figure 7-3. Allow the fluid to drain into the container and properly discard it.

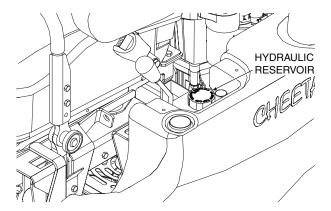

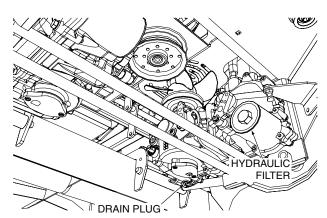


Figure 7-3. Hydraulic Oil Filter and Drain Plug

- 4. Re-install the drain plug, torque to 32 to 42 in/lbs and remove the hydraulic filter assembly from the RH hydraulic axle.
- Place the container (capable of holding 6 quarts) under the LH hydraulic axle assembly. Remove the drain plug from the bottom of the LH hydraulic axle assembly. See Figure 7-3. Allow the fluid to drain into the container and properly discard it.



- 6. Re-install the drain plug and remove the hydraulic filter assembly from the LH hydraulic axle.
- 7. Install new hydraulic filters in the RH and LH hydraulic axles.
- 8. Remove the purge port plug next to the inlet fitting on both axles. See Figure 7-4.

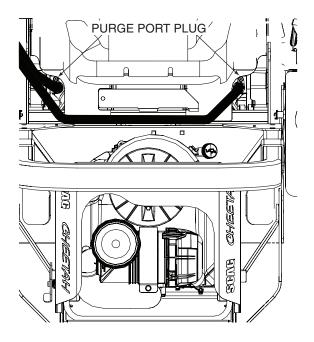


Figure 7-4. Axle Purge Port Plugs

 Fill the hydraulic reservoir with 20w50 motor oil until the oil just appears at each axle purge port. Approximately 10 quart capacity. Reinstall the purge port plugs and torque to 32 to 42 in/lbs.

### -NOTE-

The left side axle will fill with oil first using approximately 5 quarts of oil. Reinstall the purge port plug in the left axle and continue to fill the hydraulic system through the hydraulic reservoir. The right side axle should fill up to the purge port after adding an additional 5 quarts of oil. Reinstall the purge port plug on the right axle and fill the hydraulic expansion reservoir to the proper level as explained in Section 7.3.

- 10. Replace the reservoir fill cap and cover.
- 11. Start the engine and operate the steering control levers forward and backward for two minutes to purge the air out of the hydraulic system. Check the oil level in the reservoir. If necessary, add oil to the reservoir.

### 7.4 ENGINE OIL

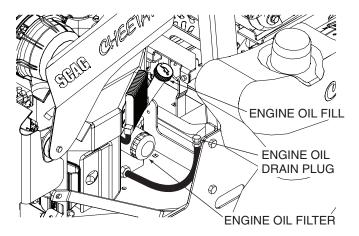


Figure 7-5. Engine Oil Fill/Dipstick, Filter and Drain Locations

### A. CHECKING ENGINE CRANKCASE OIL LEVEL

The engine oil level should be checked after every 8 hours of operation or daily as instructed in the Engine Operator's Manual furnished with this mower.

### **B. CHANGING ENGINE CRANKCASE OIL**

After the first 20 hours of operation, change the engine crankcase oil and replace the oil filter. Thereafter, change the engine crankcase oil after every 100 hours of operation or bi-weekly, whichever occurs first. Refer to the Engine Operator's Manual furnished with this mower for instructions.

### C. CHANGING ENGINE OIL FILTER

After the first 20 hours of operation, replace the engine oil filter. Thereafter, replace the oil filter after every 200 hours of operation or every month, whichever occurs first. Refer to Engine Operator's Manual for instructions. See Figure 7-4.



### 7.5 ENGINE FUEL SYSTEM

# **A DANGER**

To avoid injury from burns, allow the mower to cool before removing the fuel tank cap and refueling.

### A. FILLING THE FUEL TANKS

Fill to the bottom of the filler neck insert (approximately 8 gallons per fuel tank indicating Full (F) on the fuel gauge) at the beginning of each operating day. See Figure 7-6. Do not overfill. Use clean, fresh unleaded gasoline with a minimum octane rating of 87 and a maximum of 10% Ethanol.

DO NOT use E85 Fuel. Using E85 Fuel will cause severe damage to the engine.

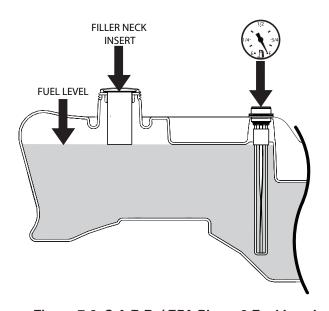


Figure 7-6. C.A.R.B. / EPA Phase 3 Fuel Level

To avoid personal injury or property damage, use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive.

- 1. Extinguish all cigarettes, cigars, pipes and other sources of ignition.
- 2. Use only an approved gasoline container.
- 3. Never remove the gas cap or add fuel with the engine running. Allow the engine to completely cool before fueling.

- Never fuel the machine indoors or in an enclosed trailer.
- 5. Never store the machine or fuel container where there is an open flame, spark or pilot light such as on a water heater or other appliances.
- Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before filling.
- 7. Remove the machine from the truck or trailer and fuel on the ground. If this is not possible, then refuel the machine with a portable container, rather than from a gasoline dispenser nozzle.
- 8. Keep the nozzle in contact with the rim of fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
- 9. If fuel is spilled on clothing, change clothing immediately and wash affected skin.
- 10. Replace gas cap and tighten securely. Tighten the fuel cap until it ratchets.

# B. REPLACING IN-LINE FUEL FILTER ELEMENTS

The engine fuel filter should be replaced after every 500 hours of operation or annually, whichever occurs first. See Figure 7-7.

- 1. Close the shut-off valve.
- 2. Remove and replace the engine fuel filter. Open the fuel shut-off valve.

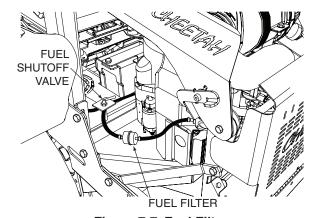


Figure 7-7. Fuel Filter



### 7.6 ENGINE AIR CLEANER

# A. CLEANING AND/OR REPLACING AIR CLEANER ELEMENT

For any air cleaner, the operating environment dictates the air cleaner service periods. Inspect and clean the air cleaner element after every 100 hours of operation or bi-weekly, whichever occurs first and replace the element if required.

#### - NOTE -

In extremely dusty conditions it may be necessary to check the element once or twice daily to prevent engine damage.

- Release the two latches securing the air cleaner cover to the air cleaner assembly and remove the cover. Set aside.
- 2. Remove the air cleaner and inspect.
- 3. Clean or replace the air cleaner and foam pre-cleaner as recommended by the engine manufacturer.
- 4. Replace the air cleaner cover and be sure to snap the two latches closed.

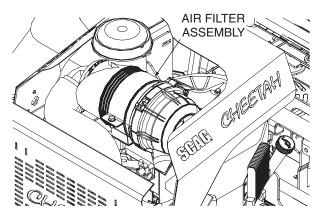


Figure 7-8. Air Filter Assembly

#### 7.7 BATTERY

# **WARNING**

Lead-acid batteries produce flammable and explosive gases. To avoid personal injury when checking, testing or charging batteries, DO NOT use smoking materials near batteries. Keep arcs, sparks and flames away from batteries. Provide proper ventilation and wear safety glasses.

# **A** WARNING

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to cause cancer and reproductive harm. Wash hands after handling.

## **WARNING**

Electric storage battery fluid contains sulfuric acid which is POISON and can cause SEVERE CHEMICAL BURNS. Avoid contact of fluid with eyes, skin, or clothing. Use proper protective gear when handling batteries. DO NOT tip any battery beyond 45° angle in any direction. If fluid contact does occur, follow first aid suggestions below.

### BATTERY ELECTROLYTE FIRST AID

External Contact — Flush with water.

Eyes — Flush with water for at least 15 minutes and get medical attention immediately.

Internal — Drink large quantities of water. Follow with Milk Of Magnesia, beaten egg, or vegetable oil. Get medical attention immediately. In case of internal contact, DO NOT give fluids that would induce vomiting.



### A. CHARGING THE BATTERY

Refer to the battery charger's manual for specific instructions.

Under normal conditions the engine's alternator will have no problem keeping a charge on the battery. If the battery has been completely discharged for a long period of time, the alternator may not be able to recharge the battery, and a battery charger will be required.

DO NOT charge a frozen battery. It may explode and cause injury. Let the battery warm before attaching a charger.

Whenever possible, remove the battery from the mower before charging and make sure the electrolyte covers the plates in all cells.

# **A WARNING**

BATTERIES PRODUCE EXPLOSIVE GASES. Charge the battery in a well ventilated space so gases produced while charging can dissipate.

Charging rates between 3 and 50 amperes are satisfactory if excessive gassing or spewing of electrolyte does not occur or the battery does not feel excessively hot (over 125°F). If spewing or gassing occurs or the temperature exceeds 125°F, the charging rate must be reduced or temporarily stopped to permit cooling.

### **B. JUMP STARTING**

- The booster battery must be a 12 volt type. If a vehicle is used for jump starting, it must have a negative ground system.
- When connecting the jumper cables, connect the positive cable to the positive battery post, then connect the negative cable to the negative battery post.

### 7.8 DRIVE BELTS

All drive belts are spring-loaded and self-tensioning, however after the first 2, 4, 8 and 10 hours of operation, the belts should be checked for proper alignment and wear. Thereafter, check the belts after every 40 hours of operation or weekly, whichever occurs first.

#### - NOTE -

If you experience frequent belt wear or breakage, see your authorized Scag service center for belt adjustment.

# **A** WARNING

If the pump drive belt fails, steering control will be lost which could result in serious injury or death. Replace the pump drive belt as needed or every 400 hours / 2 years, whichever occurs first.

### 7.9 CUTTER BLADES

### A. BLADE INSPECTION

- 1. Remove the ignition key before servicing the blades.
- Raise the mower deck to the highest position. Place the lanyard pin in the highest cutting height position to prevent the cutter deck from falling.

# **A WARNING**

Always wear proper hand and eye protection when working with cutter blades.

- 3. Check the cutter blades for straightness. If the cutter blades appear bent, they will need to be replaced.
- Check the cutter blades for wear. If any part of the cutter blade is worn to 1/2 its original thickness, replace the cutter blade.

# **A** WARNING

Do not attempt to straighten a bent blade, and never weld a broken or cracked blade. Always replace it with a new blade to assure safety.

- Check the cutter blades for gouges. If there are gouges on the top or bottom surfaces of the cutter blade, replace the cutter blade.
- If a blade cutting edge is dull or nicked, it should be sharpened. Remove the blades for sharpening. See "Blade Replacement".



#### - NOTE -

Keep the blades sharp. Cutting with dull blades not only yields a poor mowing job, but slows the cutting speed of the mower and causes extra wear on the engine and the blade drive by pulling hard.

#### **B. BLADE SHARPENING**

### - NOTE -

If possible, use a file to sharpen the blade. Using a wheel grinder may burn the blade.

#### - NOTE -

DO NOT sharpen the blades beyond 1/3 of the width of the blade. See Figure 7-9.

1. Sharpen the cutting edge at the same bevel as the original. See Figure 7-9. Sharpen only the top of the cutting edge to maintain sharpness.

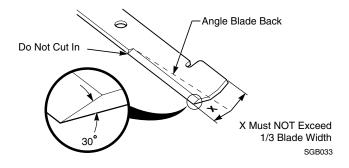


Figure 7-9. Blade Sharpening

 Check the balance of the blade. If the blades are out of balance, vibration and premature wear can occur. The cutter blades should be balanced to 1-1/2 oz-in. See your authorized Scag dealer for blade balancing or special tools, if you choose to balance your own blades.

### C. BLADE REPLACEMENT



Always wear proper hand and eye protection when working with cutter blades.

- 1. Remove the ignition key before replacing the blades.
- 2. Raise the mower deck to the highest position. Place the lanyard pin in the highest cutting height position to prevent the cutter deck from falling.
- Secure the cutter blades to prevent them from rotating, (use the optional Blade Buddy tool P/N 9212, to assist in securing the cutter blades), remove the nut from the blade attaching bolt. Remove the cutter blade, bolt and spacer from the spindle shaft. See Figure 7-10.

#### - NOTE -

The front of the machine will have to be raised slightly to remove the blade bolt from the cutter spindle.



Inspect the cutter blade spacer(s) and washer for wear and/or cupping. Replace the worn parts. Worn spacer(s) and/or washer will not allow proper tightening of the cutter blade and can lead to cutter blade failure, personal injury or property damage.

4. To install the new cutter blade, put the flat washer onto the blade bolt and slide the bolt into the hole in the cutter blade.



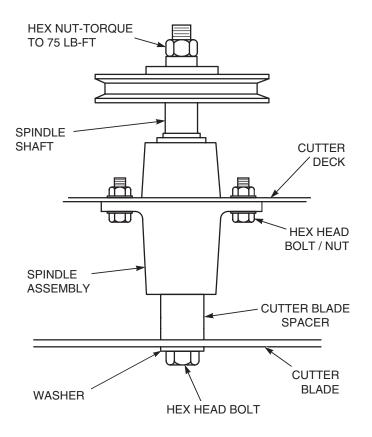


Figure 7-10. Blade Replacement

### - NOTE -

Be sure that the blade is installed with the lift wing toward the top.

- 5. Install the spacer onto the blade bolt and insert the bolt into the cutter spindle shaft.
- 6. Install the hex nut to the blade bolt at the top of the cutter spindle. Secure the blades from rotating and torque to 75 lb-ft. See Figure 7-10.

### **7.10 TIRES**

Check the tire pressures after every 8 hours of operation or daily.

Caster Wheels Flat Free Drive Wheels 12 PSI

### 7.11 BODY, DECK, AND UPHOLSTERY



Do not wash any portion of the equipment while it is hot. Do not wash the engine; use compressed air.

- After each use, wash the mower and cutter deck.
  Use cold water and automotive cleaners. Do not use
  pressure cleaners.
- 2. Do not spray electrical components.
- 3. Use a mild soap solution or a vinyl/rubber cleaner to clean the seat.
- 4. Repair damaged metal surfaces using Scag touchup paint available from your authorized Scag dealer. Wax the mower for maximum paint protection.



### **ILLUSTRATED PARTS LIST**

### 8.1 SCAG APPROVED ATTACHMENTS AND ACCESSORIES

Attachments and accessories manufactured by companies other than Scag Power Equipment are not approved for use on this machine.

Scag approved attachments and accessories:


- GC-3B (p/n 900S) Requires a 900X (61 STT/SCZ Install Kit)
- GC-CS (p/n 900T) Requires a 900X (61 STT/SCZ Install Kit)
- Mulch Plate (p/n 9288, 920F)
- Hurricane Mulch (p/n 9285, 920E)
- SCZ/STT-OCDC-61V (p/n 923D)
- SCZ Hitch (p/n 920X)
- SCZ Lights (p/n 921A)
- SCZ Striper (p/n 923G) Requires a 921W Install Kit
- Air Filter Indicator (922U)
- Blade Buddy (p/n 9212)



## **NOTES**



### **61V & 72V CUTTER DECKS**

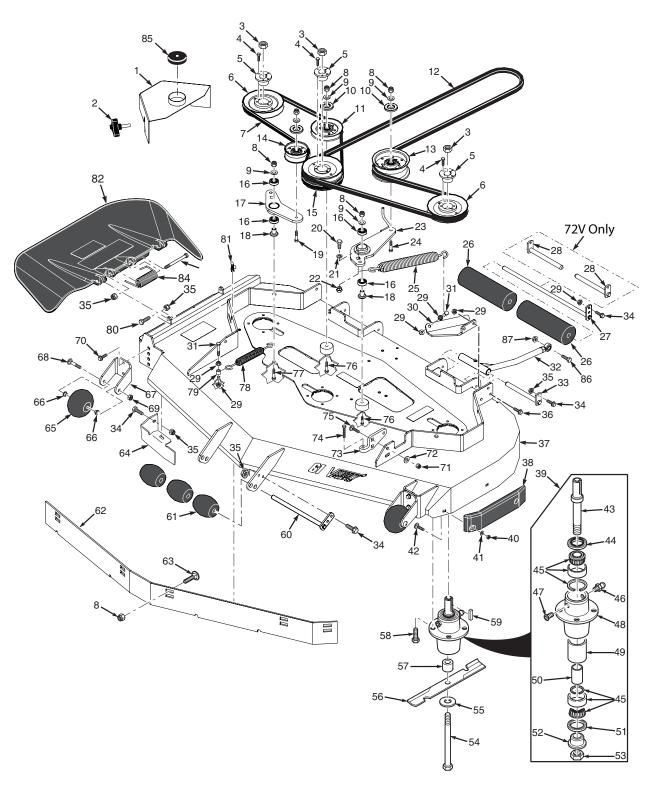




## **61V & 72V CUTTER DECKS**

Ref. No.	Part No.	Description	61	72	]	Ref. No.	Part No.	Description	61	72
1	462407	Belt Cover, LH 61V	х		ÌΓ	45	481022	Bearing Assembly	х	х
· .	462408	Belt Cover, RH 61V	X		ΙI	46	48114-04	Grease Fitting	X	x
	462409	Belt Cover, 72V	"	x	ΙI	47	48677	Relief Fitting, Spindle	х	×
2	481625-01	Knob w/Stud	x	x	ΙI	48	43644	Spindle Housing	х	×
3	04020-09	Nut, 5/8-11 UNC	x	l x	ΙI	49	43312	Spacer, Outside	х	x
4	04001-172	Bolt, Hex Head 1/4-20 x 1"	X	X	ΙI	50	43296	Spacer, Inside	x	×
5	48926	Tapered Hub, 1.125" Bore	X	X	ΙI	51	481025	Seal, Bottom	х	×
6	483286	Pulley, 6.32" Dia.	X		ΙI	52	43297	Spindle Bushing	х	l x
`	484050	Pulley, 7.50" Dia.	''	l x	ΙI	53	481035	Nut, Special 1-1/16 - 18	x	×
7	483157	Belt	×		ΙI	54	04001-41	Bolt, Hex Head 5/8-11 x		
•	484159	Belt		x	ΙI			9-1/2"	x	l x
8	04021-09	Nut, Elastic Stop 3/8-16	×	X	ΙI	55	04043-06	Flatwasher, 5/8688 x 1.75		
9	04043-04	Flatwasher, 3/8391 x .938			ΙI			x .134 HD	х	l x
`		x .105	×	l x	ΙI	56	482881	Cutter Blade, 21"	x	
10	424367	Dust Shield	X	X	ΙI		482882	Cutter Blade, 24-1/2"		×
11	48181	Pulley, Idler	X	X	ΙI	57	43590	Spacer, Spindle Bottom	x	l x
12	483741	Belt, Deck Drive	X	"	ΙI	58	04001-176	Bolt, Hex Head 5/16-18 x		
	484088	Belt, Deck Drive		x	ΙI			1-3/4" Grade 8	х	l x
13	483210	Pulley, 5" Idler	×	X	ΙI	59	04063-08	Key, 1/4 x 1/4 x 2"	x	×
14	483415	Pulley, 3-1/2" Idler	X	X	ΙI	60	45944	Shaft Weldment	х	×
15	483287	Pulley, 6.32" Dia. Double	''	"	ΙI	61	482295	Wheel, Anti-Scalp	х	l x
		Groove	x		ΙI	62	424841	Baffle, Flange - 61V	х	
	484051	Pulley, 7.50" Dia. Double	''		ΙI		424917	Baffle, Flange - 72V		l x
		Groove		x	ΙI	63	04003-23	Bolt, Carriage 3/8-16 x 1"	х	l x
16	48224	Bearing	x	l x	ΙI	64	424209	Baffle, Turbo - 61V	х	
17	461946	Idler Arm Assy. (incl. #16)	X	X	ΙI		*425625	Discharge Baffle 61V	х	
18	43689	Pivot, Idler	x	l x	ΙI		424856	Baffle, Turbo - 72V		x
19	04001-31	Bolt, Hex Head 3/8-16 x	''	"	ΙI		*423958	Discharge Baffle 72V		l x
		2-1/2"	x	x	ΙI	65	481632	Wheel, Anti-Scalp	х	x
20	04001-17	Bolt, Hex Head 7/16-14 x 1"	x	x	ΙI	66	48100-15	Bushing, .376 ID Oilite	х	x
21	04030-05	Lockwasher, 7/16" Spring	x	x	ΙI	67	422478	Bracket, Anti-Scalp Wheel	х	x
22	43686	Boss, Spring Anchor	x	x	ΙI	68	04003-26	Bolt, Carriage 3/8-16 x 4"	х	x
23	462269	Idler Arm Assy. (incl. #16)	x	x	ΙI	69	04021-05	Nut, Center Lock 3/8-16	х	x
24	04001-54	Bolt, Hex Head 3/8-16 x 3"	x	x	ΙI	70	04017-27	Bolt, Hex Head 3/8-16 x 1"		
25	483246	Spring, LH Cutter Deck	x	x	ΙI			Serrated Flange	х	x
26	48038	Guide Roller	x	x	ΙI	71	04021-11	Nut, Elastic Stop 7/16-14	х	x
27	451118	Shaft Weldment	x		ΙI	72	04040-07	Flatwasher, 1/2531 x 1.062		
28	45944	Shaft Weldment		x	ΙI			x .095	х	x
29	04019-04	Nut, Serrated Flange 3/8-16	х	x	ΙI	73	461929	Lever Assembly, Deck Level	х	x
30	425335	Spring Mount, SCZ	х	x	ΙI	74	483167	Bolt, Deck Adjust	х	x
31	04001-136	Bolt, Hex Head 3/8-16 x			ΙI	75	04003-40	Bolt, Carriage 7/16-14 x		
		1-1/2" Grade 8	x	x	ΙI			1-1/4"	х	x
32	462225	Pusharm Assy., LH	х	х	ΙI	76	04001-54	Bolt, Hex Head 3/8-16 x 3"	Х	X
	462226	Pusharm Assy., RH	х	х	ΙI	77	04001-46	Bolt, Hex Head 3/8-16 x		
33	451240	Rod Weldment, Pusharm	х	x	ΙI			2-1/4"	Х	X
34	04001-09	Bolt, Hex Head 5/16-18 x 1"	х	х	ΙI	78	483703	Deck Spring	Х	X
35	04021-10	Nut, Elastic Stop 5/16-18	х	х	ΙI	79	43063	Spacer	Х	X
36	04001-19	Bolt, Hex Head 3/8-16 x 1"	X	X	ΙI	80	04001-12	Bolt, Hex Head 5/16-18 x		
37	462453	Cutter Deck w/Decals	х		ΙI			1-3/4"	Х	X
	462343	Cutter Deck w/Decals		X	ΙI	81	04110-03	U-Nut, 3/8-16	Х	X
38	483176	Wear Pad	X		ΙI	82	461846	Discharge Chute Assy. 61V	Х	
	483174	Wear Pad		X	ΙI		*462477	CA Discharge Chute Assy.	Х	
39	461663	Spindle Assembly	X	X	ΙI		462132	Discharge Chute Assy. 72V		X
40	04021-04	Nut, Center Lock 5/16-18	x	x			*462478	CA Discharge Chute Assy.		Х
41	04040-04	Flatwasher, 5/16344 x .688				83	04001-108	Bolt, Hex Head 5/16-18 x	х	X
	[	x .065	x	x		_	1	4-1/2"		
42	04003-12	Bolt, Carriage 5/16-18 x 3/4"	x	x		84	483378	Spring, Discharge Chute	х	Х
43	43589	Shaft, Spindle	x	x		85	484368	Cap, Spindle	х	Х
44	481024	Seal, Top	X	x		86	04001-128	Bolt, Hex Head 5/8-11 x 3½"	Х	Х
	1				l l	87	04021-23	Nut, Centerlock, 5/8-11	х	Х

<sup>\* =</sup> California Models Only (not shown)



## 61RD CUTTER DECK

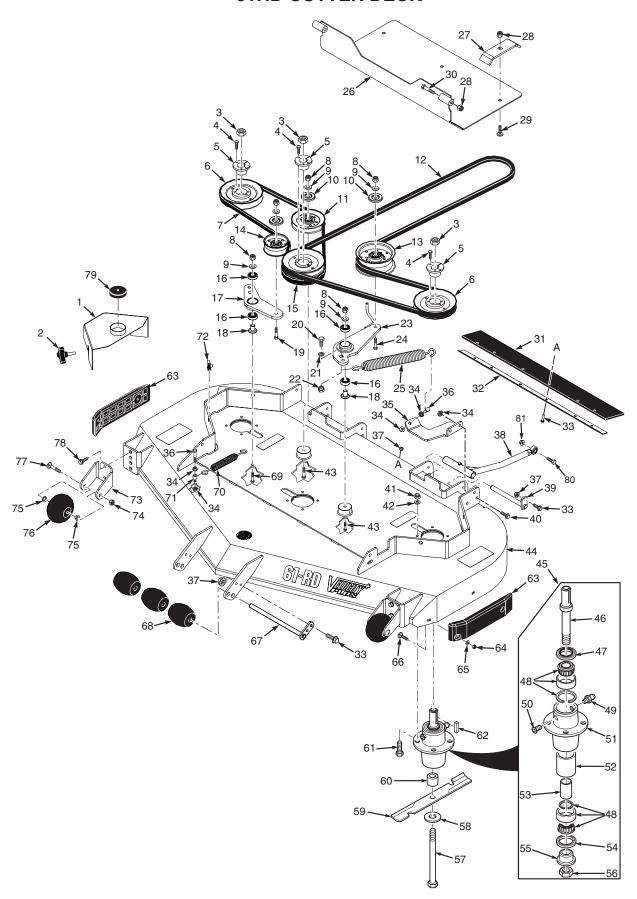




## 61RD CUTTER DECK

Ref. No.	Part No.	Description
	Part No.  462407 462408 481625-01 04020-09 04001-172 48926 483286 483157 04021-09 04043-04 424367 48181 483741 483210 483415 483287 48224 461946 43689 04001-31 04001-17 04030-05 43686 462269 04001-54 483246 452341 425897 04021-10 04003-38 04001-13 484557 425899 04001-09 04019-04 425335 04001-136 04021-10 462225 462226 451240 04001-19 04021-22 04030-03 04001-54 462505	Belt Cover, LH 61V Belt Cover, RH 61V Rob w/Stud Nut, 5/8-11 UNC Bolt, Hex Head 1/4-20 x 1" Tapered Hub, 1.125" Bore Pulley, 6.32" Dia. Belt Nut, Elastic Stop 3/8-16 Flatwasher, 3/8391 x .938 x .105 Dust Shield Pulley, Idler Belt, Deck Drive Pulley, 5" Idler Pulley, 6.32" Dia. Double Groove Bearing Idler Arm Assy. (incl. #16) Pivot, Idler Bolt, Hex Head 3/8-16 x 2-1/2" Bolt, Hex Head 7/16-14 x 1" Lockwasher, 7/16" Spring Boss, Spring Anchor Idler Arm Assy. (incl. #16) Bolt, Hex Head 3/8-16 x 3" Spring, LH Cutter Deck Weldment, Debris Shield Mounting Bracket, Shield Nut, Elastic Stop 5/16-18 Bolt, Carriage 5/16-18 x 1-1/2' Bolt, Hex Head 5/16-18 x 1-1/2' Bolt, Hex Head 5/16-18 x 1-1/2' Bolt, Hex Head 5/16-18 x 1" Nut, Serrated Flange 3/8-16 Spring Mount, SMCZ Bolt, Hex Head 3/8-16 x 1" Nut, Serrated Flange 3/8-16 Spring Mount, SMCZ Bolt, Hex Head 3/8-16 x 1-1/2" Grade 8 Nut, Elastic Stop 5/16-18 Pusharm Assembly, LH Pusharm Assembly, RH Rod Weldment, Pusharm Bolt, Hex Head 3/8-16 x 1" Nut, Elastic Stop 5/16-18 Grade 8 Lockwasher, 5/16" Bolt, Hex Head 3/8-16 x 3" Cutter Deck Assembly w/Decals SCZ-61RD

Ref.	Part No.	Description
45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 77 78 79 80 81	461663 43589 481024 481022 48114-04 48677 43644 43312 43296 481025 43297 481035 04001-41 04043-06 482881 43590 04001-176 04063-08 483176 04021-14 04040-04 04003-12 45944 482295 04001-46 483703 43063 04110-03 422478 04021-05 48100-15 481632 04003-26 04017-27 484368 04001-128 04001-128 04001-23	Spindle Assembly Shaft, Spindle Seal, Top Bearing Assembly Grease Fitting Relief Fitting, Spindle Spindle Housing Spacer, Outside Spacer, Inside Seal, Bottom Spindle Bushing Nut, Special 1-1/16 - 18 Bolt, Hex Head 5/8-11 x 9-1/2" Flatwasher, 5/8-688 x 1.75 x .134 HD Cutter Blade, 21" Spacer, Spindle Bottom Bolt, Hex Head 5/16-18 x 1-3/4" Grade 8 Key, 1/4 x 1/4 x 2" Wear Pad Nut, Center Lock 5/16-18 Flatwasher, 5/16344 x .688 x .065 Bolt, Carriage 5/16-18 x 3/4" Shaft Weldment Wheel, Anti-Scalp Bolt, Hex Head 3/8-16 x 2-1/4" Deck Spring Spacer U-Nut, 3/8-16 Bracket, Anti-Scalp Wheel Nut, Center Lock 3/8-16 Bushing, .376 I.D. Oilite Wheel, Anti-Scalp Bolt, Carriage 3/8-16 x 4" Bolt, Hex Head Serrated Flange 3/8-16 x 1" Cap, Spindle Bolt, Hex Head, 5/8-11 x 3½" Nut, Centerlock, 5/8-11



### **CUTTER DECK CONTROLS**

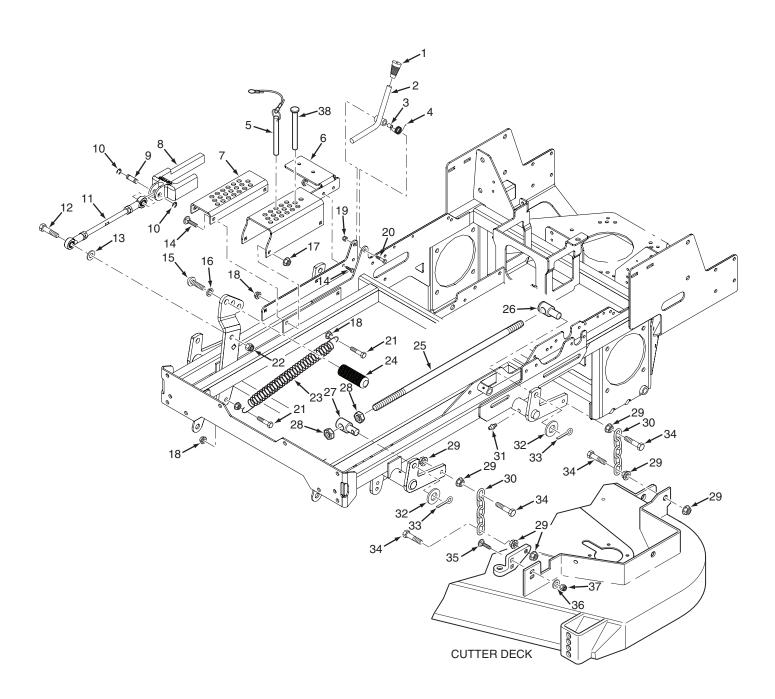




## **CUTTER DECK CONTROLS**

Ref. No.	Part No.	Description
1	481477	Grip, Deck Latch
2	462253	Deck Latch Assembly w/Grip
3	43668	Spacer, Deck Latch
4	484191	Spring, Torsion Return Lever
5	483345	Ring Pin Assembly w/Lanyard
6	425574	Adjustment Bracket, Upper Cut Height
7	452408	Adjustment Bracket, Lower Cut Height
8	485570	Slide, Height Adjustment
9	43487	Pin, Deck Lift
10	04050-10	Retaining Ring, 1/2" External "E"
11	484141	Linkage, Deck Lift
	481765	Rod End, 1/2-20 RH Female
	481766	Rod End, 1/2-20 LH Female
	04020-27	Nut, 1/2-20 UNF Jam
	04020-28	Nut, 1/2-20 UNF LH Jam
12	04001-72	Bolt, Hex Head 1/2-13 x 2"
13	04040-07	Flatwasher, 1/2531 X 1.062 X .095
14	*04001-09	Bolt, Hex Head 5/16-18 x 1"
	*04030-03	Lockwasher, 5/16" Spring
15	04105-01	Capscrew, 5/8-11 x 1-1/2"
16	04030-07	Lockwasher, 5/8" Spring
17	04019-03	Nut, Serrated Flange 5/16-18
18	04019-04	Nut, Serrated Flange 3/8-16
19	04021-09	Nut, Elastic Stop 3/8-16
20	04001-22	Bolt, Hex Head 3/8-16 x 2-3/4"
21	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Grade 8
22	04021-07	Nut, Elastic Stop 1/2-13
23	481598	Spring, Deck Lift
24	424504	Pedal, Foot Lift
25	04004-44	Stud, 5/8-11 x 22"
26	43526	Swivel Joint, LH
27	43527	Swivel Joint, RH
28	04020-09	Nut, 5/8-11 UNC
29	04019-04	Nut, Serrated Flange 3/8-16
30	482628	Chain Assy
31	48114-04	Grease Fitting, 1/4-28 Self Tap
32	04040-09	Flatwasher, 5/8" Cotter Pin, 3/16 x 1"
33	04061-07	
34 35	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2" Bolt, Carriage 7/16-14 x 1-1/4"
36	04003-40	Flatwasher, 7/16500 x 1.25 x .083
36	04040-11 04021-11	Nut, Elastic Stop 7/16-14
38	04021-11	Pin, Locking
36	04059-01	FIII, LOCKING
		1



### **SHEET METAL COMPONENTS**

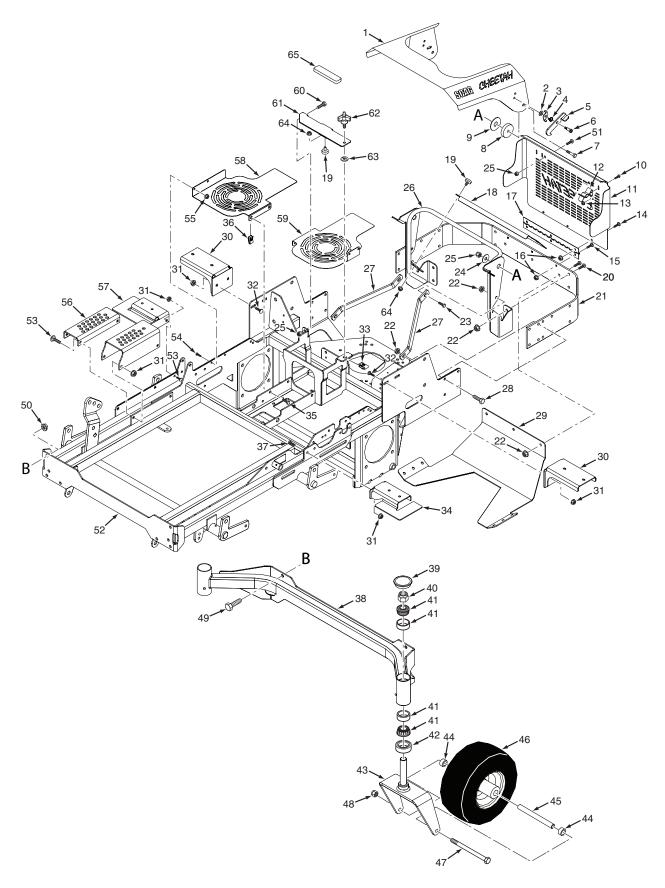




### **SHEET METAL COMPONENTS**

Ref. No.	Part No.	Description
	Part No.  462265 462916 462638 04040-05 424634 483507 424633 04009-07 04001-21 43740 483471 04010-30 425995 425996 484190 04021-17 04003-07 04003-02 04019-02 484143 425677 427781 481284 04104-01 425575 04019-04 04001-19 04041-11 04021-09 452223 452267 425408 04001-32 425579 426806 425350 04019-03 04003-12 04110-03 425573 04001-14 04110-01 04003-12 452193 452194 484195 04021-20 48668 481025 451416 43584 43583	Hood Assembly w/Decals - Kawasaki Hood Assembly w/Decals - Kohler Hood Assembly w/Decals - Briggs & Stratton Flatwasher, 3/8406 x .812 x .065 Lock, Hood Latch Spring, Hood Latch Latch, Hood Bolt, Shoulder Bolt, Hex Head 3/8-16 x 1-3/4" Spacer, Hood Disc, Anti-Friction Screw, #8-32 x 1/2" Belt Guard, Rear - Kawasaki Belt Guard, Rear - Kohler / Briggs & Stratton Spring Clip Nut, Elastic Stop #8-32 Bolt, Carriage 1/4-20 x 1/2" Bolt, Carriage 1/4-20 x 1/2" Bolt, Carriage 1/4-20 x 3/4" Nut, Serrated Flange 1/4-20 tlinge, Belt Cover ROPS Heatshield - Kawasaki / Kohler ROPS Heatshield - Briggs & Stratton Bumper, Rubber Button Head Capscrew, Torx 3/8-16 x 1" Bumper, Rear Nut, Serrated Flange 3/8-16 Bolt, Hex Head 3/8-16 x 1.5 x 7 Ga. Nut, Elastic Stop 3/8-16 Mount Wlmt, Hood - Kohler / Briggs & Stratton Brace, Hood Support Bolt, Hex Head 3/8-16 x 1-1/4" SCZ Skid Plate - Kawasaki SCZ Skid Plate - Kawasaki SCZ Skid Plate - Kohler / Briggs & Stratton Mounting Bracket, Fuel Tank Rear Nut, Serrated Flange 5/16-18 Bolt, Carriage 5/16-18 x 3/4" U-Nut, 3/8-16 Mounting Bracket, Fuel Tank Front Bolt, Hex Head 1/4-20 x 1" U-Nut, 3/8-16 Mounting Bracket, Fuel Tank Front Bolt, Hex Head 1/4-20 x 1" U-Nut, 3/8-16 Mounting Bracket, Fuel Tank Front Bolt, Hex Head 1/4-20 x 1" U-Nut, 1/4-20 Bolt, Carriage 5/16-18 x 3/4" Caster Support Weldment, 61V Caster Support Weldment, 61V Caster Support Weldment, 72V Cap, Grease Nut, Elastic Stop 1"-14 Bearing w/Race Seal, 2" OD x 1.625 Bore Yoke Weldment Spacer, Caster Wheel Sleeve, Caster Wheel

Ref. No.	Part No.	Description
	Part No.  9278  482621  48114-10  04001-167  04021-07  04001-28  04117-05  04108-03  462563  04001-09  04030-03  04001-01  04019-02  452408  425574  425300  425299  04001-19  425422  481625-01  04024-02  04019-03  48661	Caster Wheel Assy. Bearing Grease Fitting Bolt, Hex Head 1/2-13 x 9-1/2" Nut, Elastic Stop 1/2-13 Bolt, Hex Head 7/16-14 x 1-1/4" Nut, 7/16-14 Flange Elastic Stop Capscrew, Button Head 3/8-16 x 1-1/4" Mainframe Assy. w/Decals Bolt, Hex Head 5/16-18 x 1" Lockwasher, 5/16" Spring Bolt, Hex Head 1/4-20 x 3/4" Nut, Serrated Flange 1/4-20 Adjustment Bracket, Lower Cut Height Adjustment Bracket, Upper Cut Height Fan Cover, RH Fan Cover, LH Bolt, Hex Head 3/8-16 x 1" Cover, Battery Box Knob w/Stud Nut, Push-On 3/8" Nut, Serrated Flange 5/16-18 Pad, Rubber



## **SCZ ROLL-OVER PROTECTION SYSTEM**

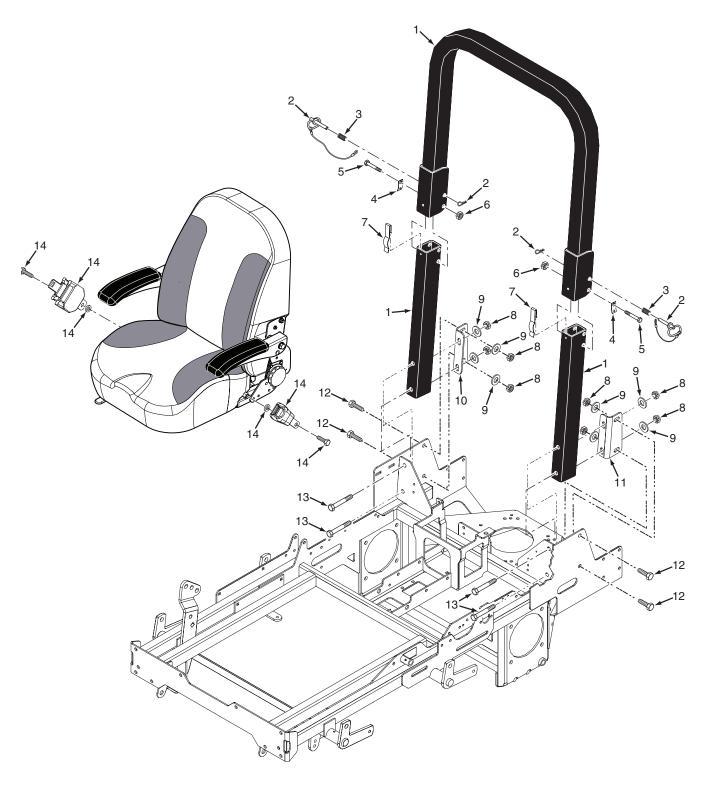




## **SCZ ROLL-OVER PROTECTION SYSTEM**

Ref. No.	Part No.	Description
1	462246	ROPS, Foldable SCZ
2	484168	Pin Assembly (incl. #3, #4)
3	484170	Spring, ROPS
4	484169	Clip, ROPS
5	04001-90	Bolt, Hex Head 1/2-13 x 3-1/4"
6	04021-07	Nut, Elastic Stop 1/2-13
7	484167	Spring Clip, ROPS
8	04021-19	Nut, Center Lock 1/2-13
9	04040-13	Flatwasher, 1/2562 x 1.375 x .109
10	425341	ROPS Mount, RH Rear
11	425340	ROPS Mount, LH Rear
12	04001-70	Bolt, Hex Head 1/2-13 x 1-1/4"
13	04001-194	Bolt, Hex Head 1/2-13 x 4-1/4"
14	484262	Seat Belt Kit, Retractable - SCZ



## SCZ SEAT ASSEMBLY

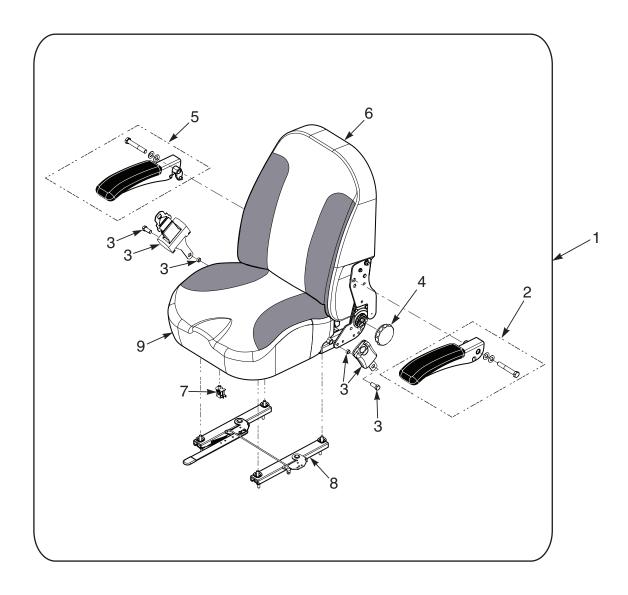


Ref. No.	Part No.	Description
1	486071	Seat Assembly - SCZ
2	484260	Armrest Kit, LH
3	484262	Seat Belt Kit
4	484267	Recliner Knob
5	484261	Armrest Kit, RH
6	486070	Back Cover
7	481638	Seat Switch
8	484265	Track Kit
9	486069	Cushion Cover



## **NOTES**



## **SCZ SUSPENSION SYSTEM**

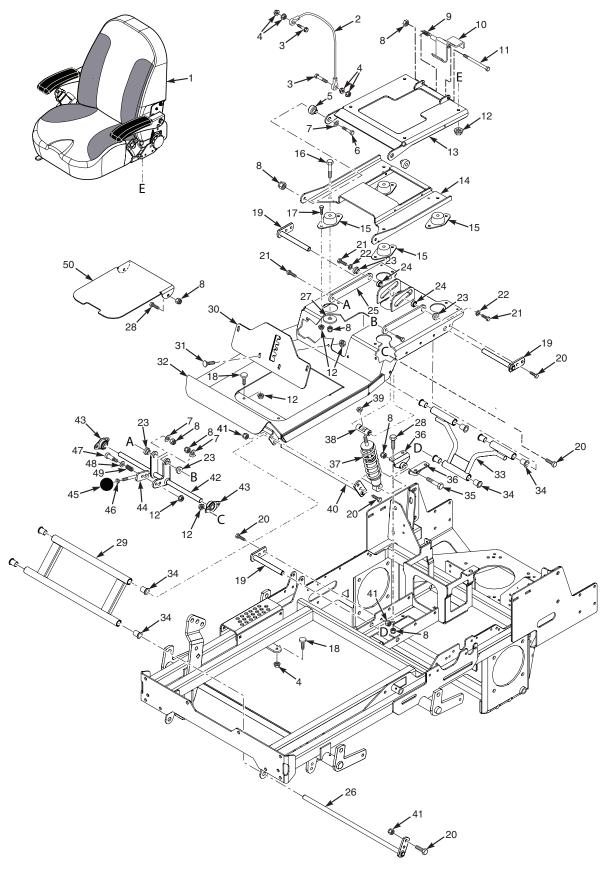




### **SCZ SUSPENSION SYSTEM**

Ref. No.	Part No.	Description
1	486071	Seat Assembly
2	483559	Cable, Seat Stop
3	04001-59	Bolt, Hex Head 1/4-20 x 1-1/4"
4	04019-02	Nut, Serrated Flange 1/4-20
5	43606	Sleeve, Seat Base Mount
6	04001-45	Bolt, Hex Head 3/8-16 x 2"
7	04041-07	Flatwasher, 3/8391 x .938 x .105
8	04021-09	Nut, Elastic Stop 3/8-16
9	483371	Spring, Seat Latch
10	452143	Latch Weldment, Seat
11	04001-100	Bolt, Hex Head 3/8-16 x 6"
12	04019-03	Nut, Serrated Flange 5/16-18
13	452147	Seat Plate Weldment
14	462262	Seat Mounting Plate Weldment w/Decal
15	484148	Isolator, Seat
16	04001-46	Bolt, Hex Head 3/8-16 x 2-1/4"
17	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
18	484201	Bumper, Rubber
19	452152	Shaft Weldment, Rear Op. Platform Pivot
20	04001-09	Bolt, Hex Head 5/16-18 x 1"
21	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
22	04030-04	Lockwasher, 3/8" Spring
23	43086	Bushing
24	484035	Bearing
25	425257	Link, Suspension Seat Tensioner
26	452150	Pin Weldment, Op Platform Lower Pivot

Ref. No.	Part No.	Description
27	04041-38	Flatwasher, 3/8406 x 2.25 x .188
28	04001-19	Bolt, Hex Head 3/8-16 x 1"
29	462211	Suspension Pivot Assembly, Front
30	462267	Bracket, Suspension Adjustment w/Decal
31	04003-04	Bolt, Carriage 5/16-18 x 1"
32	462344	Seat Mounting Base Weldment w/Decal
33	462212	Suspension Pivot Assembly, Rear
34	483453-14	Bearing
35	04001-22	Bolt, Hex Head 3/8-16 x 2-3/4"
36	452154	Mount Weldment, Shock
37	484032	Shock Absorber, Suspension
38	484150	Mount, Suspension Shock
39	04021-18	Nut, Elastic Stop 3/8-24 Grade 8
40	452151	Pin Weldment, Op Platform Upper Pivot
41	04021-10	Nut, Elastic Stop 5/16-18
42	452107	Pivot Weldment, Suspension Tensioner
43	48796	Bearing, Self Align 5/8" ID
44	452106	Adjustment Lever, Suspension
45	484010	Knob
46	04020-12	Nut, Jam 3/8-16
47	04009-11	Bolt, Shoulder 3/8 x 1"
	04009-14	Bolt, Shoulder 3/8 x 3/8"
48	04050-05	Flatwasher, 3/8406 x .812 x .065
49	483601	Spring
50	425566	Cover, Foot PLate



## **SCZ STEERING COMPONENTS**

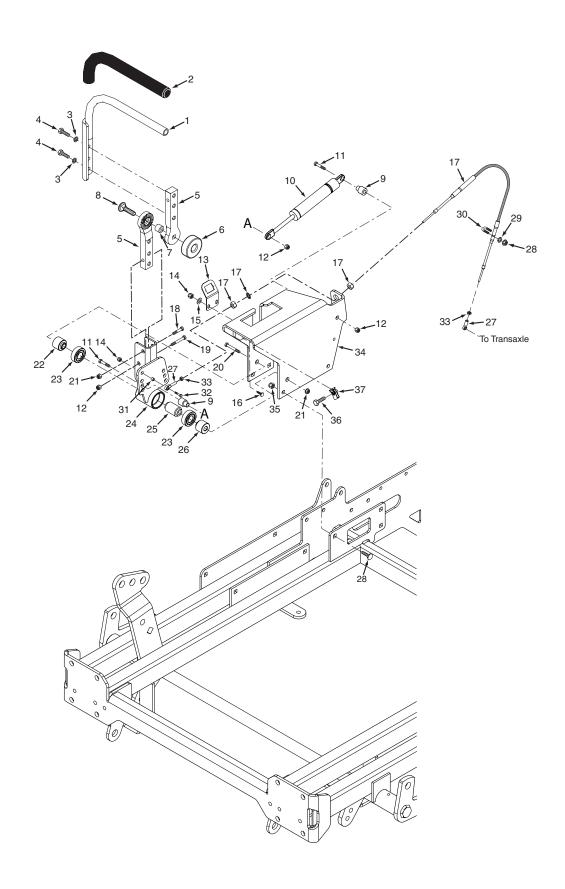




## **SCZ STEERING COMPONENTS**

Ref. No.	Part No.	Description
1	462804	Handle Bar w/Grip, LH
	462805	Handle Bar w/Grip, RH
2	484376	Grip, Control Handle
3	04030-03	Lockwasher, 5/16-" Spring
4	04001-09	Bolt, Hex Head 5/16-18 x 1'
5	483238	Pivot, Control Lever
6	483269	Knob, Control Handle
7	483250	Spacer, Rubber
8	04003-05	Bolt, Carriage 3/8-16 x 1-1/2"
9	43602	Spacer
10	484193	Damper
11	04001-17	Bolt, Hex Head 5/16-18 x 2"
12	04021-10	Nut, Elastic Stop 5/16-18
13	425389	Bracket, Operator Presence Switch
14	04021-08	Nut, Elastic Stop 1/4-20
15	04040-14	Flatwasher, 1/4312 x .750 x .065
16	04003-02	Bolt, Carriage 1/4-20 x 3/4"
17	484114	Control Cable, Hydro
18	04001-17	Bolt, Hex Head 5/16-18 x 2"
19	04001-17	Bolt, Hex Head 5/16-18 x 2"
20	04001-100	Bolt, Hex Head 3/8-16 x 6"
21	04021-09	Nut, Elastic Stop 3/8-16
22	43607	Spacer, Controls
23	48224	Bearing
24	452406	Pivot Weldment, Control Arm LH
	452407	Pivot Weldment, Control Arm RH
25	43600	Spacer, Bearing
26	43823	Spacer, Controls
27	484040	Rod End, 1/4-28 RH Thread
28	04020-31	Nut, Jam 5/16-24 UNF-2B
29	04030-03	Lockwasher, 5/16" Spring
30	04100-04	U-Bolt, 5/16-24
31	43827	Spacer
32	04001-59	Bolt, Hex Head 1/4-20 x 1-1/4"
33	04020-22	Nut, Jam 1/4-28 UNF
34	462561	Bracket Weldment, Control Lever RH w/Decal
	462560	Bracket Weldment, Control Lever LH w/Decal
35	04019-03	Nut, Serrated Flange 5/16-18
36	04107-04	Bolt, Hex Head 3/8-16 x 2" Special
37	04110-03	U-Nut, 3/8-16



### **SCZ DRIVE SYSTEM COMPONENTS**

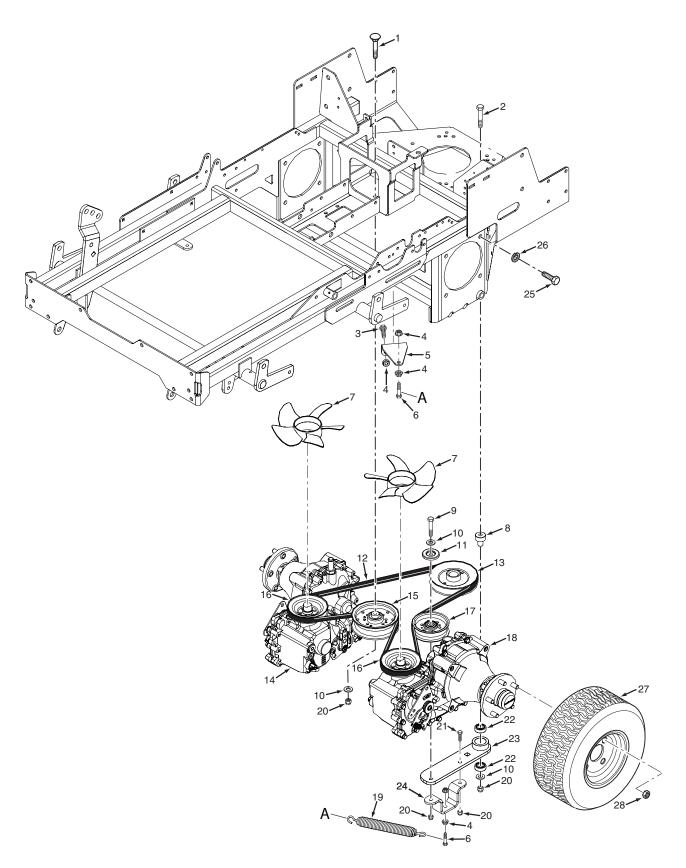




### **SCZ DRIVE SYSTEM COMPONENTS**

Ref. No.	Part No.	Description
1	04003-21	Bolt, Carriage 3/8-16 x 2-1/2"
2	04001-54	Bolt, Hex Head 3/8-16 x 3"
3	04001-19	Bolt, Hex Head 3/8-16 x 1"
4	04019-04	Nut, Serrated Flange 3/8-16
5	425385	Mounting Bracket, Spring - Idler Arm
6	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Grade 8
7	HG71906	Kit, Fan / Pulley
8	43504	Pivot, Idler Long
9	04001-22	Bolt, Hex Head 3/8-16 x 2-3/4"
10	04043-04	Flatwasher, 3/8391 x .938 x .105 HD
11	424367	Dust Shield
12	483165	Belt, Pump Drive
13	484098	Pulley, 5.80" Dia 1.125 Bore
14	483798	Transaxle, RH
15	483215	Pulley, 5" Dia. Idler
16	HG71906	Kit, Fan / Pulley
17	484128	Pulley, 4" Dia. Idler
18	483797	Transaxle, LH
19	484202	Spring, Idler Arm
20	04021-09	Nut, Elastic Stop 3/8-16
21	04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
22	48224	Bearing
23	462259	Idler Arm Assembly (incl. # 22)
24	425386	Mounting Bracket, Idler
25	04001-70	Bolt, Hex Head 1/2-13 x 1-1/4"
26	04030-06	Lockwasher, 1/2" Spring
27	484024	Wheel Assembly, 24 x 12-12 4-Ply (5-Hole)
	484023	Rim w/Valve Stem
	481852	Tire, 24 x 12-12 4-Ply
28	04028-02	Lug Nut, 1/2-20



## **SCZ SPEED CONTROL COMPONENTS**

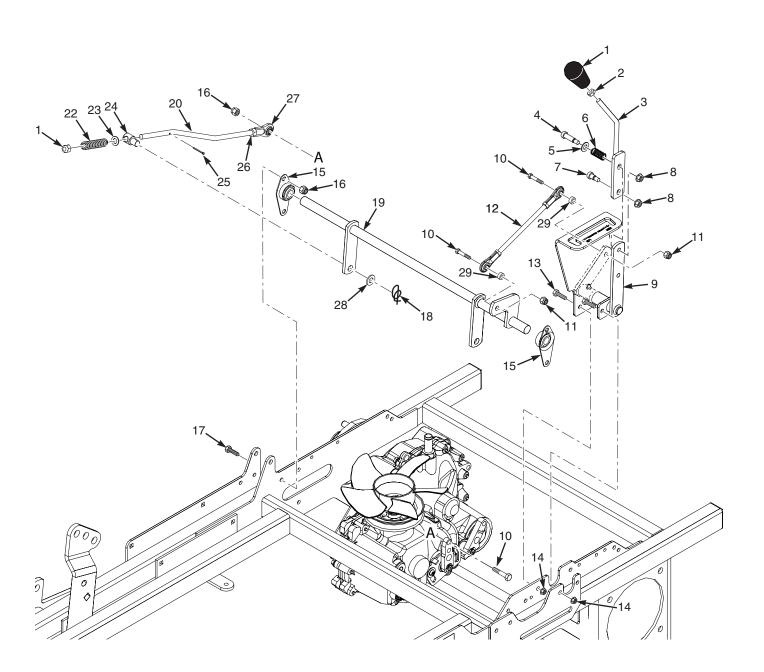




### **SCZ SPEED CONTROL COMPONENTS**

Ref. No.	Part No.	Description
1	484093	Knob, Soft Touch
2	04020-12	Nut, Jam 3/8-16 UNC
3	452222	Lever Weldment, Speed Control SCZ
4	04009-11	Bolt, Shoulder 3/8 x 1"
5	04040-05	Flatwasher, 3/8406 x .812 x .065
6	483601	Spring, Speed Control
7	04009-14	Bolt, Shoulder 3/8 x 3/8"
8	04019-03	Nut, Serrated Flange 5/16-18
9	452409	Control Weldment, Speed Range Adjust
	48114-04	Grease Fitting, 1/4-28 Self Tap
10	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
11	04021-09	Nut, Elastic Stop 3/8-16
12	484187	Linkage Assembly, Upper Speed Control
	483339	Rod End, 3/8-24 RH
	04020-25	Nut, Jam 3/8-24 UNF
	483340	Rod End, 3/8-24 LH
	04020-26	Nut, Jam 3/8-24 UNF LH
13	04001-09	Bolt, Hex Head 5/16-18 x 1"
14	04117-01	Nut, Flange Head Elastic Stop 5/16-18
15	484149	Bearing, Self Align
16	04117-01	Nut, FLG HH Elastic Stop 5/16-18
17	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
18	04069-02	Pin, Rue Cotter 1/2" Dia.
19	452138	Speed Control Bellcrank Weldment
20	485318	Rod, Speed Linkage
21	04021-18	Nut, Elastic Stop 3/8-24
22	484175	Spring
23	04042-04	Flatwasher, 3/8406 x .734 x .063
24	485317	Bushing, Pivot
25	04061-01	Cotter Pin
26	04020-14	Nut, 3/8-24 UNF Jam
27	484177	Rod End, 3/8-24
28	04043-04	Flatwasher, 3/8391 x .938 x .105
29	43063	Spacer



## **SCZ BRAKE COMPONENTS**

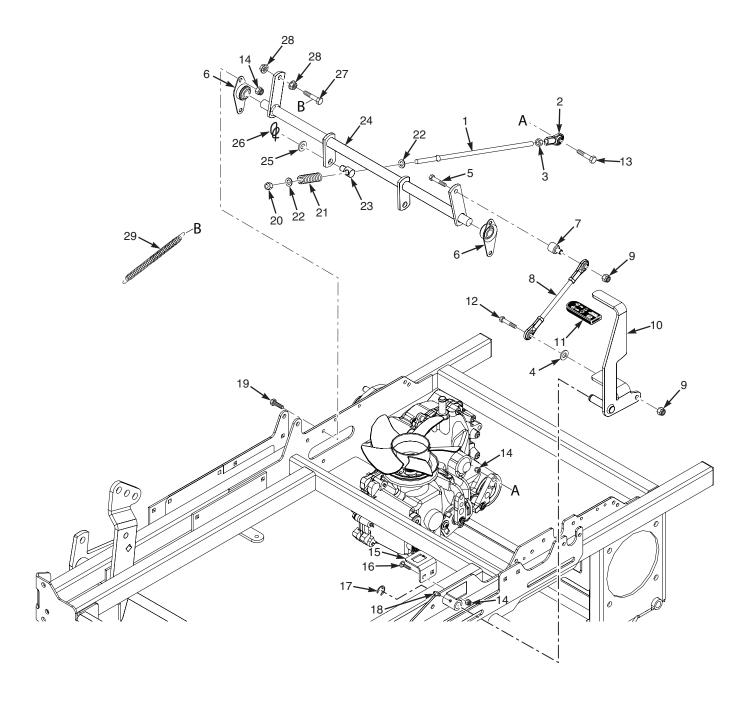




# **SCZ BRAKE COMPONENTS**

Ref. No.	Part No.	Description	
1	485319	Rod, Brake Linkage	
2	484177	Rod End, 3/8-24	
3	04020-14	Nut, Jam 3/8-24 UNF	
4	04043-04	Flatwasher, 3/8391 x .938 x .105 HD	
5	04001-22	Bolt, Hex Head 3/8-16 x 2-3/4"	
6	484149	Bearing, Self Align	
7	43503	Pivot	
8	485757	Linkage, Upper Brake	
	483339	Rod End, 3/8-24 RH	
	04020-25	Nut, Jam 3/8-24 UNF	
	483340	Rod End, 3/8-24 LH	
	04020-26	Nut, Jam 3/8-24 UNF LH	
9	04021-09	Nut, Elastic Stop 3/8-16	
10	462256	Brake Lever w/Grip	
11	481548	Grip, Brake Lever	
12	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"	
13	04001-17	Bolt, Hex Head 3/8-16 x 2"	
14	04117-01	Nut, Flange Head Elastic Stop 5/16-18	
15	425388	Bracket, Brake Switch	
16	04003-12	Bolt, Carriage 5/16-18 x 3/4"	
17	04050-01	Retaining Ring, .625 External "E"	
18	48114-04	Grease Fitting, 1/4-28 Self Tap	
19	04001-08	Bolt, Hex Head 5/16-18 x 3/4"	
20	04021-18	Nut, Elastic Stop 3/8-24	
21	484182	Spring	
22	04041-45	Flatwasher, 3/8376/.380 x .734 x .063	
23	485317	Bushing, Pivot	
24	452221	Weldment, Brake Linkage	
25	04043-04	Flatwasher, 3/8391 x .938 x .105	
26	04069-02	Pin, Rue Cotter 1/2" Dia.	
27	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Grade 8	
28	04019-04	Nut, Serrated Flange 3/8-16	
29	484335	Spring	



# **SCZ HYDRAULIC SYSTEM**

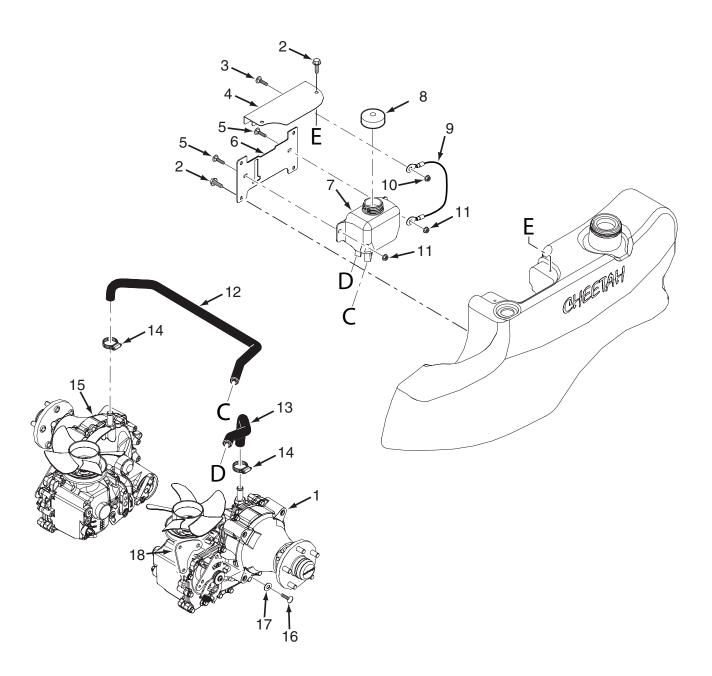




# **SCZ HYDRAULIC SYSTEM**

Ref. No.	Part No.	Description	
1	483797	Transaxle, LH	
2	04017-04	Bolt, Hex Head 1/4-20 X 1/2" Serrated Flange	
3	04003-02	Bolt, Carriage 1/4-20 x 3/4"	
4	425390	Cover, Oil Reservoir	
5	04003-12	Bolt, Carriage 5/16-18 x 3/4"	
6	425421	Plate, Hydro Tank Mount	
7	462907	Hydraulic Tank Assembly (incl. # 8)	
8	483514	Cap, Hydraulic Tank	
9	484196	Lanyard, Hydraulic Tank	
10	04021-08	Nut, Elastic Stop 1/4-20	
11	04117-01	Nut, FLG HH Elastic Stop 5/16-18	
12	484161	Hose, RH Transaxle	
13	484160	Hose, LH Transaxle	
14	48136-16	Clamp, 1" Max Dia.	
15	483798	Transaxle, RH	
16	04001-18	Bolt, Hex Head 3/8-16 x 3/4"	
17	04030-04	Lockwasher, 3/8 Spring	
18	452131	Bracket, Transaxle	



### **SCZ FUEL SYSTEM**

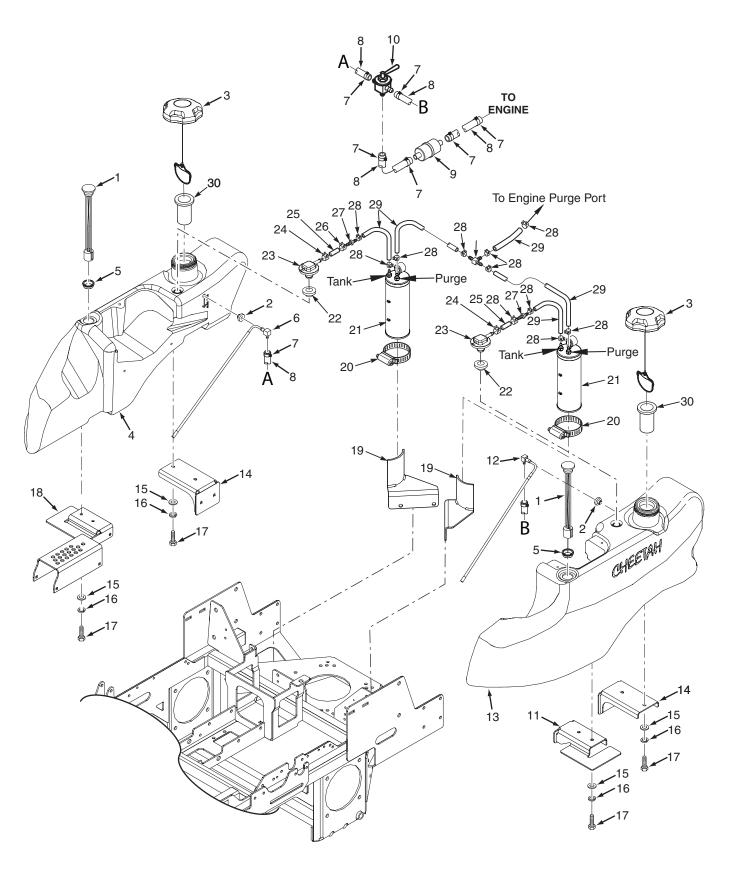




# **SCZ FUEL SYSTEM**

Ref. No.	Part No.	Description	
1	484323	Fuel Gauge	
2	482571	Bushing, .56 Dia. Viton	
3	484286	Fuel Cap, Tethered	
	484297	Fuel Cap w/Tethered - California Models Only (not shown)	
4	463074	Fuel Tank Assembly, RH (incl. #1, 2, 5, 6, 22, 23)	
5	484242	Grommet	
6	484553	Fuel Tube Assembly, RH	
7	48059-01	Clamp, Fuel Hose 1/4" ID	
8	483617	Fuel Hose, 1/4" Non-Perm (order by inch)	
9	**	Fuel Filter	
10	482212	Valve, Fuel Shut-Off	
11	425573	Mounting Bracket, Fuel Tank Front	
12	484552	Fuel Tube Assembly, LH	
13	463072	Fuel Tank Assembly, LH (incl. #1, 2, 5, 12, 22, 23)	
14	425350	Mounting Bracket, Fuel Tank Rear	
15	04040-15	Flatwasher, 5/16375 x .875 x .083	
16	04030-03	Lockwasher, 5/16" Spring	
17	04001-08	Bolt, Hex Head 5/16-18 x 3/4"	
18	425574	Adjustment Bracket, Upper Cut Height	
19	452176	Canister Mounting Bracket	
20	48136-17	Clamp	
21	484342	Carbon Canister	
	484366	Dust Filter, Carbon Canister	
22	484285	Grommet, Viton	
23	484333	Remote Vent	
24	48059-02	Clamp, Fuel Hose 7/32"	
25	484347	Hose, 1/4" Vapor Recovery (order by inch)	
26	48059-02	Clamp, Fuel Hose 7/32"	
27	484343-01	Mender, 1/4 x 3/16 w/.02 Hole	
28	48059-05	Clamp, Vapor Recovery Hose 3/16"	
29	484345	Hose, 3/16"	
30	484279-01	Tube, Fuel Tank Insert	

 $<sup>^{\</sup>star\star}$  Available through the individual engine manufacturer.



# **SCZ ENGINE & ATTACHING PARTS**

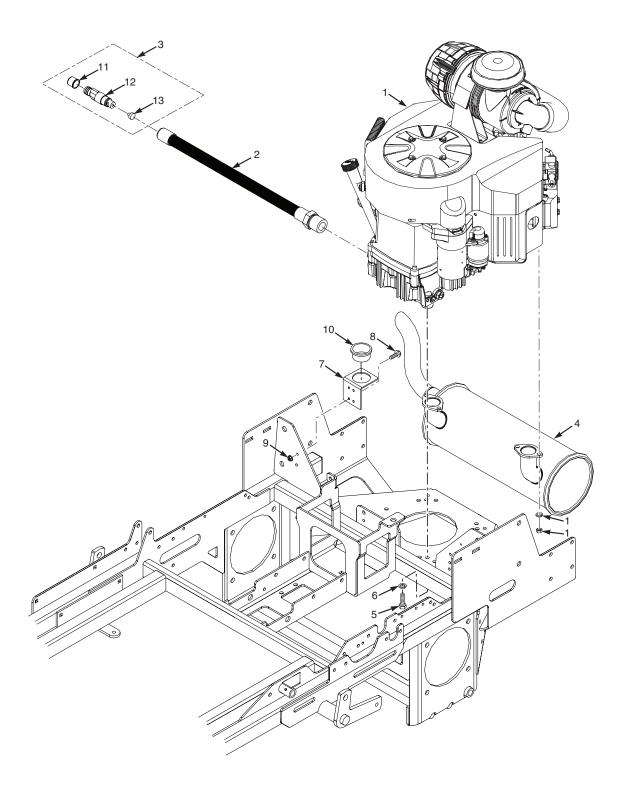




# **SCZ ENGINE & ATTACHING PARTS**

Ref. No.	Part No.	Description
1	**485032	Engine, Kawasaki 27FX - (FX850)
	**485967	Engine, Kohler 31CV-EFI - (ECV860)
	**485033	Engine, Kawasaki 31FX - (FX921)
	**486107	Engine, Briggs & Stratton 37 BV-EFI (61E8770002J1)
2	484581	Hose, Oil Drain, Kawasaki (incl. # 3)
	484706	Hose, Oil Drain, Kohler (incl. # 3)
	484599	Hose, Oil Drain, Briggs & Stratton (incl. # 3)
3	484593	Valve Assembly, Oil Drain
4	484155	Muffler, Kawasaki - FX850
	485316	Muffler, Kohler - ECV860
	484156	Muffler, Kawasaki - FX921
	486108	Muffler, Briggs & Stratton - 37 BV-EFI
5	04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
6	04030-04	Lockwasher, 3/8" Spring
7	425975	Bracket, Oil Drain Hose
8	04010-30	Screw, #8-32 x 1/2"
9	04021-17	Nut, Elastic Stop #8-32
10	484617	Bushing, Thick Panel Snap
11	484585	Cap
12	48603-12	O-Ring
13	484586	Seal

<sup>\*\*</sup> Available through the individual engine manufacturer.



# **ZT-5400 TRANSAXLE ASSEMBLY**

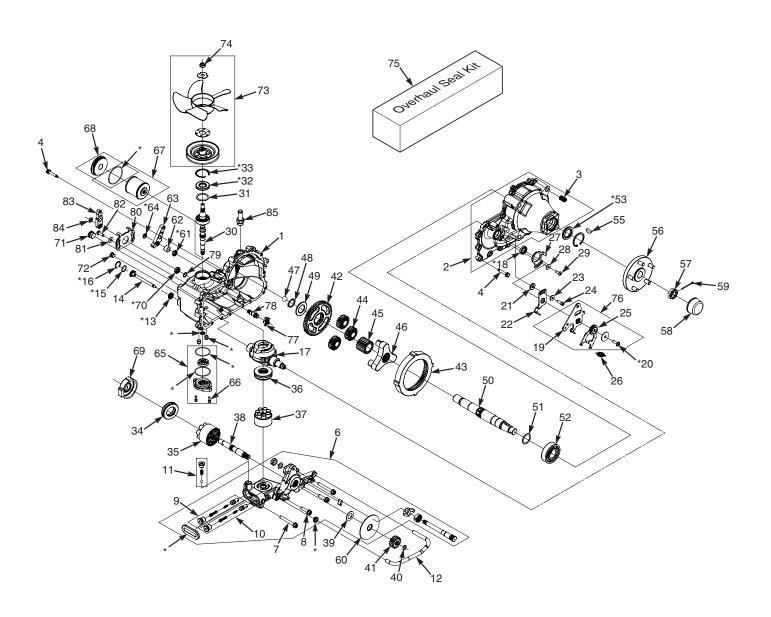

\* - Included with Seal Kit Item # 75




### **ZT-5400 TRANSAXLE ASSEMBLY**

Ref. No.	Part No.	Description
1	HG71946	Kit, Housing Main, LH
	HG71947	Kit, Housing Main, RH
2	HG71948	Kit, Housing Side, LH
	HG71948	Kit, Housing Side, RH
3	HG52973	Insert, 1/2-13 x 1-1/2" UNC
4	HG52974	Screw, Hex Flange 5/16-18 x 1-1/2"
5	HG50928	Tube, Sealant
6	HG71995	Kit, Center Section, LH
7	HG71996	Kit, Center Section, RH
7 8	HG52977 HG52137	Bolt, Hex Flange 3/8-16 x 3" Screw, Hex Flange Head 3/8-16 x 1-1/2"
9	HG71952	Kit, Shock Valve
10	HG71952	Kit, Shock Valve
11	HG71999	Kit, Charge Relief
12	HG52984	Tube, Filter, LH
	HG52983	Tube, Filter, RH
13	HG53197	Seal, Lip 12x 24 x 5 TC
14	HG71940	Kit, Bypass Actuator
15	HG53321	Spring, Wave
16	HG53322	Ring, Retaining, HO-100
17	HG52972	Swash Plate, 16cc. Machined
18 19	HG52989 HG53222	Seal, Lip 22 x 32 x 7 Arm, Control, LH
19	HG53221	Arm, Control, RH
20	HG51812	TWHCS, 5/16-18 x 1" (Patch)
21	HG52527	Spacer, .320 x 1.005 x .179
22	HG51946	Arm, Neutral, LH
	HG51945	Arm, Neutral, RH
23	HG44130	Washer, .34 x .88 x .06
24	HG51616	SHCS, 5/16-24 x .875 (Patch)
25	HG52433	Assembly, RTN Uni-Directional (CCW) LH
	HG52434	Assembly, RTN Uni-Directional (CW) RH
26 27	HG51605	Spring, Extension, RTN - 44lbs
21	HG53190 HG53189	Plate, Stop, LH Plate, Stop, RH
28	HG44130	Washer, .34 x .88 x .06
29	HG53519	HBHCS, 5/16-18 x 3/4"
30	HG71941	Kit, Input Shaft
31	HG51279	Spacer
32	HG51280	Seal, Lip 25 x 52 x 7 TC
33	HG52650	Ring, Retaining Internal
34	HG53341	Bearing, Thrust 42 x 68 x 16
35	HG70082	Kit, Cylinder Block - 21cc.
36	HG52991	Bearing, Thrust 35 x 70 x 22
37 38	HG70735 HG52992	Kit, Cylinder Block - 16cc. Shaft, Motor
39	HG52993	Washer, .89 x 1.50 x .04
40	HG44145	Ring, Retaining
41	HG52994	Gear, 19T
42	HG52996	Gear, 65T
43	HG52998	Gear, Ring 68T
44	HG52999	Gear, Planet 23T
45	HG53000	Gear, Sun 22T

Ref. No.	Part No.	Description
No.  46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84	HG53001 HG53002 HG53003 HG53004 HG53005 HG53006 HG53007 HG53008 HG5307 HG5308 HG51796 HG72039 HG51821 HG53724 HG51822 HG53012 HG53015 HG53015 HG53018 HG53019 HG71942 HG9007300-2510 HG71943 HG71944 HG53026 HG9008000-0127 HG9005110-8700 HG9005110-5600 HG71906 HG44133 HG71945 HG72002 HG72001 HG53028 HG53029 HG53030 HG53034 HG44130 HG53019	Carrier Ball, Thrust .75 Ring, Retaining 1-1/4" Spacer, Thrust, Axle Shaft, Axle Washer, 1.40 x 1.75 x .05 Bearing, Ball 35 x 80 x 21 Seal, Lip 1.375 x 2.062 x .250 Ring, Retaining Internal Key, Shaft, Axle Kit, Hub, 5-Bolt Nut, Hex 1-20 Slotted Cap, Axle Pin, Cotter 9/64 x 2" Rotor, Brake Seal, .56 x .88 x .19 Spacer, .57 x .86 x .53 Handle, Actuating Ring, Retaining Kit, Charge Cover  Screw, 1/4-20 x .625 Kit, Filter Kit, Filter Plug Plate, Motor Swash  Seal, 15 x 24 x 7  Plug, 7/8-14  Plug, 9/16-18 Kit, Fan/Pulley Nut, Hex 1/2-20 w/Patch Seal Kit Kit, RTN Bi-Directional LH Kit, RTN Bi-Directional RH Cam, 2-Speed Shaft, 2-Speed, Bevel Ring, Retaining External .59" Arm, Lock Down 2-Speed Washer, .34 x .88 x .06 HBHCS, 5/16-18 x 3/4" Handle, Actuating Ring, Retaining External .375"
68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83	HG71944 HG53026 HG9008000- 0127 HG9005110- 8700 HG9005110- 5600 HG71906 HG44133 HG71945 HG72002 HG72001 HG53028 HG53029 HG53030 HG53034 HG44130 HG44130 HG53519	Kit, Filter Plug Plate, Motor Swash  Seal, 15 x 24 x 7  Plug, 7/8-14  Plug, 9/16-18 Kit, Fan/Pulley Nut, Hex 1/2-20 w/Patch Seal Kit Kit, RTN Bi-Directional LH Kit, RTN Bi-Directional RH Cam, 2-Speed Shaft, 2-Speed, Bevel Ring, Retaining External .59" Arm, Lock Down 2-Speed Washer, .34 x .88 x .06 HBHCS, 5/16-18 x 3/4" Handle, Actuating



# **SCZ ELECTRICAL SYSTEM**

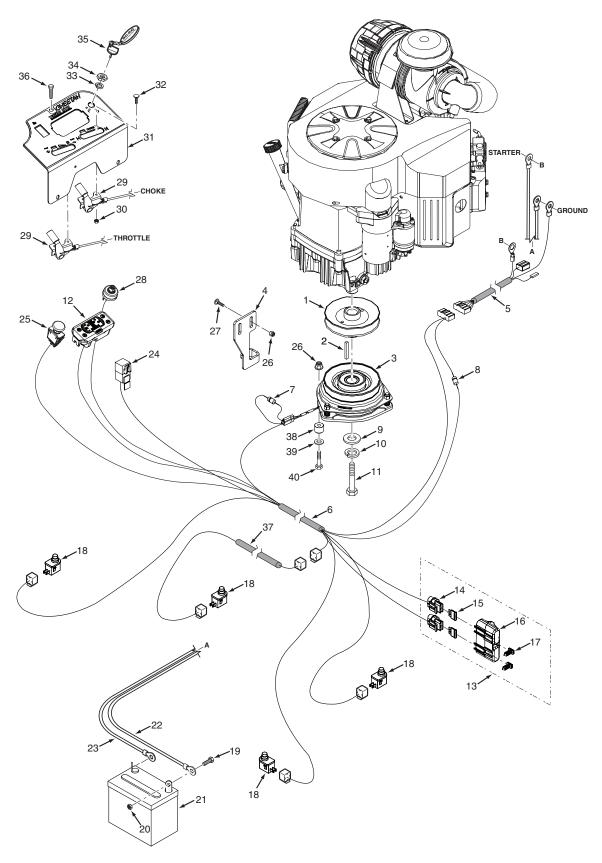




# **SCZ ELECTRICAL SYSTEM**

Ref. No.	Part No.	Description
1	484098	Pulley, 5.80 Dia 1.125 Bore
2	04063-23	Key. 1/4 x 1/4 x 3-1/4"
3	461661	Electric Clutch w/Tag - GT-3.5 (FX850)
	461826	Electric Clutch w/Tag - GT-5 (FX921)
4	426950	Bracket, Anti-Rotation
5	485678	Wire Harness Adapter, Kawasaki
6	486129	Wire Harness, SCZ
7	483958	Diode, 600V - 6A
8	482253	Diode
9	04041-28	Flatwasher, 7/16469 x 1.75 x .25
10	04030-05	Lockwasher, 7/16" Spring
11	04102-03	Bolt, Hex Head 7/16-20 x 2-1/4" w/Patch (Kawasaki)
12	484721	Tiger Eye Cluster Gauge
13	483642	Double Fuse Assembly (incl. # 14, 15, 16, 17)
14	483629	Fuse Holder
15	48298	Fuse, 20 Amp
16	483571	Cover, Sealed Double
17	482588	Clip, Wire
18	481638	Switch, N.O.
19	04001-44	Bolt, Hex Head 1/4-20 x 1/2"
20	04020-02	Nut, 1/4-20
21	*	Battery
22	48029-11	Battery Cable, 27" Black
23	48029-13	Battery Cable, 25" Red
24	483013	Relay
25	485833	Switch, PTO - 10 Amp
26	04117-01	Nut, FLF HH Elastic Stop 5/16-18
27	04003-04	Bolt, Carriage 5/16-18 x 1"
28	48798	Keyswitch w/Hardware
29	481544	Control Cable (Kawasaki FX850 Throttle & Choke Cable)
	481544	Control Cable (Kawasaki FX921 Choke Cable)
00	481363	Control Cable (Kawasaki FX921 Throttle Cable)
30	04021-26	Nut, Elastic Stop #10-24
31	462828	Instrument Panel w/Decal
32	04003-43	Bolt, Carriage #10-24 x 1/2"
33	48017-03	Lockwasher, 5/8" Internal
34	48017-04	Nut, Hex 5/8-32
35	462069	Key Assembly w/Fob
36	04017-04	Bolt, Hex Head 1/4-20 x 1/2" Serrated Flange
37	484722	Wire Harness, Operator Platform -SCZ
38	431009	Bushing, UHMW
39 40	04040-15	Flatwasher, 5/16375 x .875 x .083
40	04001-11	Bolt, Hex Head 5/16-18 x 1-1/2"

<sup>\*</sup> Not available through Scag



# **SCZ EFI ELECTRICAL SYSTEM**

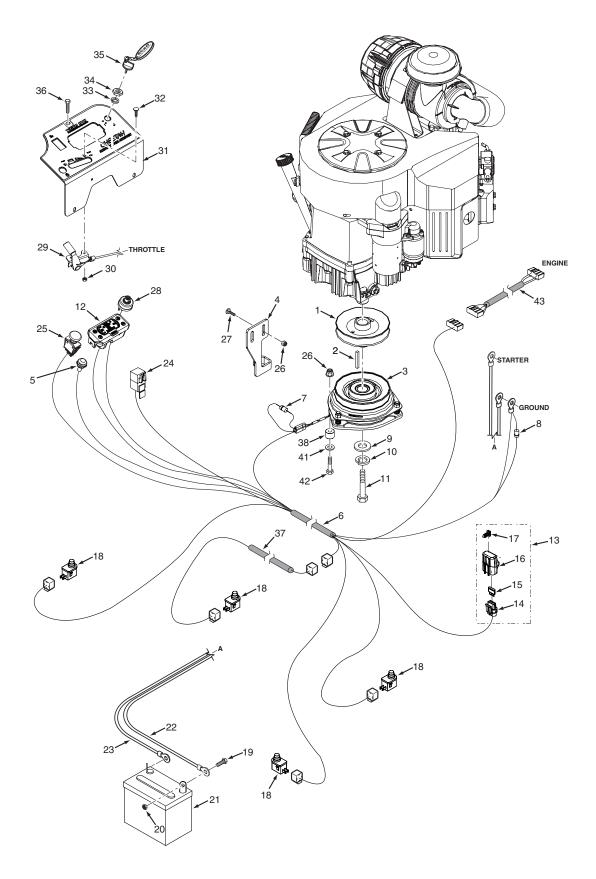



# **SCZ EFI ELECTRICAL SYSTEM**

Ref.	Part No.	Description	
No.			
1	484098	Pulley, 5.80 Dia 1.125 Bore	
2	04063-23	Key, 1/4 x 1/4 x 3-1/4"	
3	461826	Electric Clutch w/Tag - GT-5	
4	426950	Bracket, Anti-Rotation	
5	481182	Indicator Light Assembly	
6	486130	Wire Harness, SCZ-EFI	
7	483958	Diode, 600V - 6A	
8	482253	Diode	
9	04041-28	Flatwasher, 7/16469 x 1.75 x .25	
10	04030-05	Lockwasher, 7/16" Spring	
11	04102-03	Bolt, Hex Head 7/16-20 x 2-1/4" w/Patch	
12	484721	Tiger Eye Cluster Gauge	
13	485739	Fuse Assembly (incl. # 14, 16, 17)	
14	483629	Fuse Holder	
15	48298	Fuse, 20 Amp	
16	483643	Cover, Sealed Single	
17	482588	Clip, Wire	
18	481638	Switch, N.O.	
19	04001-44	Bolt, Hex Head 1/4-20 x 1/2"	
20	04020-02	Nut, 1/4-20	
21	*	Battery	
22	48029-07	Battery Cable, 18" Black	
23	48029-13	Battery Cable, 25" Red	
24	483013	Relay	
25	485833	Switch, PTO - 10 Amp	
26	04117-01	Nut, FLF HH Elastic Stop 5/16-18	
27	04003-04	Bolt, Carriage 5/16-18 x 1"	
28	48798	Keyswitch w/Hardware	
29	481544	Control Cable	
30	04021-26	Nut, Elastic Stop #10-24	
31	462828	Instrument Panel w/Decal	
32	04003-43	Bolt, Carriage #10-24 x 1/2"	
33	48017-03	Lockwasher, 5/8" Internal	
34	48017-04	Nut, Hex 5/8-32	
35	462069	Key Assembly w/Fob	
36	04017-04	Bolt, Hex Head 1/4-20 x 1/2" Serrated Flange	
37	484722	Wire Harness, Operator Platform -SCZ	
38	431009	Bushing, UHMW	
39	04117-01	Nut, FLF HH Elastic Stop 5/16-18	
40	04003-04	Bolt, Carriage 5/16-18 x 1"	
41	04040-15	Flatwasher, 5/16375 x .875 x .083	
42	04001-11	Bolt, Hex Head 5/16-18 x 1-1/2"  Wise Heapen Adoptor Bridge & Stretten 27 BV FFI	
43	486139	Wire Harness Adapter, Briggs & Stratton 37 BV-EFI	

<sup>\*</sup> Not available through Scag



 
#### REPLACEMENT DECALS AND INFORMATION PLATES




















Operation on slopes can be hazardous.
This machine was originally equipped with a Rollover Protection Device with a Roll Bar and Seat Bett.
See your dealer if either is missing or damaged.
483425

 
5

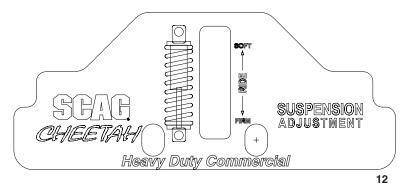

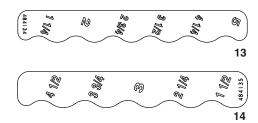





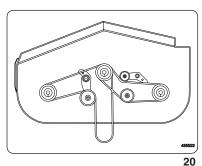



2019 SCZ Decals 1



#### REPLACEMENT DECALS AND INFORMATION PLATES

Ref. No.	Part No.	Description	
1	483407	Decal, Spinning Blades	
2	483406	Decal, Knives	
3	483201	Decal, 61" Velocity Plus	
	484574	Decal, Velocity Plus - 61RD	
	483693	Decal, 72" Velocity Plus	
4	483633	Decal, Seat Replacement	
5	483425	Decal, ROPS	
6	482100	Decal, Traction Control	
7	483405	Decal, Warning	
8	485403	Decal, Made in USA	
9	483402	Decal, Belt Cover	
10	483270	Decal, Fuel Shut Off	
11	484126	Decal, Scag Cheetah	
	484691	Decal, Scag Cheetah - Electronic Fuel Injection	
12	484127	Decal, Suspension Adjustment	
13	484134	Decal, Deck Height - LH	
14	484135	Decal, Deck Height - RH	
15	485280	Decal, Instrument Panel - SCZ	
	485281	Decal, Instrument Panel - SCZ - EFI	
16	484174	Decal, Speed Control	
17	484180	Decal, Start / Drive	
18	484244	Decal, Adjustments - SCZ	
19	485364	Decal, SCZ Replacement Parts	
20	485522	Decal, SCZ Belt Routing	
21	486197	Decal, Scag - Fuel Tank	
22	486205	Decal, Cheetah - Fuel Tank	
**	483900	Decal, Warning Spark Arrestor (California Models Only - not shown)	
**	462373	Spanish Decal Kit, SCZ (not shown)	
**	01411	DVD Video, Tips for Safe Operation of Your Scag Zero-Turn Mower	

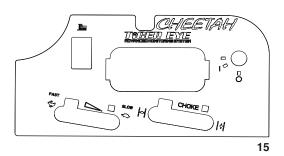

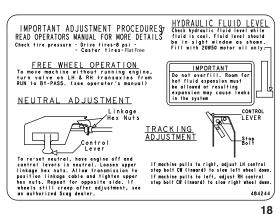



WARNING

Replace seat only with Scap approved seat with seat mounting provisions and Scap approved seat batts.

Fallure to foliow these directions could result in injury or death in the event of a rollorer.

MARNING

DO NOT OPERATE WITHOUT DISCHARGE CHUTE, MULCHING
KIT, OR ENTIRE GRASS CATCHER INSTALLED



START/DRIVE PROCEDURE

Engage parking brake

Disengage mover deck drive

Move control handles

Nove control handles

Start engling ck position

Release parking brake

AVOID SERIOUS INJURY OR DEATH

Read the Operators Manual

AVOID SERIOUS INJURY OR DEATH

Read the Operators Manual

AVOID SERIOUS INJURY OR DEATH

Release parking brake

AVOID SERIOUS INJURY OR DEATH

Release parking brake

AVOID SERIOUS INJURY OR DEATH

Revolution of the Company of the Company

Avoid sudden turns

De to low when children or

Never corry, children eren with

bloades off

Look down and behind before
and while backing durds, shields,

serickes, etc.) in place and working

Remove objects that could be through

ythe blades

Trained operators only 484180


CHETAH

22



### SCZ ELECTRICAL SCHEMATIC


(shown with Key Off, PTO Off, Park Brake Applied, Control Handles in Neutral, Seat Switch Disengaged)

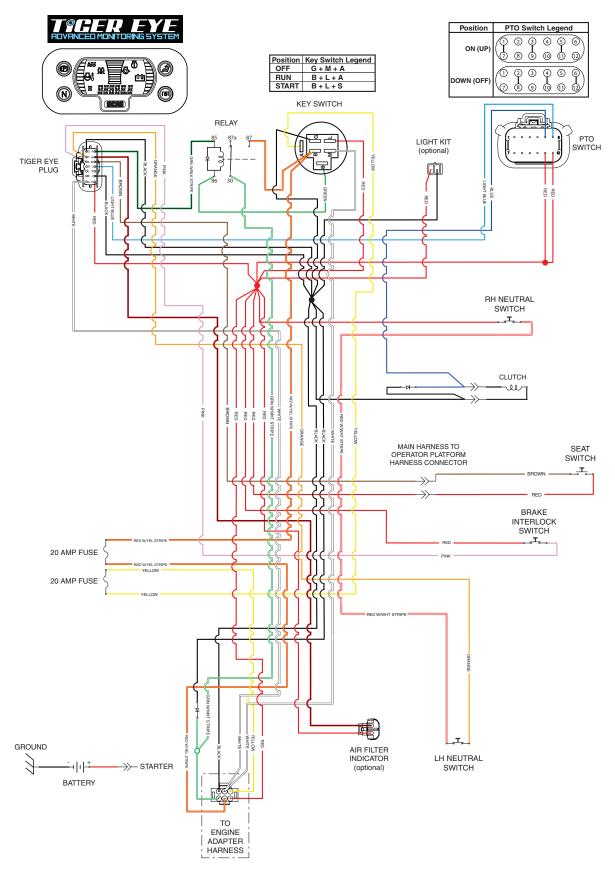




### SCZ EFI ELECTRICAL SCHEMATIC

(shown with Key Off, PTO Off, Park Brake Applied, Control Handles in Neutral, Seat Switch Disengaged)

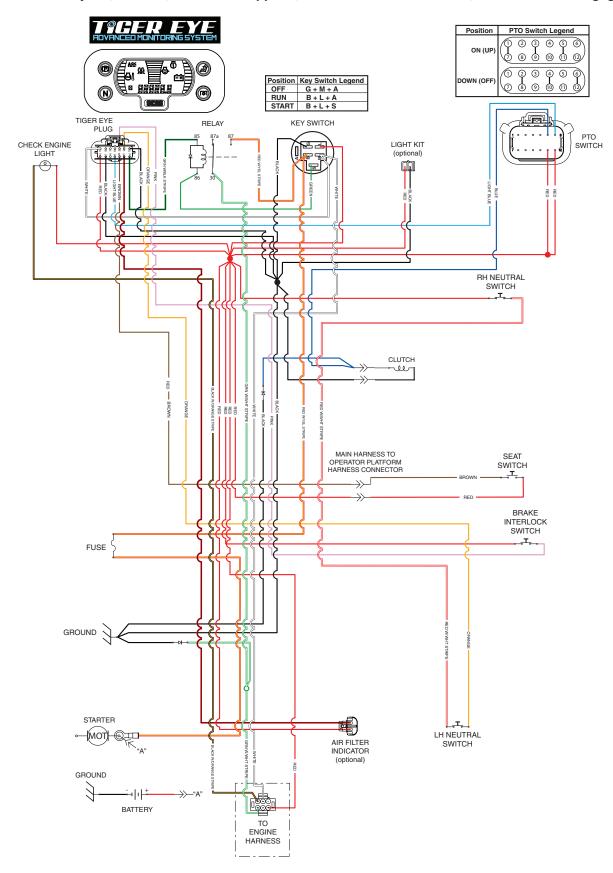




#### KAWASAKI ENGINE ADAPTER HARNESS ELECTRICAL SCHEMATIC

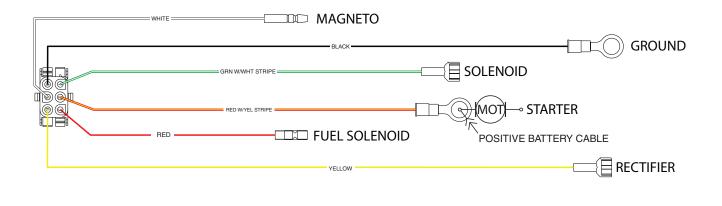

#### **BRIGGS & STRATTON - EFI ADAPTER HARNESS ELECTRICAL SCHEMATIC**

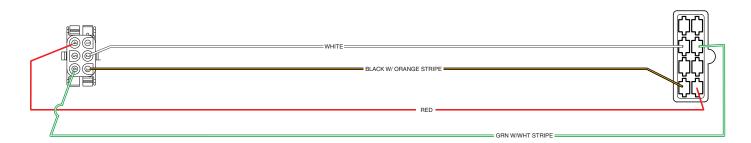

### LIMITED WARRANTY - COMMERCIAL EQUIPMENT

Any part of the Scag commercial mower manufactured by Scag Power Equipment and found, in the reasonable judgment of Scag, to be defective in materials or workmanship, will be repaired or replaced by an Authorized Scag Service Dealer without charge for parts and labor during the periods specified below. This warranty is limited to the original purchaser provided the product was purchased from an Authorized Scag Power Equipment Dealer and is <u>not transferable</u>. Proof of purchase will be required by the dealer to substantiate any warranty claims. All warranty work must be performed by an Authorized Scag Service Dealer.

This warranty is limited to the following specified periods from the date of the original retail purchase for defects in materials or workmanship:

- Wear items including drive belts, blades, hydraulic hoses and tires are warranted for ninety (90) days.
- Batteries are covered for ninety (90) days.
- Frame and structural components including oil reservoir and oil coolers are warranted for two (2) years (parts and labor) for commercial use or three (3) years / 500 hours (whichever comes first) (parts and labor) for non-commercial use.
- Cutter decks are warranted against cracking for a period of three (3) years. (parts and labor 1st and 2nd year; parts only 3rd year.) The repair or replacement of the cutter deck will be at the option of Scag Power Equipment. We reserve the right to request components for evaluation. This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual.
- Engines and electric starters are covered by the engine manufacturer's warranty period.
- Major drive system components are warranted for two (2) years (parts and labor) for commercial use or three (3) year / 500 hour (whichever comes first) (parts and labor) for non-commercial use by Scag Power Equipment. (commercial and non-commercial warranty excludes fittings, hoses, drive belts). The repair or replacement of the hydraulic pump or hydraulic motor will be at the option of Scag Power Equipment. This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual.
- Electric clutches have a Limited Warranty for two (2) years (parts and labor) for commercial use or three (3) year / 500 hours (whichever comes first) (parts and labor) for non-commercial use.
- Spindle assemblies have a Limited Warranty for three years (parts and labor 1st year and 2nd; parts only 3rd year).
- Any Scag product used for rental purposes is covered by a 90 day warranty.

The Scag mower, including any defective part must be returned to an Authorized Scag Service Dealer within the warranty period. The expense of delivering the mower to the dealer for warranty work and the expense of returning it to the owner after repair will be paid for by the owner. Scag's responsibility is limited to making the required repairs and no claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any Scag mower. "Non-Commercial" use is defined as a single property owner, where the single property is the residence of the owner of the mower. If the mower is cutting more than the owners single property, it is deemed commercial use and the "non-commercial" warranty does not apply. Scag Power Equipment reserves the right to deny and / or void the non-commercial warranty if it believes it to be in commercial use.

This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual. The warranty does not apply to any damage to the mower that is the result of improper maintenance, or to any mower or parts that have not been assembled or installed as specified in the Operator's Manual and Assembly Manual. The warranty does not cover any mower that has been altered or modified, changing performance or durability. In addition, the warranty does not extend to repairs made necessary by normal wear, or by the use of parts or accessories which, in the reasonable judgment of Scag, are either incompatible with the Scag mower or adversely affect its operation, performance or durability.

Scag Power Equipment reserves the right to change or improve the design of any mower without assuming any obligation to modify any mower previously manufactured. All other implied warranties are limited in duration to the two (2) year for commercial use, three (3) years / 500 hour for non-commercial use or ninety (90) days for mowers used for rental purpose. Accordingly, any such implied warranties including merchantability, fitness for a particular purpose, or otherwise, are disclaimed in their entirety after the expiration of the appropriate two year, three year / 500 hour or ninety day warranty period. Scag's obligation under this warranty is strictly and exclusively limited to the repair or replacement of defective parts and Scag does not assume or authorize anyone to assume for them any other obligation. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Scag assumes no responsibility for incidental, consequential or other damages including, but not limited to, expense for gasoline, expense of delivering the mower to an Authorized Scag Service Dealer and expense of returning it to the owner, mechanic's travel time, telephone or telegram charges, rental of a like product during the time warranty repairs are being performed, travel, loss or damage to personal property, loss of revenue, loss of use of the mower, loss of time or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.