


SCAG

POWER EQUIPMENT

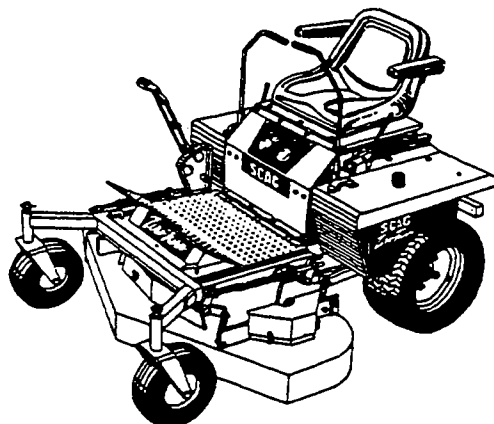

KEY IDENTIFYING FEATURES

ALL UNITS LISTED

DUAL DRIVE CONTROL HANDLES
TWO PUMP AND MOTOR DRIVE
NEUTRAL RETURN ON FENDER
SINGLE LEVER HEIGHT ADJUSTMENT


MODEL#

STZ-20KH

SMTZ-61

STG

SMTZ-61 CUTTER DECK

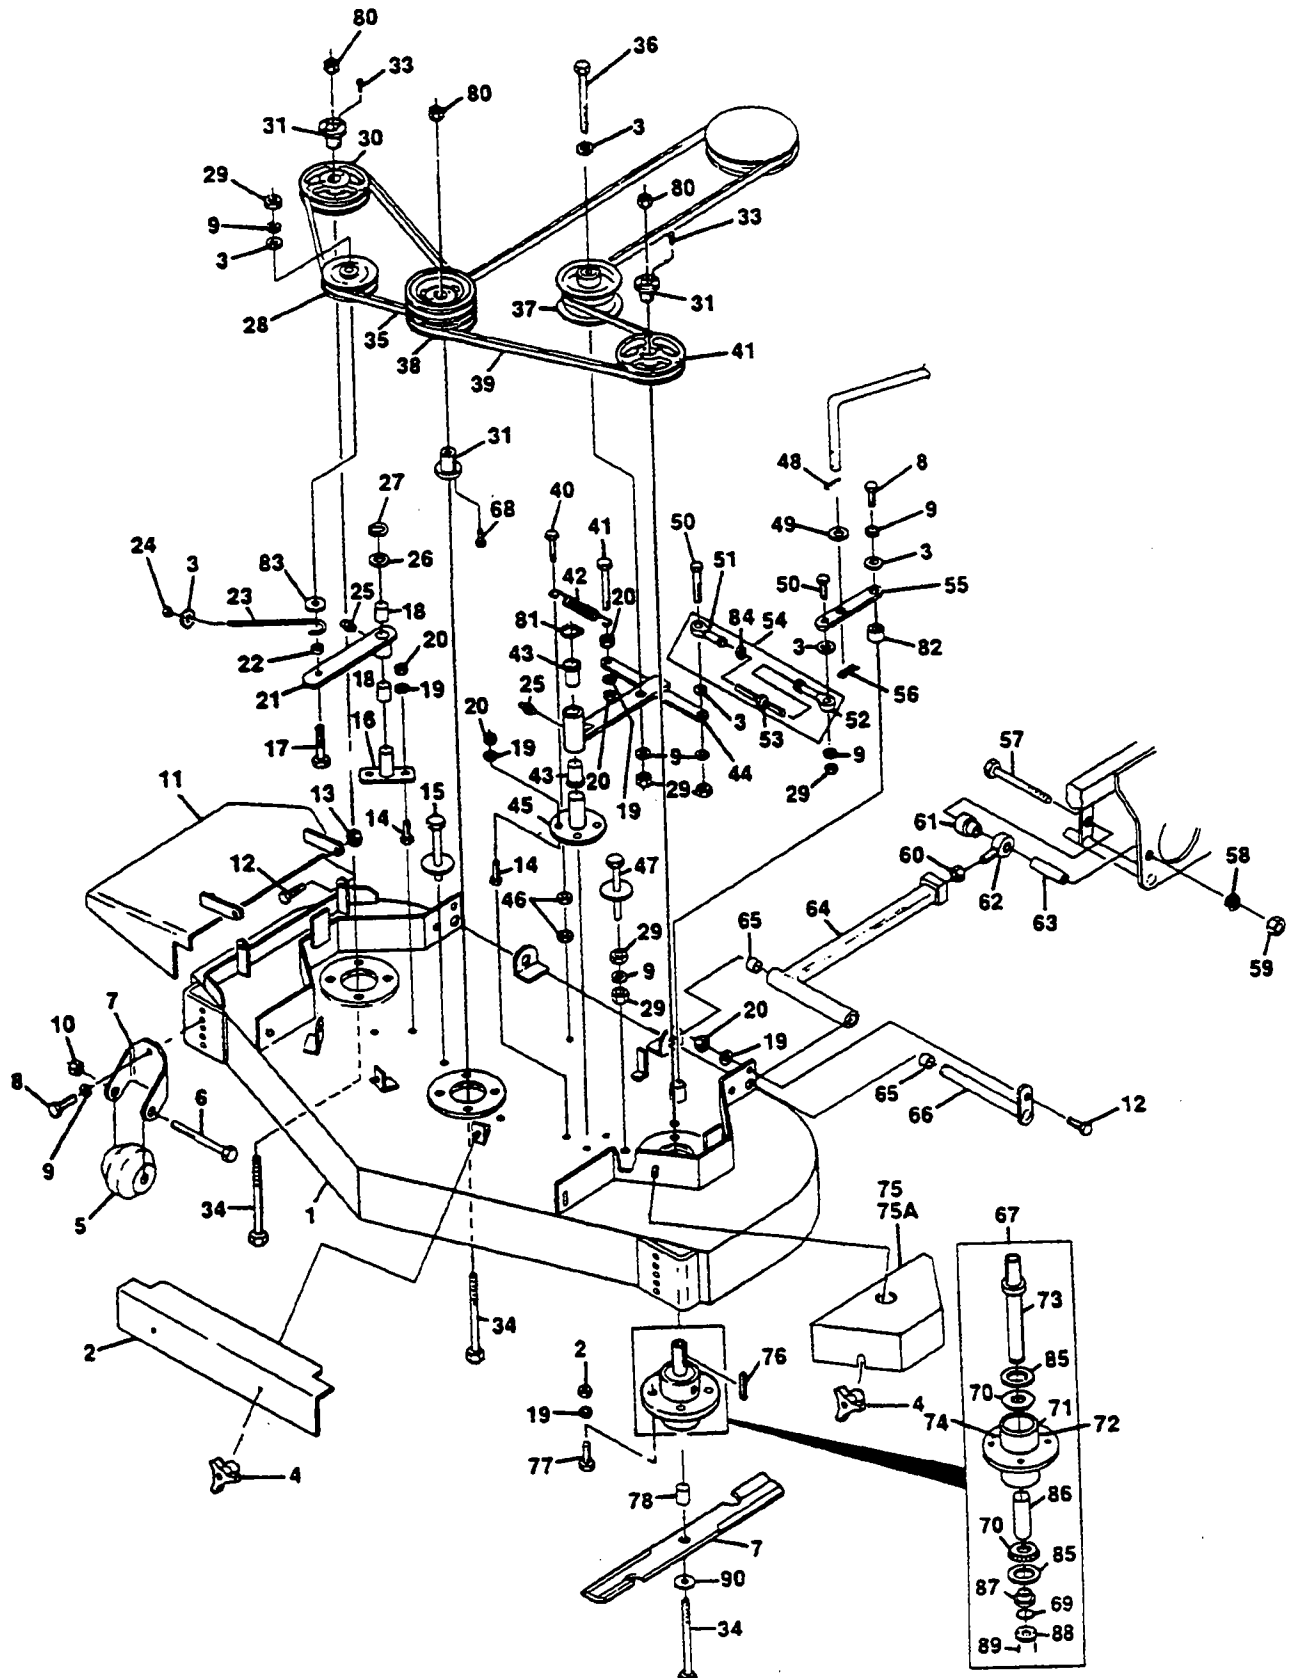


SMZ-61 CUTTER DECK

Ref. No.	Part Number	Description	Ref. No.	Part Number	Description
1	46465	Cutter Deck (Includes decals)	47	45351	Belt Guide
2	42931	Belt Cover - Front	48	*	Cotter Pin, 3/32 x 1"
3	*	Flat Washer, 3/8"	49	*	Flat Washer, 1/2"
4	04029-03	Wing Nut, 3/8-16	50	*	Hex Head Bolt, 3/8-16 x 1-1/4"
5	48584	Anti-Scalp Wheel	51	48464	Ball Joint - RH
6	*	Hex Head Bolt, 5/8-11 x 4-1/2"	52	48544	Ball Joint - LH
7	42882	Anti-Scalp Wheel Bracket	53	48590	Link, Turnbuckle
8	*	Hex Head Bolt, 3/8-16 x 1"	54	46388	Turnbuckle Assembly
9	*	Lockwasher, 3/8"	55	421107	Decutch Link, Cutter Engagement
10	*	Hex Nut, 5/8-11 Elastic Stop	56	04062-01	Hair Pin, 1/8" Dia.
11	45440	Discharge Chute	57	*	Hex Head Bolt, 1/2-13 x 5-1/2"
12	*	Hex Head Bolt, 5/16-18 x 1"	58	*	Lockwasher, 1/2"
13	*	Hex Nut, 5/16-18 Elastic Stop	59	*	Hex Nut, 1/2-13
14	*	Hex Head Bolt, 5/16-18 x 3/4"	60	*	Hex Nut, 5/8-18 UNF
15	45350	Belt Guide	61	43244	Bushing
16	45037	Idler Pivot Base	62	48763	Rod End
17	*	Hex Head Bolt, 3/8-16 x 2-1/4"	63	43243	Spacer
18	48100-05	Bushing	64	46460	Push Arm (Includes 25, 60, 62, & 65)
19	*	Lockwasher, 5/16"	65	48100-06	Bushing
20	*	Hex Nut, 5/16-18	66	45332	Push Arm Shaft
21	46081	Idler Arm (Includes bushings & grease ftg.)	67	46400	Cutter Spindle Assy (Complete, Tapered)
22	43077	Spacer	68	*	Hex Head Bolt, 1/4-20 x 1-1/4"
23	43028	"J" Rod	69	04050-04	Retaining Ring, 1" Ext Inverted
24	*	Hex Nut, 3/8-16 Elastic Stop	70	48668	Bearing & Cup, Tapered Spindle
25	48114-04	Grease Fitting	71	41008	Spindle Housing, Tapered Spindle
26	04041-08S	Flat Washer, 3/4" Special	72	48114-02	Grease Fitting
27	04050-02	Retaining Ring, 3/4" External "E"	73	45391	Spindle Shaft, Tapered Spindle
28	48181	Pulley, Idler	74	48677	Relief Fitting, Tapered Spindle
29	*	Hex Nut, 3/8-16	75	421139	Belt Cover - RH
30	48127	Pulley (Includes items 31 & 33)	75A	421138	Belt Cover - LH
31	48141	Tapered Hub	76	04063-08	Key, 1/4 x 1/4 x 2"
33	*	Hex Head Bolt, 1/4-20 x 3/4"	77	*	Hex Head Bolt, 5/16-18 x 1-1/4"
34	04001-41	Hex Head Bolt, 5/8-11 x 9-1/2"	78	43235	Spacer-Use With Taper Bearing Spindle
35	48265	Belt, RH Blade Drive	79	48111	Cutter Blade
36	*	Hex Head Bolt, 3/8-16 x 3-1/2"	80	*	Hex Nut, 5/8-11
37	48550	Pulley, Idler - Cutter Engagement	81	04050-05	Retaining Ring 1-1/8" Ext. E
38	48128	Pulley, Double (Includes 31)	82	43042	Sleeve, Cam Clutch
39	48752	Belt, Blade Drive	83	04041-12	3/8 Flatwasher, 3/8 x 1-1/2 x .06
40	*	Hex Head Bolt, 1/4-20 x 1-1/4"	84	*	Hex Nut, 3/8-24 UNF
41	48753	Pulley, LH Spindle	85	48681	Seal, Cutter Spindle, Tapered
42	48494-02	Spring, Idler Tension	86	43218	Spacer, Tapered Spindle
43	48100-02	Bushing	87	43217	Bushing, Tapered Spindle
44	46387	Idler Arm (Includes bushings & grease ftg.)	88	43201	1/4" Blade Spacer, Tapered Spindle
45	45329	Idler Pivot Base	89	*	Roll Pin, 1/8 x 1/2"
46	*	Hex Nut, 1/4-20	90	04040-10	Flat Washer 5/8 x .688 x .175 x .134

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

CUTTER DECK CONTROLS

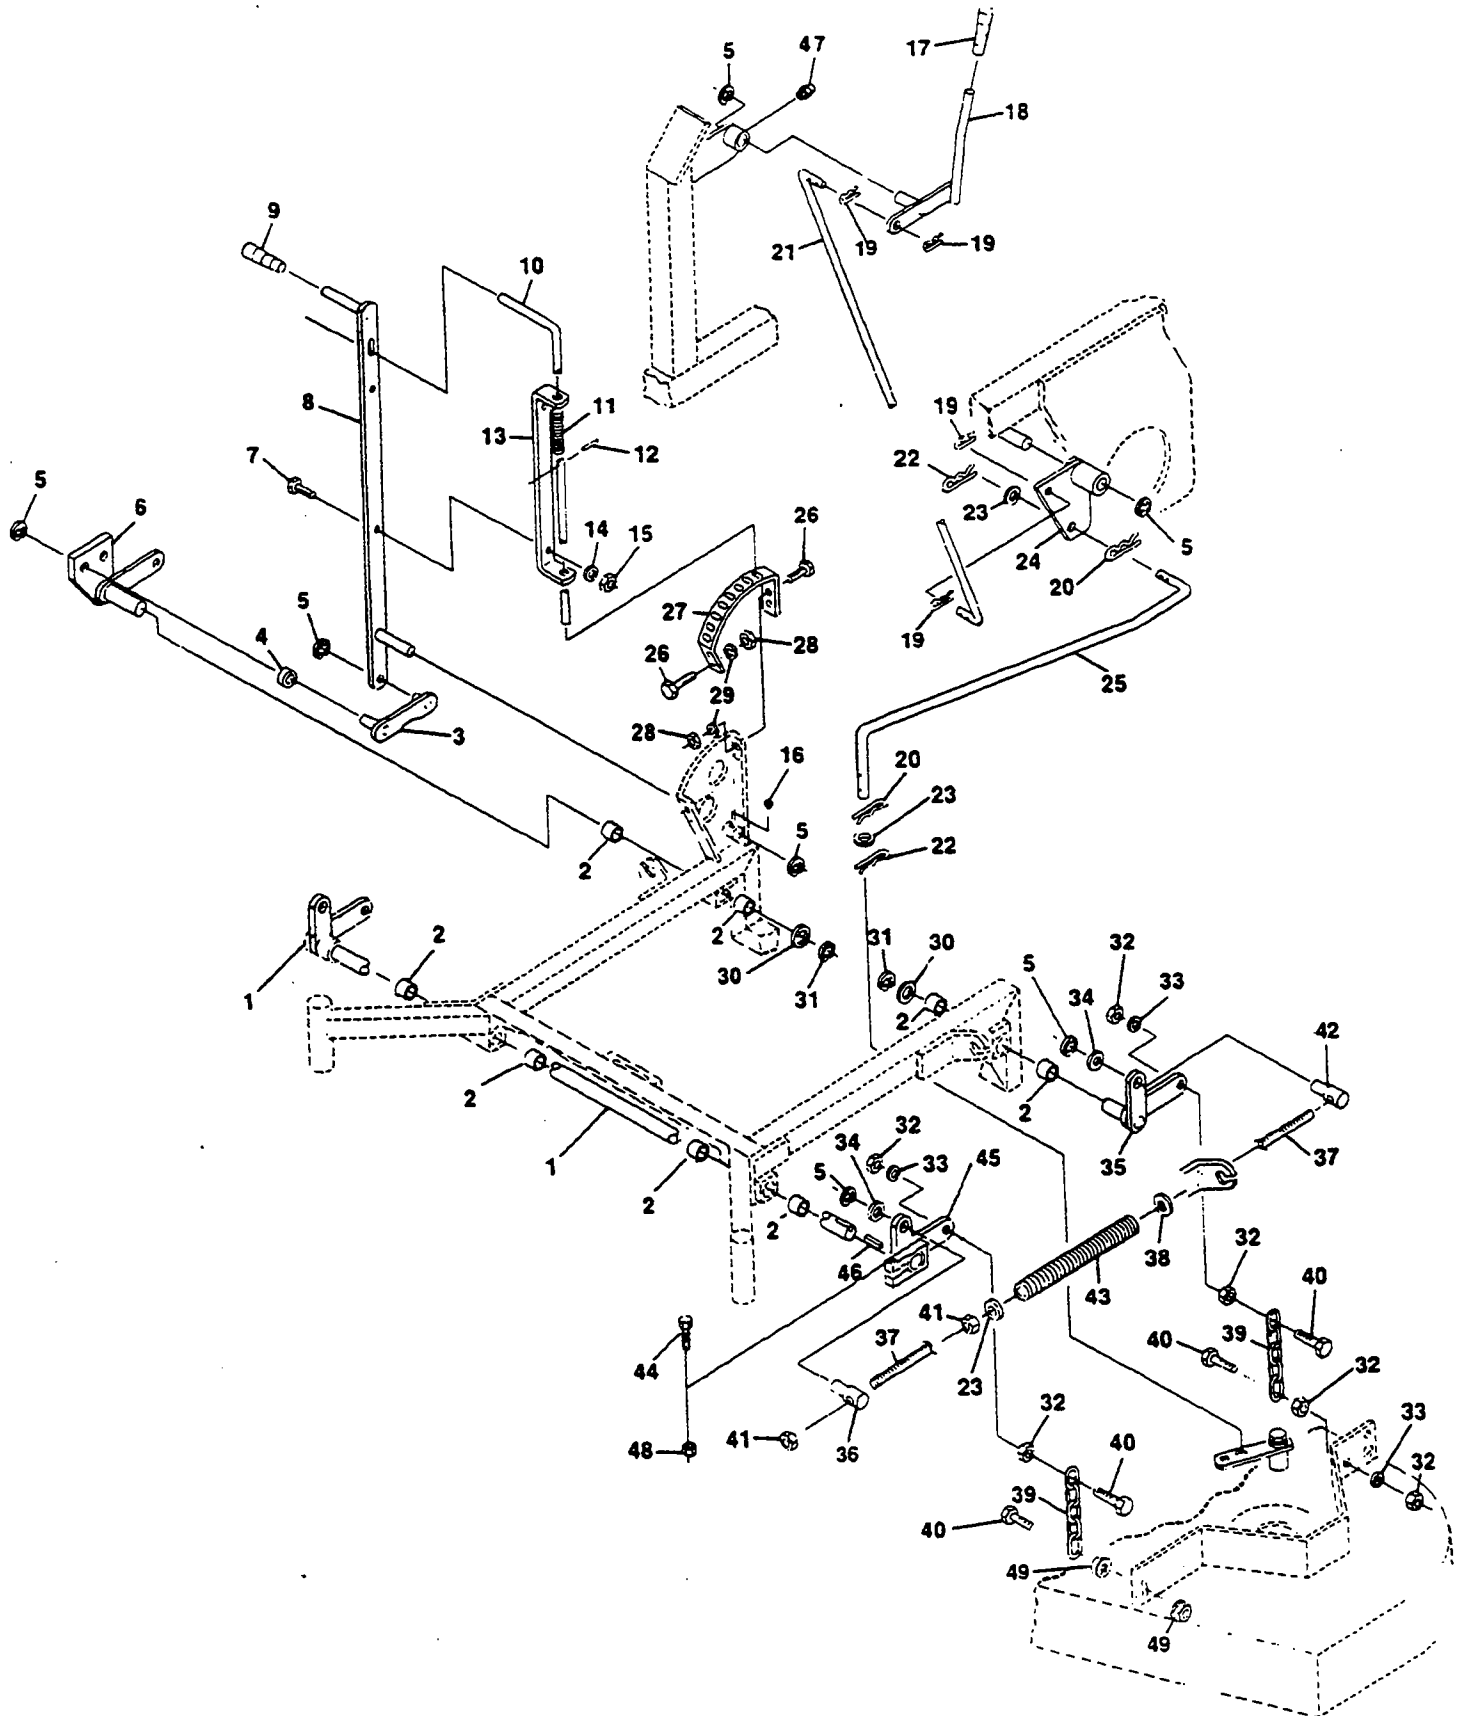


CUTTER DECK CONTROLS

Ref. Part No. Number Description	Ref. Part No. Number Description
1 45426 Lift Arm Weldment	25 44061 Rod, Cutter Engagement - Lower
2 48100-05 Bushing	26 " Hex Head Bolt, 1/4-20 x 3/4"
3 45344 Lift Link	27 42828 Strip, Height Adjustment
4 43180 Bushing	28 " Hex Nut, 1/4-20
5 04050-01 Retaining Ring, 5/8" External "E"	29 " Lockwasher, 1/4"
6 45310 Bellcrank, Lift - Right Rear	30 04041-08S Flat Washer, 3/4 Special
7 " Hex Head Bolt, 5/16-18 x 1"	31 04050-02 Retaining Ring, 3/4" External "E"
8 46384 Height Adjustment Lever (includes grip)	32 " Hex Nut, 3/8-16
9 48093 Grp, Lift Lever	33 " Lockwasher, 3/8"
10 44065 Rod, Cutter Deck Lock	34 " Flat Washer, 5/8"
11 48053 Spring, Deck Lift Index	35 45313 Bellcrank, Lift - Left Rear
12 04060-01 Roll Pin, 5/32 x 3/4"	36 43167 Swivel Joint - RH
13 42887 Lock Rod Guide	37 04004-12 Adjustment Stud
14 " Lockwasher, 5/16"	38 04040-10 Flat Washer, 5/8" ID
15 " Hex Nut, 5/16-18	39 48540 Chain
16 48114-04 Grease Fitting	40 " Hex Head Bolt, 3/8-16 x 1-1/2"
17 48144 Grp, Blade Clutch Lever	41 " Hex Nut, 1/2-13
18 46385 Lever, Cutter Engagement (includes grip)	42 43168 Swivel Joint - LH
19 04062-02 Hair Pin, 1/16" Dia.	43 48546 Spring, Deck Lift
20 04061-01 Cotter Pin, 3/32 x 1"	44 " Hexhead Bolt, 3/8-16 x 2"
21 44060 Rod, Cutter Engagement - Upper	45 45427 Bellcrank, Lift - Left Front
22 04062-01 Hair Pin, 1/8" Dia.	46 04063-17 Key, 3/16 x 3/16 x 1"
23 " Flat Washer, 1/2"	47 48114-05 Grease Fitting
24 45307 Bellcrank, Cutter Engagement	48 " Hex Nut, 3/8-16 Elastic Stop

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

SHEET METAL COMPONENTS

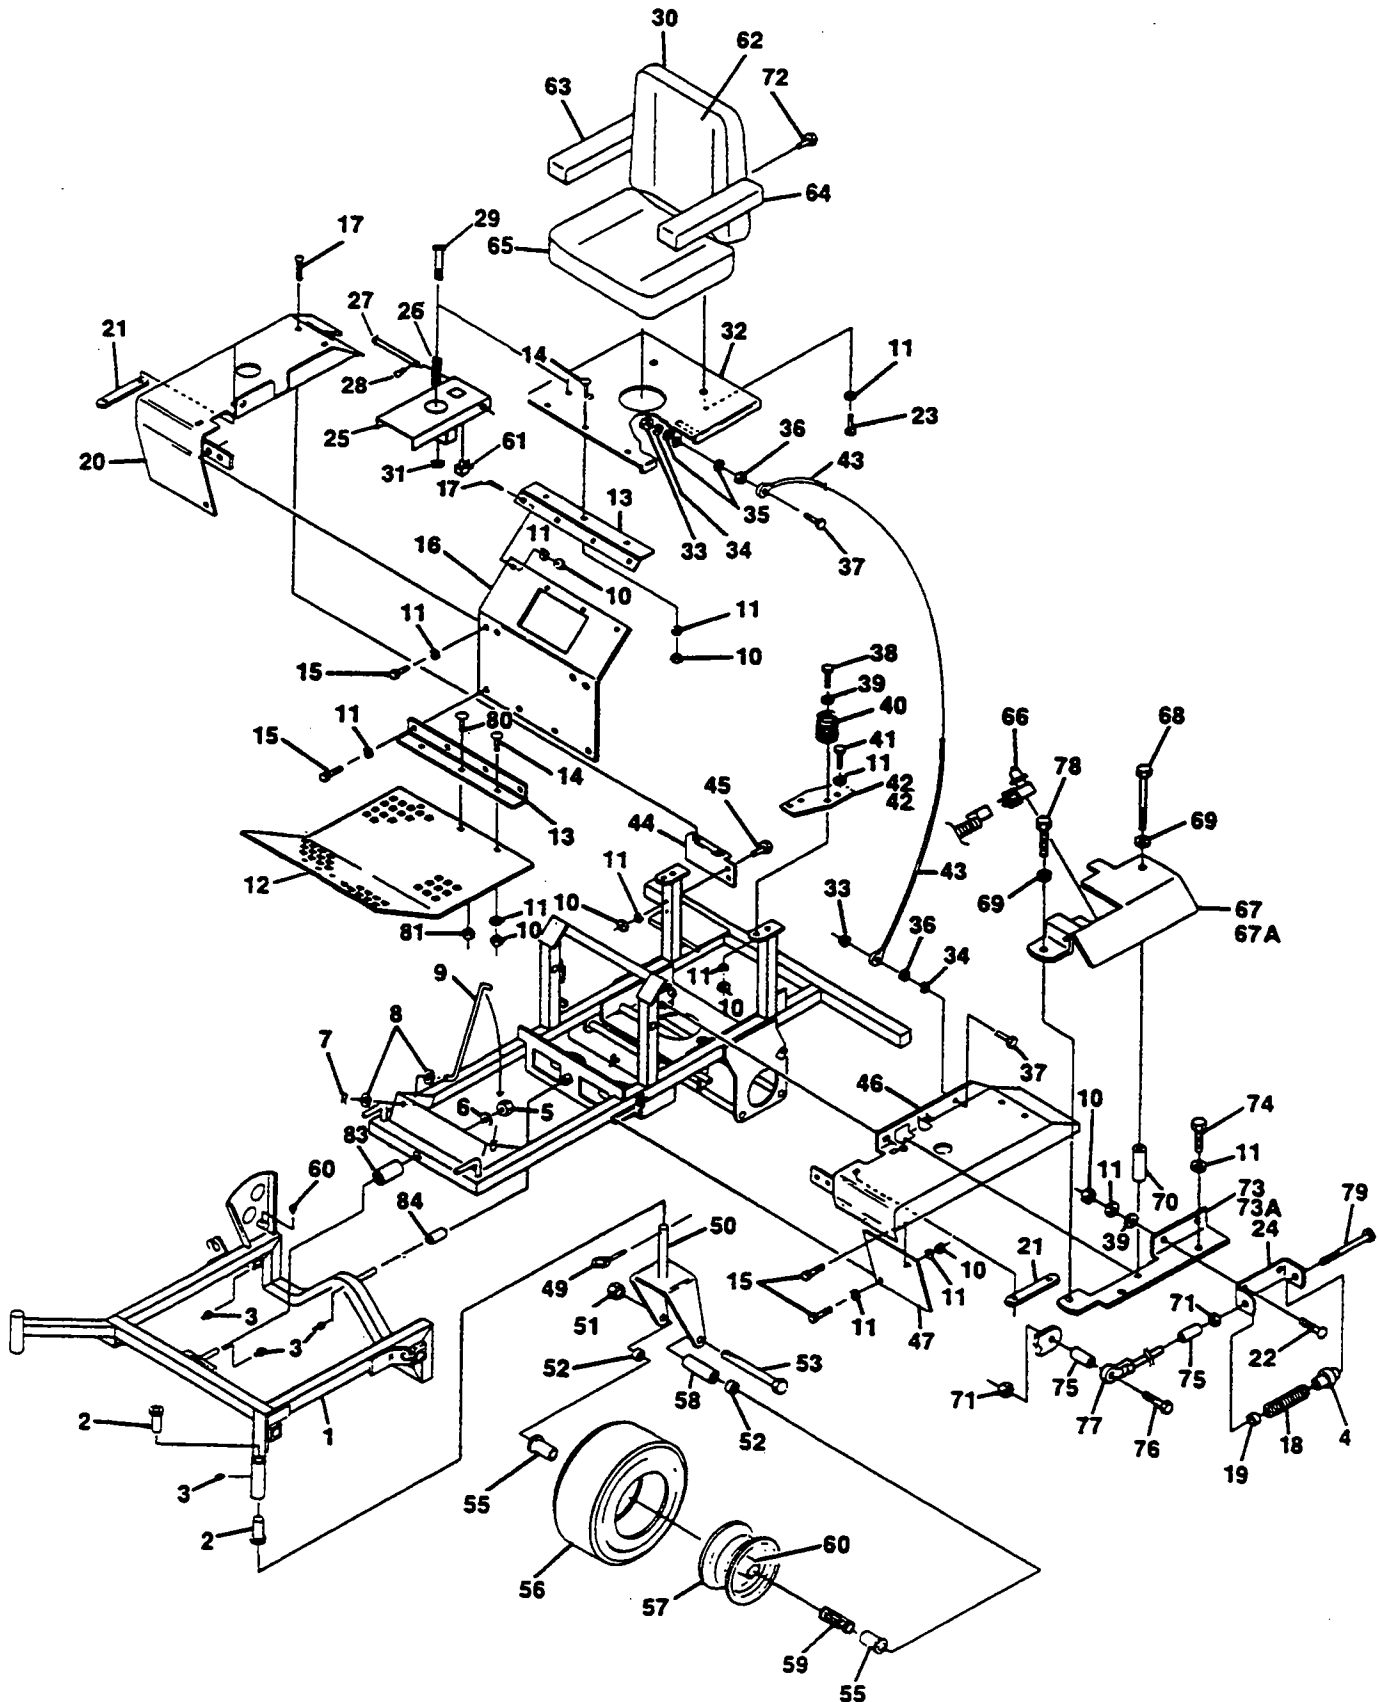

SHEET METAL COMPONENTS

Ref. No.	Part Number	Description	Ref. No.	Part Number	Description
1	46466	Cutter Deck Support Frame Assembly	44	42885	Fender Bracket - RH & LH
2	48100-08	Bushing	45	*	Hex Head Bolt, 5/16-18 x 2-1/2"
3	48114-04	Grease Fitting	46	46469	Fender Assembly - LH (w/decals)
4	43150	Spacer, Long	47	42901	LH Fender Extension
5	*	Hex Nut, 3/4-16 Elastic Stop	48	46392	Caster Wheel Assembly, Complete
6	*	Flat Washer, 3/4"	49	04066-01	Quick Pin
7	04062-02	Hair Pin, 1/16" Dia	50	45325	Caster Wheel Yoke
8	*	Flat Washer, 3/8"	51	*	Hex Nut, 1/2-13 Elastic Stop
9	44062	Rod, Foot Plate Latch	52	43041	Spacer
10	*	Hex Nut, 5/16-18	53	*	Hex Head Bolt, 1/2-13 x 6-1/2"
11	*	Lockwasher, 5/16"	54	48537	Wheel Assembly, Complete
12	42764	Foot Plate	55	48006-07	Retainer
13	48547	Hinge	56	48537-02	Tire Only
14	*	Carriage Bolt, 5/16-18 x 3/4"	57	48537-03	Rim Only
15	*	Hex Head Bolt, 5/16-18 x 3/4"	58	43022	Sleeve
16	421174	Kick Plate	59	48006-06	Roller Bearing
17	*	Carriage Bolt, 5/16-18 x 1"	60	48114-05	Grease Fitting
18	48746	Neutral Return Spring	61	48717	Seat Switch
19	43151	Spacer, Short	62	48704-02	Seat Back Cushion
20	46468	Fender Assembly - RH (w/decals)	63	48704-04	Arm Pad - RH
21	42888	Neutral Lock Bar	64	48704-05	Arm Pad - LH
22	04003-04	Carriage Bolt, 5/16-18 x 1"	65	48704-03	Cushion Assembly
23	*	Hex Head Bolt, 5/16-18 x 3/4"	66	48522	Neutral Interlock Switch
24	421148	Retainer, Neutral Spring	67	421136	RH Neutral Lock Bracket
25	45405	Seat Switch Bracket	67a	421137	LH Neutral Lock Bracket
26	48463	Spring	68	*	Bolt, Hex Head, 5/16-18 x 2 3/4"
27	04064-04	Clavis Pin	69	*	Flat Washer, 5/16"
28	04062-02	Hair Pin Cotter	70	43242	Spacer, Neutral Lock Bracket
29	*	Hex Head Bolt, 5/16-18 x 3-3/4"	71	*	Hex Nut, 3/8-24 UNF
30	48704	Seat	72	48704-06	Hex Head Screw w/Washer, 1/4-20 x 3/4"
31	*	Hex Nut, 5/16-18 Elastic Stop	73	421146	LH Neutral Control Mounting Bracket
32	45404	Seat Base	73a	421147	RH Neutral Control Mounting Bracket
33	*	Hex Nut, 1/4-20 Elastic Stop	74	*	Bolt, Hex Head, 3/8-16 x 3/4"
34	*	Lockwasher, 1/4"	75	43240	Spacer Neutral Spring
35	*	Flat Washer, 1/4"	76	*	Hex Head Bolt, 3/8-16 x 2 1/4"
36	*	Hex Nut, 1/4-20	77	48464	Bail Joint, Neutral
37	*	Hex Head Bolt, 1/4-20 x 1"	78	*	Hex Head Bolt, 5/16-18 x 3/4"
38	*	Hex Head Bolt, 5/16-18 x 1-1/4"	79	48512	Hex Head Bolt, 3/8-24 x 6 3/4" Special
39	*	Flat Washer, 5/16"	80	*	Carriage Bolt, 5/16-18 x 1/2"
40	48686	Seat Spring	81	*	Center Lock Nut, 5/16-18
41	*	Hex Head Bolt, 5/16-18 x 1"	82	*	Hex Nut, 3/8-24
42	42919	Oil Cooler Mounting Bracket - LH	83	48100-09	Bushing
42a	42920	Oil Cooler Mounting Bracket - RH	84	48100-10	Bushing
43	48716	Cable, Seat Stop			

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

This diagram illustrates the assembly of a mechanical system, likely a hydraulic or pneumatic circuit. The components are numbered 1 through 51. The assembly includes:

- Fluid Reservoirs:** A large rectangular tank (28) and a smaller cylindrical tank (35).
- Pumps/Motors:** Two cylindrical units (1 and 2) and a motor/pump unit (20).
- Valves and Actuators:** Various control components, including solenoid valves (e.g., 38, 40) and actuators (e.g., 12, 13, 14).
- Connectivity:** A network of hoses (e.g., 15, 18, 29, 30) and fittings (e.g., 7, 8, 9, 10, 11, 12, 13, 14, 16, 17, 18, 19, 21, 22, 23, 24, 25, 26, 27, 31, 32, 33, 34, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51) connecting the various components.
- Structural Elements:** A base plate (32) and various mounting brackets and supports.

The diagram shows the spatial arrangement and interconnections of these parts, providing a clear guide for assembly.

HYDRAULIC COMPONENTS

Ref. No.	Part Number	Description	Ref. No.	Part Number	Description
1	48597	Pump, Sundstrand	25	43198	Dip Stick
2	04041-04	Flat Washer (.516 x .937 x .105)	26	48136-04	Hose Clamp
3	*	Lockwasher, 1/2"	27	48352-02	Coupling, 1/4 NPT to 1/4 ID Hose
4	04015-03	Capscrew, Socket Hd., 5/16-18 x 3/4"	28	45309	Oil Reservoir
5	48350-07	Elbow 90 deg., 1-1/16-12 JIC to 3/4-16 "O"	29	48504-05	Hose, 5/8" ID - 16" Long
6	48622	Hose Assembly, Pump Suction	30 SM	48482-10	Hose, 1/4" ID - 14 1/2" Long
7	48353-04	Coupling, 7/8-14 SAE Flare to 5/8 ID Hose	31	48603-01	"O" Ring, 1/8 x 1 ID
8	48350-05	Elbow 90 deg., 7/8-14 JIC to 3/4-16 "O"	32	48599	Oil Manifold
9	48485-01	Elbow 45 deg., 3/4-16 JIC to 3/4-16 "O"	33	48731-02	Pipe Plug, 1/2 NPT Magnetic
10	*	1/4-20 Elastic Stop Nut	34	04015-04	Capscrew, Socket Hd., 3/8-16 x 2"
11	*	Lockwasher, 1/4"	35	48606	Oil Filter
12	48501	Hose Assembly, Pump to Motor	36	48350-08	Elbow 90 deg.
13	*	Hex Head Bolt, 1/4-20 x 3/4"	37	48485-04	Elbow 45 deg., 7/8-14 JIC to 3/4-16 "O"
14	48030-09	Hose Clamp	38 SM	48769	White Motor
15 SM	48482-11	Hose, 1/4" ID - 31 1/2" Long	39	48603-02	"O" Ring, 3/32 x 5/8" ID
16 SM	48485-03	Elbow 90 deg., 7/16-20 JIC to 7/16-20 "O"	40	48603-03	"O" Ring 1/16 x 3/8" ID
17	48353-02	Coupling, 7/8-14 SAE Flare to 1/4 ID Hose	41	48772	E-Z Ride Valve
18	48504-07	Hose, 5/8" ID - 18 1/2" Long	42	*	Hex Head Bolt, 1/4-20 x 1-3/4"
19	48489-04	Elbow 90 deg. 1/8 NPT x 7/16-20 JIC	43	48483-01	Union Tube, 7/16-20
20	48645	Oil Cooler	44	48643	Nipple, Oil Filter
21	*	Hex Head Bolt, 5/16-18 x 3/4"	45	48764	Hose Assembly, E-Z Ride Valve
22	*	Lockwasher, 5/16"	46	48350-04	Elbow 90 deg. 7/16-20 JIC to 9/16-18 "O"
23	*	Hex Nut, 5/16-18	47	*	Screw, Phillips Head, 1/4-20 x 2"
24	48630	Cap, Oil Reservoir	48	*	Hex Nut, 1/4-20 Elastic Stop


* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

SERVICE MANAGER'S NOTES

FOR SERIAL NUMBERS 10000 TO 10075

Item 16 is part number 48485-03, Elbow 45 deg.
Item 15 is part number 48482-09, Hose 1/4" ID - 44" Long
Item 30 is part number 48482-04, Hose 1/4" ID - 10" Long
Item 38 is part number 48439, White motor

TRACTION DRIVE COMPONENTS

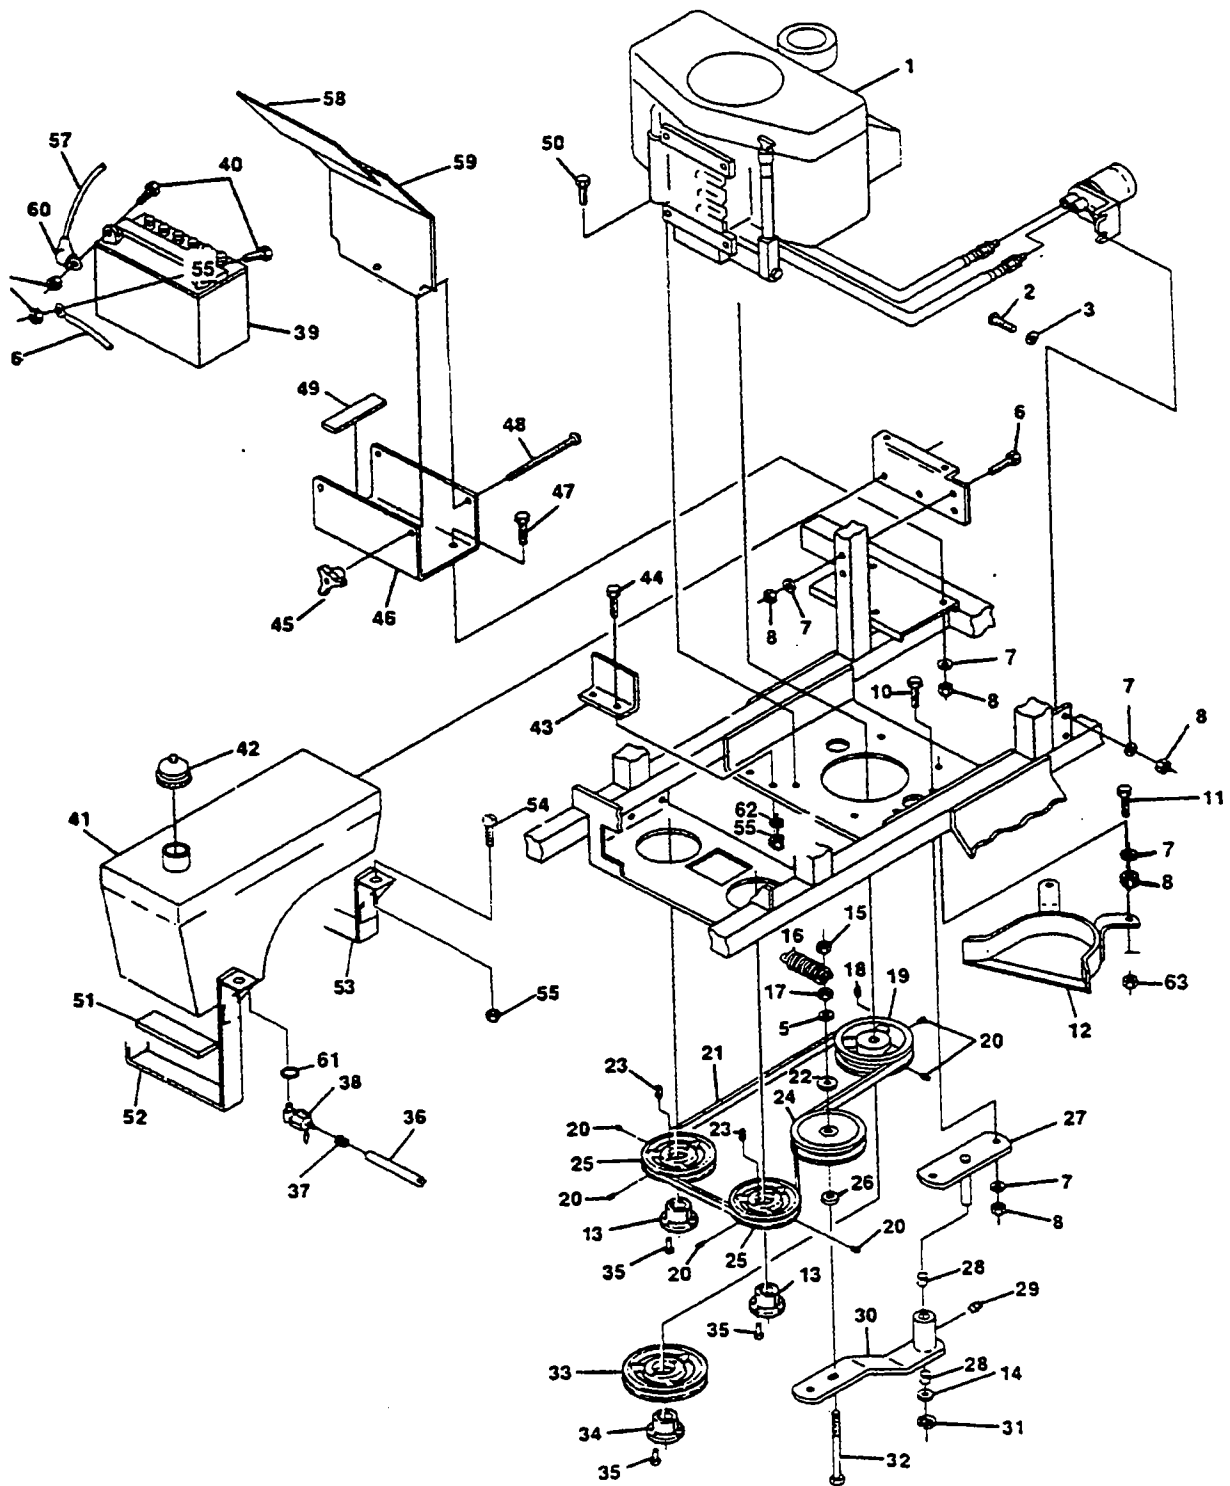

TRACTION DRIVE COMPONENTS

Ref. Part No. Number Description	Ref. Part No. Number Description
1 48558 Engine, 20 HP Kohler	32 04001-81 Hex Head Bolt, 3/8-16 x 3-1/2 Full Thread
2 " Carriage Bolt, 5/16-18 x 1"	33 48378 Pulley, Engine - Cutter Drive
3 " Flat Washer, 5/16	34 48378-03 Hub, Pulley
4 " Hex Head Bolt, 3/8-16 x 1"	35 " Hex Head Bolt, 1/4-20 x 1-3/8"
5 " Lockwasher, 3/8	36 48058-02 Fuel Hose, 10" Long
6 " Hex Head Bolt, 5/16-18 x 2-3/4"	37 48059-01 Clamp, Fuel Hose
7 " Lockwasher, 5/16"	38 48568 Fuel Shut off Valve
8 " Hex Nut, 5/16-18	39 48015 Battery
9 " Center Locknut, 3/8-16	40 " Hex Head Bolt, 1/4-20 x 1/2"
10 " Hex Head Bolt, 5/16-18 x 1"	41 48651 Fuel Tank
11 " Hex Head Bolt, 5/16-18 x 2"	42 48658 Fuel Tank Cap w/Guage
12 45352 Belt Guide	43 42918 Heat Deflector
13 48761 Tapered Hub, 3/4" Bore	44 " Hex Head Bolt, 1/4-20 x 3/4"
14 04041-08S Washer	45 04029-01 Wingnut, 1/4-20
15 " Elastic Stop Nut, 3/8-16	46 42802 Plate, Battery Box
16 48755 Spring, Idler Arm	47 " Hex Head Bolt, 5/16-18 x 3/4"
17 " Hex Nut, 3/8-16	48 " Carriage Bolt, 1/4-20 x 6"
18 04063-11 Key, 1/4 x 1/4 x 2-1/2"	49 48661 Pad, Battery Support
19 48747 Pulley, Engine - Pump Drive	50 " Hex Head Bolt, 5/16-18 x 1-1/2"
20 04012-04 Setscrew, 5/16-18 x 3/8 Hex Socket Head	51 48657 Rubber Pads, Gas Tank
21 48749 Belt, Pump Drive	52 42944 Fuel Tank Strap, Long
22 " Flat, Washer, 3/8"	53 42945 Fuel Tank Strap
23 04063-12 Key, Woodruff #61	54 " Machine Screw, 1/4-20 x 2"
24 48068 Pulley, Idler Pump Drive	55 " Nut, 1/4-20
25 48748 Pulley, Pump Shaft	56 48029-01 Battery Cable, Black 13-3/4"
26 " Flat Washer, 3/8 x 12 ga.	57 48029-02 Battery Cable Red 30-3/4"
27 45212 Idler Pivot	58 48099 Battery Cover Pad
28 48100-05 Bushing	59 42392 Battery Cover
29 48114-04 Grease Fitting	60 48126 Rubber Boot
30 46467 Idler Arm (Includes bushings & grease fig.)	61 " Hex Nut, 1/4-20
31 04050-02 Retaining Ring, 3/4 External "E"	62 " Spring Anchor Bolt, 3/8-16 x 1-3/4"

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

This diagram is an exploded view of a mechanical assembly, likely a vehicle's rear suspension or steering component. The parts are numbered as follows:

- 1**: A rectangular metal bracket or housing.
- 2**: A small circular pin or bolt.
- 3**: A small circular pin or bolt.
- 4**: A small circular pin or bolt.
- 5**: A large circular wheel or tire.
- 6**: A small circular pin or bolt.
- 7**: A vertical metal plate or bracket.
- 8**: A small circular pin or bolt.
- 9**: A small circular pin or bolt.
- 10**: A small circular pin or bolt.
- 11**: A small circular pin or bolt.
- 12**: A small circular pin or bolt.
- 13**: A small circular pin or bolt.
- 14**: A small circular pin or bolt.
- 15**: A small circular pin or bolt.
- 16**: A small circular pin or bolt.
- 17**: A small circular pin or bolt.
- 18**: A small circular pin or bolt.
- 19**: A small circular pin or bolt.
- 19A**: A small circular pin or bolt.
- 20**: A small circular pin or bolt.
- 21**: A small circular pin or bolt.
- 22**: A small circular pin or bolt.
- 22A**: A small circular pin or bolt.
- 23**: A small circular pin or bolt.
- 24**: A small circular pin or bolt.
- 25**: A small circular pin or bolt.
- 26**: A small circular pin or bolt.
- 27**: A small circular pin or bolt.
- 28**: A small circular pin or bolt.
- 29**: A small circular pin or bolt.
- 30**: A small circular pin or bolt.
- 31**: A small circular pin or bolt.
- 32**: A small circular pin or bolt.
- 33**: A small circular pin or bolt.
- 34**: A small circular pin or bolt.
- 35**: A small circular pin or bolt.
- 36**: A small circular pin or bolt.
- 37**: A small circular pin or bolt.
- 38**: A small circular pin or bolt.
- 39**: A small circular pin or bolt.
- 40**: A small circular pin or bolt.
- 41**: A small circular pin or bolt.
- 42**: A small circular pin or bolt.
- 43**: A small circular pin or bolt.
- 43A**: A small circular pin or bolt.
- 44**: A small circular pin or bolt.
- 45**: A small circular pin or bolt.
- 46**: A small circular pin or bolt.
- 47**: A small circular pin or bolt.
- 48**: A small circular pin or bolt.
- 49**: A small circular pin or bolt.
- 50**: A small circular pin or bolt.
- 51**: A small circular pin or bolt.
- 52**: A small circular pin or bolt.
- 53**: A small circular pin or bolt.
- 54**: A small circular pin or bolt.
- 55**: A small circular pin or bolt.
- 56**: A small circular pin or bolt.
- 57**: A small circular pin or bolt.
- 58**: A small circular pin or bolt.
- 59**: A small circular pin or bolt.
- 60**: A small circular pin or bolt.
- 61**: A small circular pin or bolt.
- 62**: A small circular pin or bolt.

BRAKE AND STEERING CONTROLS

Ref. No.	Part Number	Description	Ref. No.	Part Number	Description
1	48597	Pump, Sundstrand	31	48574-03	Pin
2	*	Hex Nut, 3/8-16	32	*	Hex Head Bolt, 5/16-18 x 2"
3	*	Lockwasher, 3/8"	33	48574-04	Washer
4	*	Hex Head Bolt, 3/8-16 x 1-1/4"	34	48574	Brake Lever Assembly, Complete
5	48554	Wheel Assembly	35	48574-05	Equalizer
6	*	Hex Head Bolt, 1/4-20 x 1-1/4"	36	48574-06	Pin
7	45432	Lever, Pump Control	37	48574-07	Clamp
8	*	Hex Nut, 1/4-20 Elastic Stop	38	48574-08	Spacer
9	48554-01	Tire Only	39	48549	Brake Cable - RH
10	48416-04	Rim Only	40	48548	Brake Cable - LH
11	*	Hex Nut, 5/16-18	41	48093	Grip, Control Handle
12	*	Lockwasher, 5/16"	42	45437	Control Handle
13	04041-07	Flat Washer 3/8 (.391 x .938 x .105)	43	45436	Control Lever - RH
14	46388	Turnbuckle Assembly	43a	45435	Control Lever - LH
15	48544	Ball Joint, LH Thread	44	*	Hex Nut, 5/16-18 Elastic Stop
16	48590	Link, Turnbuckle	45	*	Hex Head Bolt, 5/16-18 x 1-1/2"
17	48464	Ball Joint, RH Thread	46	*	Hex Nut, 1/4-20
18	*	Hex Head Bolt, 5/16-18 x 1-3/4"	47 SM	48769	Motor, White
19	45434	Lever, Pump Transfer - RH	48	*	Hex Head Bolt, 3/8-16 x 1"
19a	45433	Lever, Pump Transfer - LH	49	48461	Parking Brake Assembly
20 SM	48813	Spring Lock Nut	50	*	Lockwasher, 1/4
21	04008-01	Serrated Bolt, 1/2-20	51	*	Hex Head Bolt, 1/2-13 x 2-1/2"
22	48100-06	Bushing - LH	52	*	Lockwasher, 1/2"
22a	48100-05	Bushing - RH	53	*	Hex Nut, 1/2-13
23	48114-04	Grease Fitting	54	04063-16	Key, 5/16 x 5/16 x 15/16"
24	421145	Bar Control Lever	55	46332	Wheel Hub Assembly
25	*	Hex Head Bolt, 3/8-16 x 1 1/2"	56	48513	Brake Drum
26	48513	Brake Drum	57	48554	Wheel Assembly
27	*	Hex Head Bolt, 3/8-16 x 1"	58	48554-01	Tire Only
28	42884	Brake Extension Bar	59	48416-04	Rim Only
29	48574-01	Spacer	61	04028-01	Lug Nut, 1/2-20
30	48574-09	Cotter Pin			


* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

SERVICE MANAGER'S NOTES

FOR SERIAL NUMBERS 10000 TO 10075

Item 20 is part number 48680, Hex Castle Nut
A cotter pin (5/32 x 1 1/2") is used for the hex castle nut #48680
Item 47 is part number 48439, White motor

INSTRUMENT PANEL AND ELECTRICAL COMPONENTS

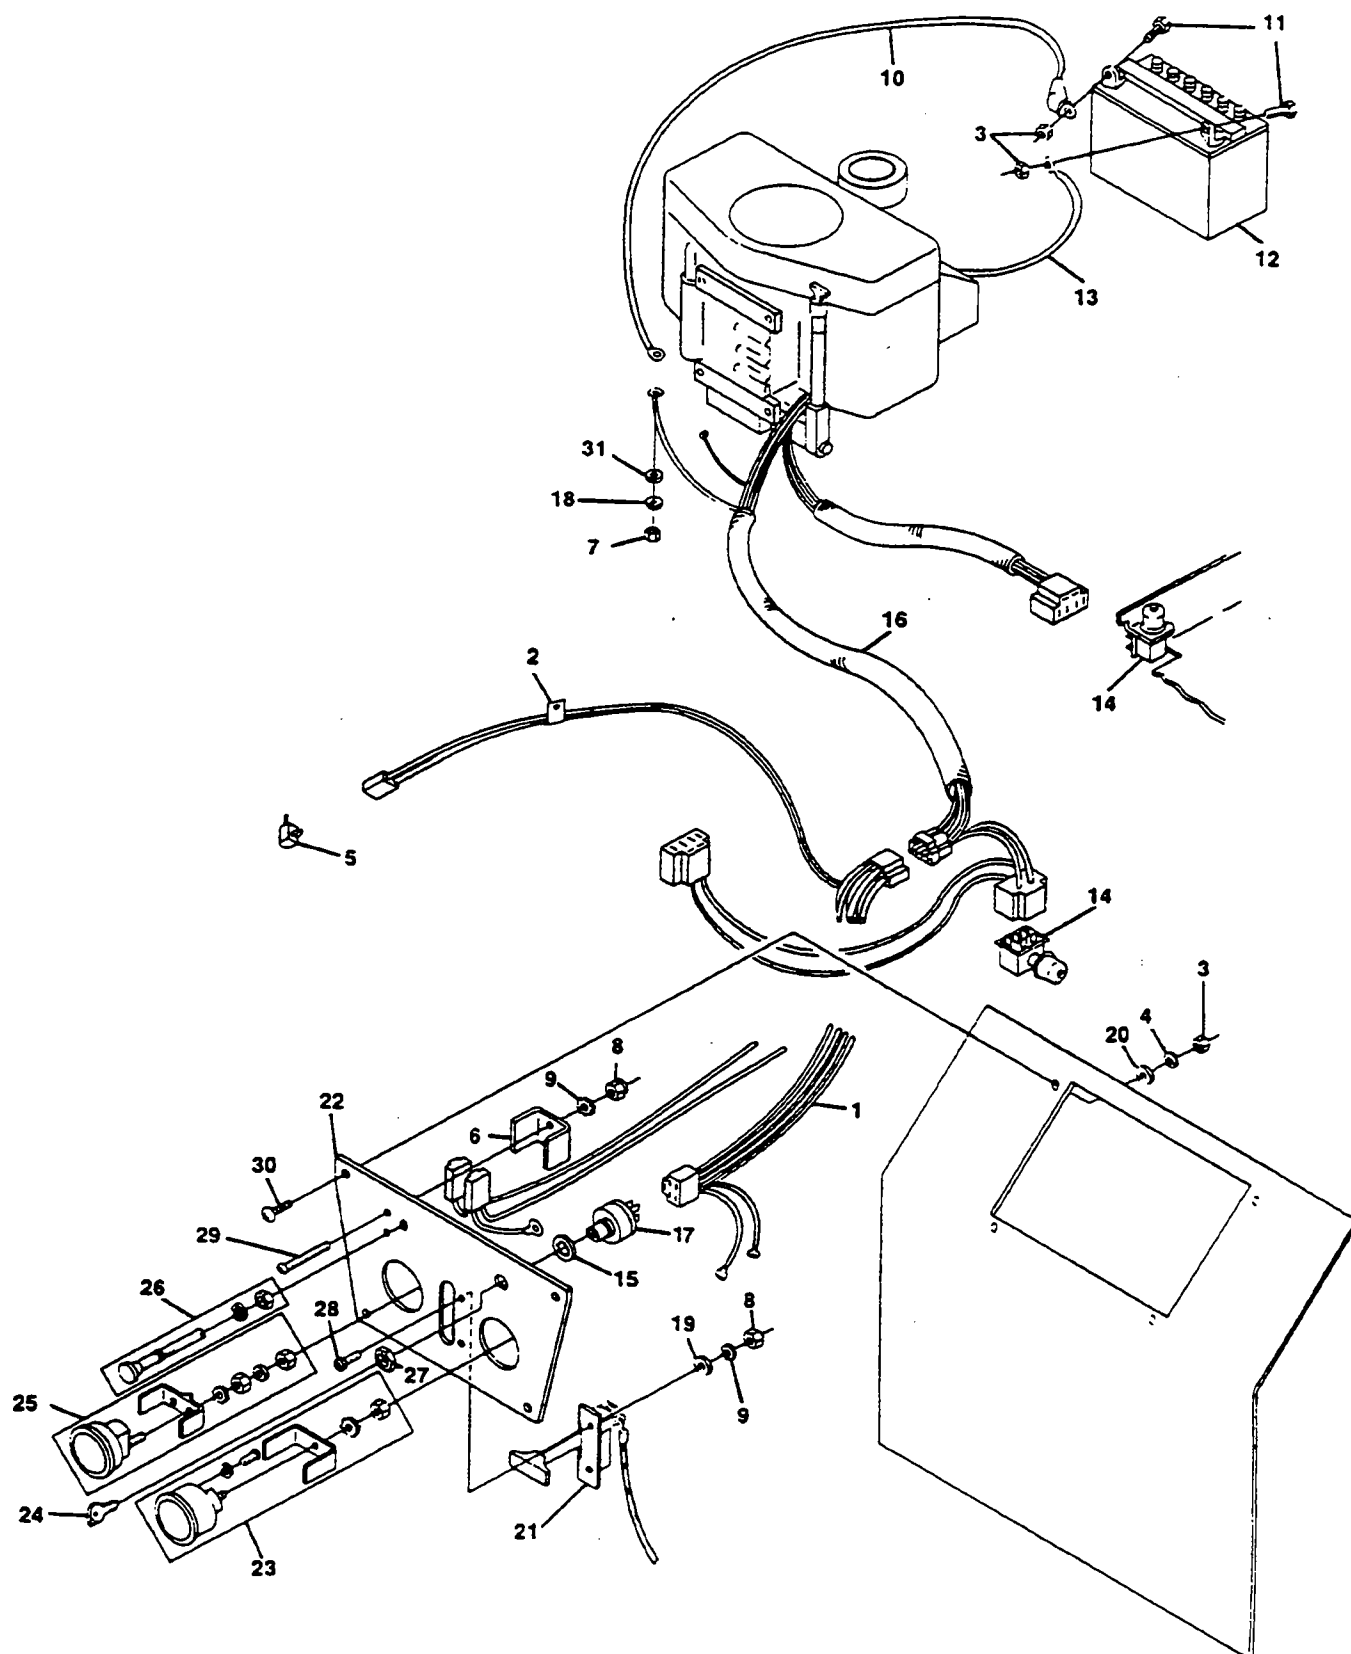


INSTRUMENT PANEL AND ELECTRICAL COMPONENTS

Ref. No.	Part Number	Description	Ref. No.	Part Number	Description
1	48518	Wire Harness, instrument panel	17	48017	Switch, Ignition
2	48030-09	Clamp	18	"	Lockwasher, 5/16"
3	"	Hex Nut, 1/4-20	19	"	Flat Washer #10
4	"	Lockwasher, 1/4"	20	"	Flat Washer 1/4"
5	48717	Switch, Seat	21	48519	Throttle Control
6	42413	Bracket, Fuse Holder	22	42762	Instrument Panel
7	"	Hex Nut, MS-Metric	23	48023	Hourmeter (includes hardware)
8	"	Hex Nut, #10-32	24	48017-02	Ignition Key
9	"	Lockwasher, #10 External Tooth	25	48022	Ammeter (includes hardware)
10	48029-02	Battery Cable - 30-3/4" (Red)	26	48091	Choke Control
11	"	Hex Head Bolt, 1/4-20 x 1/2"	27	48017-04	Hex Nut, 5/8-11
12	48015	Battery	28	"	Screw, Phillips Washer Hd, #10-32 x 1/2"
13	48029-01	Battery Cable - 13-3/4" (Black)	29	"	Screw, Phillips Washer Hd, #10-32 x 1-1/2"
14	48522	Switch, Cutter Deck Engage	30	"	Screw, Phillips Pan Head, 1/4-20 x 3/4"
15	48017-03	Lock Washer, 5/8" Internal Tooth	31	"	Flat Washer, 5/16"
16	48751	Wire Harness - Lower	32	421174	Kick Plate

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

WIRING DIAGRAM

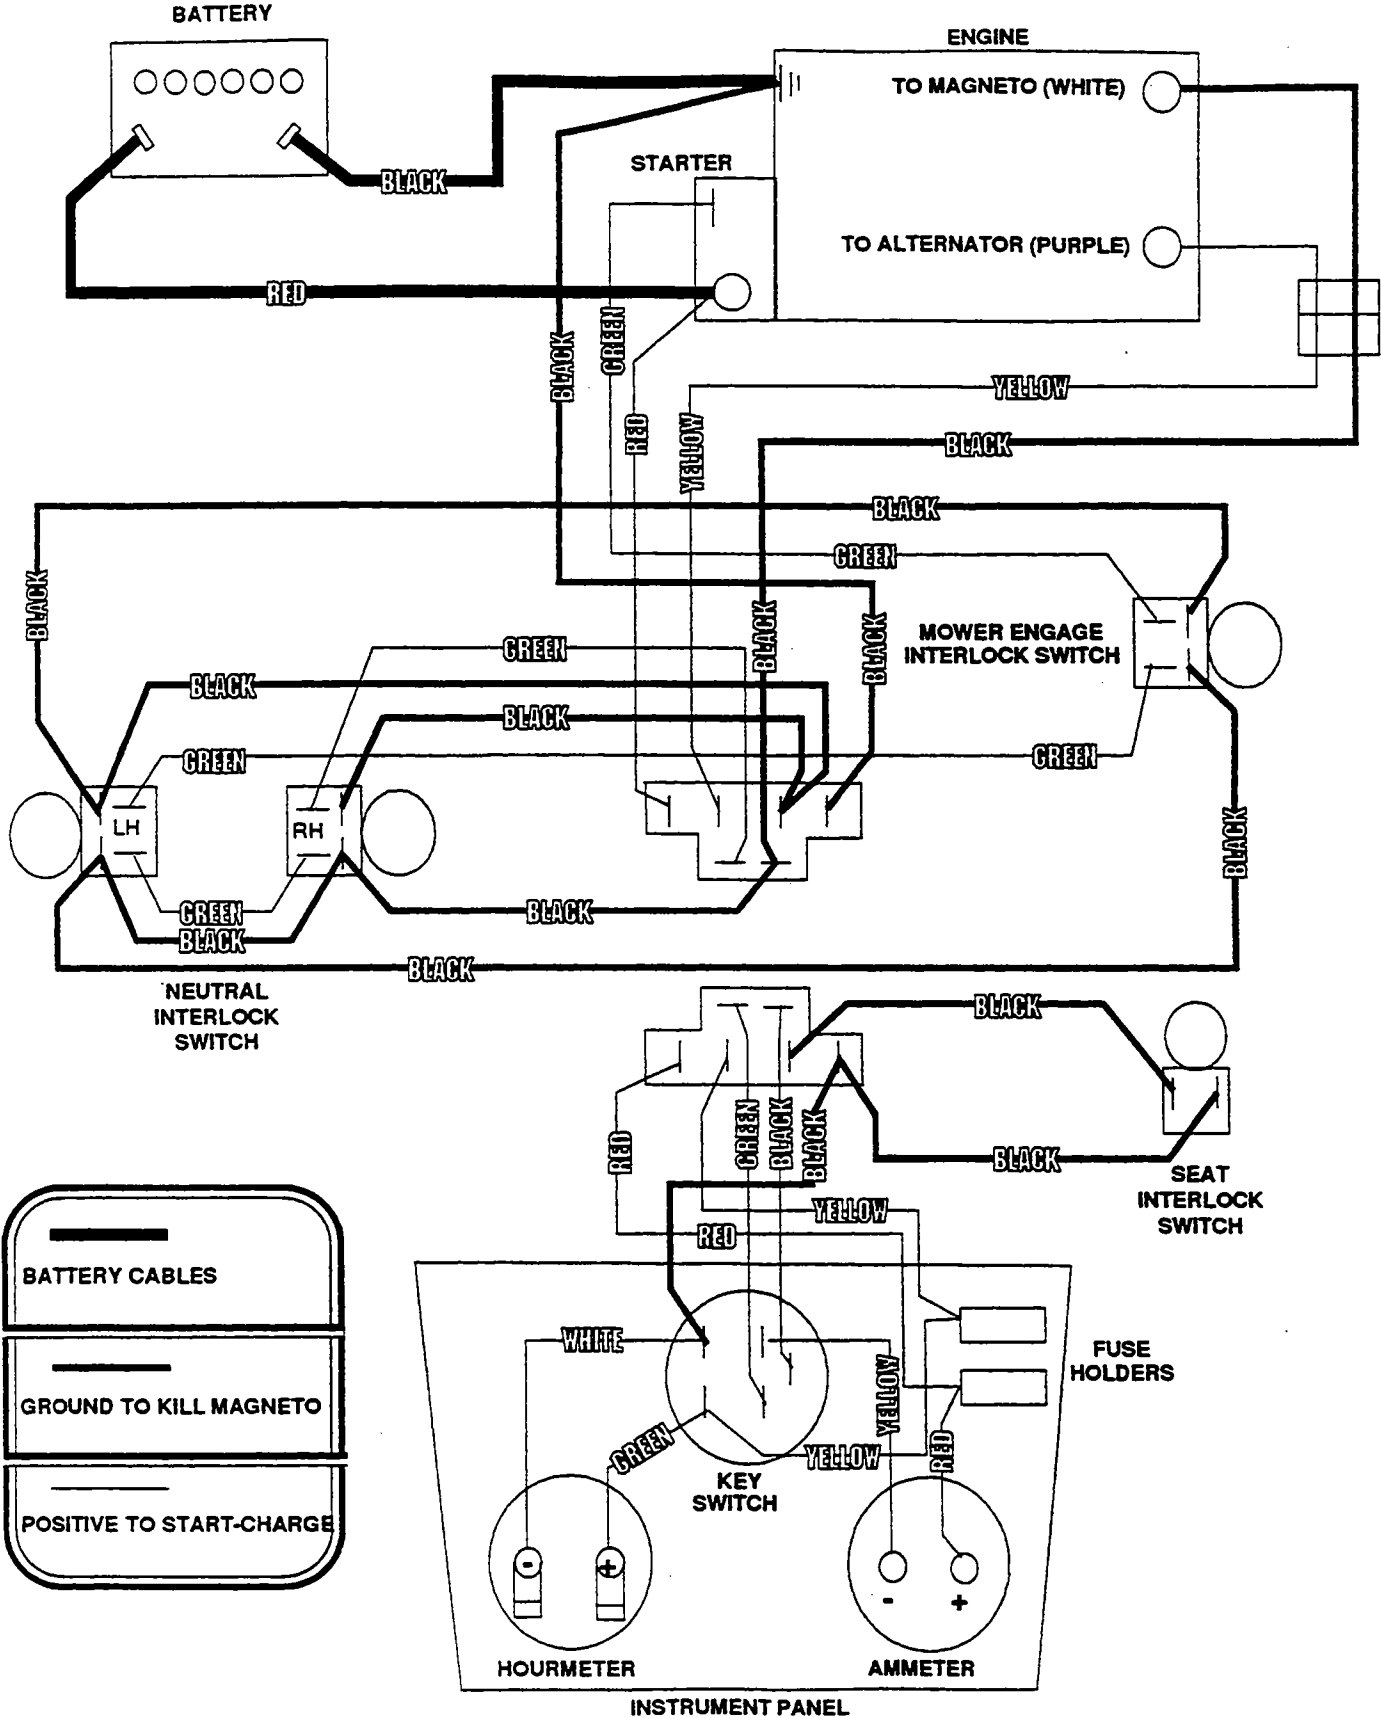

REPLACEMENT DECALS




48520




48555



48623

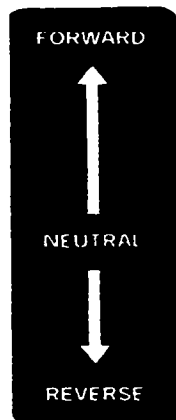


48775

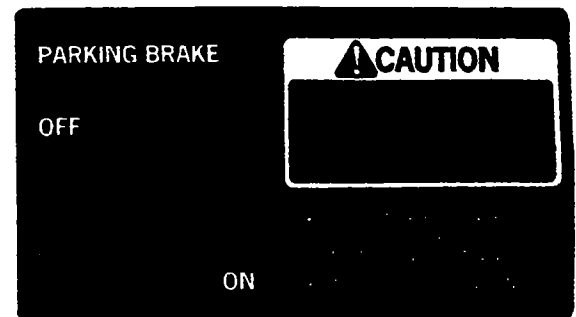


48774



48556

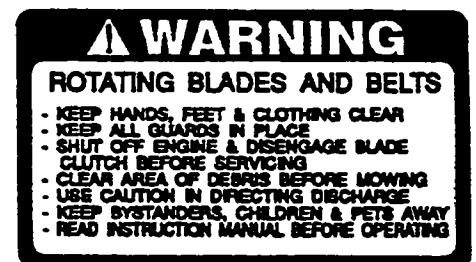

48073

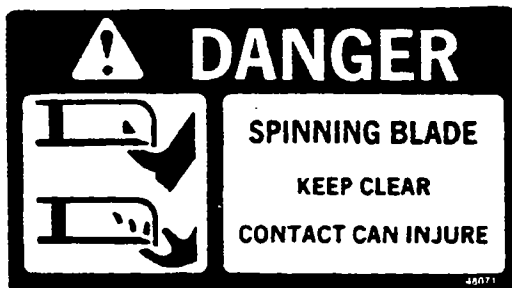

48071



48404



48773



48712



48319



48072